

HANDHELD GARMENT STEAMER

IRH-112



USER MANUAL

Please read these instructions and warranty information carefully before use and keep them handy for future reference.

WARNINGS AND RECOMMENDATIONS

1. Please read the instructions carefully before use and keep them handy for future reference.
2. Before connecting to the Power Supply, check to see if the Rated Voltage of the appliance matches the local Mains Voltage.
3. The user cannot walk away while the product is still connected to the Power Supply.
4. Product repair and replacement must be handled by our Maintenance Department.
5. Avoid touching the Soleplate and other hot area in the unit to prevent burns and injuries or damages to objects.
6. When an abnormality occurs (such as a burning smell or smokes, etc.), stop using it immediately and disconnect the Power Supply to avoid fire and electric shock; then consult our Customer Service.
7. Do not attempt to disassemble the unit or repair it at your own risk. Please send it to the Maintenance Department.
8. Do not iron on buttons or other hard objects to avoid damaging the surface coating of the Soleplate.
9. This product is for household use only. Do not use it other than its intended purposes.
10. When using the steamer ironing flat, must find a sturdy top to work on. A sturdy top is also required when laying down the steamer.
11. If there is a drop, resulted in visible signs of damage or poor contact, the unit can no longer be used.
12. Before cleaning the product, inserting or removing the water tank, be sure to unplug the Power Cord first.
13. Do not let children play with this product.
14. When you leave even for a short time, turn off the product and unplug the Power Cord.
15. Please check the Power Cord regularly for any damages.
16. Do not allow the Power Cord to come into contact with hot vapors when ironing.
17. Do not fill the Water Tank with perfume, detergent, ironing aid or other chemicals.
18. When ironing clothes of different fabrics, can choose high or low volume steam accordingly.

PRODUCT STRUCTURE



FUNCTION KEY AND ICONS EXPLAINED

	“On / Off” and Changing Mode
	Indication light “Flashing” - Preheating Indication light “On” - Standby Mode
	High Volume Steam Operation
	Low Volume Steam Operation
	Water Tank running out of water


OPERATING INSTRUCTIONS

1. Connect the product to the Power Supply, short press “⏻” key, the indication lights of different icons will be turned on and off one by one while the unit is conducting a self-test.
2. The indication light “●” flashes when the product is preheating; when the indication light “●” stopped flashing and is turned on, the Steamer is ready to be used.
3. Short press “⏻” key once to adjust to High Volume Steam Operation, indication light of the “🌀” icon is on.
4. Short press “⏻” key again to adjust to Low Volume Steam Operation, indication light of the “🌀” icon is on.
5. Press “⏻” key again, the indication light “●” will be on and the steam vapor will be off.
6. Press and hold “⏻” key for 2 seconds, the indication light goes off and Steamer is turned off.

⚠️NOTE:

When the Water Tank is running out of water, the pump will make a whistling sound, and the “💧” icon will flash, indicating that the Water Tank is running out of water; fill the Water Tank with water and then short press the “⏻” key to resume normal operation.

TWO WAYS OF IRONING

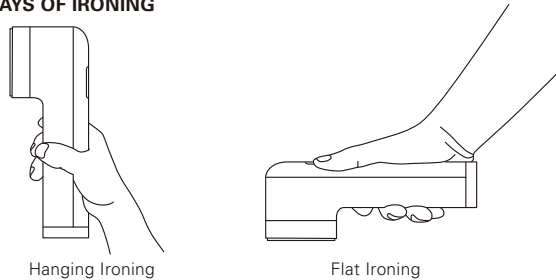

⚠️WARNING

Do not aim at people when using the Steamer to avoid burns by high temperature steam.

CLEANING & MAINTENANCE

After unplugging the Power Cord, wait for the product to cool down first.

1. Wipe the Soleplate and other parts with a soft cloth.
2. When there are heavier stains, do not rinse with water. Wipe with a soft cloth dampened with a mild detergent.
3. If there are white scales (mineral deposit) in the Water Tank, pour a small amount of vinegar into the Water Tank and wait for a few minutes, then wash the Water Tank thoroughly and rinse it a few times with clean water.

TROUBLESHOOTING

For some common problems, please refer to below table for troubleshooting.

If the problem persists, please contact our Customer Service.

Problem \ Area to Check	The Plug	Indication Lights	WaterTank
The Steamer not heating	✓		
The Steamer not turning on	✓		
There is no steam	✓	✓	✓
Troubleshooting	Is it properly plugged in?	Is it in the right position?	Is the Water Tank empty or running out of water?

TECHNICAL SPECIFICATIONS

MODEL	IRH-112
VOLTAGE	230V
FREQUENCY	50Hz
POWER	1200W
PRODUCT DIMENSIONS	(H)230 x (W)50 x (D)90 mm
NET WEIGHT	650 g

注意事項

1. 請在使用前仔細閱讀說明書，並妥善保管以備日後參考。
2. 本產品連接電源前，應檢查說明書標示的電壓是否與當地的電源電壓相同。
3. 在本產品連接電源期間，使用者不能離開。
4. 產品維修更換務必委託本公司的維修中心進行。
5. 使用過程中，應避免燙板和隔熱板等高溫部位接觸身體和不耐熱物體，以免燙傷或損壞物體。
6. 發生異常時（有燒焦、冒煙等）須立即停止使用並關閉電源開關，以免造成火災及觸電；然後向本公司的維修中心查詢。
7. 用戶請不要自行折機維修，應送指定維修中心修理，否則可能造成產品損壞或導致受傷。
8. 不要在鈕扣或其他硬物上熨燙，以免破壞底板表面塗層。
9. 本產品為家用產品，不適用於除此之外的其他用途。
- 10.必須在穩定的表面上使用和擱置。
- 11.如果跌落，有可見的損壞跡象或有接觸不良現象，請勿使用。
- 12.在清潔產品、安裝或拆卸水箱前，請務必先將電源插頭拔掉。
- 13.切勿讓兒童玩耍本產品。
- 14.當您短時間離開時，請關閉產品並拔下電源插頭。
- 15.請定期檢查電源線是否損壞。
- 16.產品工作期間，切勿讓電源線與高溫蒸氣接觸。
- 17.切勿將香水、除垢劑、燙衣劑或其他化學物質注入水箱內，因為本產品不適合這些化學品。
- 18.熨燙不同布料的衣物時，可根據布料選舉大小檔蒸氣。

產品結構



功能鍵及指示燈說明

	開關及功能設定
	指示燈閃爍：預熱中 指示燈常亮：待機狀態
	高檔蒸氣運作
	低檔蒸氣運作
	水箱缺水


使用說明

1. 將產品接駁電源，短按「」，指示燈循環閃爍一次，完成自檢。
2. 指示燈「」閃爍，產品加熱中，待指示燈「」長亮，可以開始使用。
3. 短按「」調整為高檔蒸氣運作，「

⚠注意：

當水箱缺水後，水泵會發出空抽聲，「

熨燙狀態

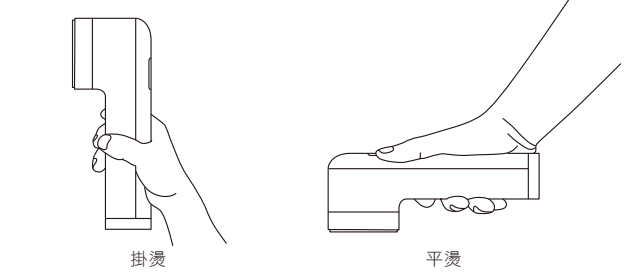

⚠警告：

請勿對準人體，避免高溫蒸氣燙傷。

清潔與保養

關閉電源開關，待產品充分冷卻後：

1. 用軟布擦拭產品底板及其他部份。
2. 出現較嚴重的污漬時，切勿用水沖洗，可用軟布沾中性洗滌劑擦拭。
3. 如果水箱中白色結垢較多時，請在水箱中倒入少量的醋放置幾分鐘，然後將水垢倒出，並用清水反覆清洗幾次。

故障檢修

常見故障處理方法，請參照表格進行檢查，無法處理時請與維修中心聯絡。

故障\檢查部位	插頭	指示燈	水箱
不發熱	✓		
無法開機	✓		
不出蒸氣	✓	✓	✓
處理方法	是否插好？	檔位是否正確？	是否無水或少水？

技術規格

型號	IRH-112
電壓	230V
頻率	50Hz
功率	1200W
產品尺寸	(H)230 x (W)50 x (D)90 mm
淨重	650 g

保用條款

此保用提供德國寶產品之機件在正常使用下壹年保用（自購買日起計算）。

* 貴戶須在購機十天內，以下列其中一種方式向本公司登記資料，保用手續方正式生效：

1) 填寫本公司網頁內之保用登記表格
www.germanpool.com/warranty

2) 填寫保用登記卡，郵寄至本公司。

* This warranty is not valid until customer registration information is received by our Service Centre within 10 days of purchase via one of the following means:

1) Visit our website and register online:
www.germanpool.com/warranty

2) Complete all the fields on the attached Warranty Card and mail it back to our Customer Service Centre.

另請填寫以下表格並與正本發票一併保存，以便維修時核對資料。用戶提供之所有資料必須正確無誤，否則免費保用將會無效。 Please fill out the form below. This information and the original purchase invoice will be required for any repairs. Warranty will be invalidated if information provided is found to be inaccurate.

型號 Model No.:	IRH-112
機身號碼 Serial No.:	發票號碼 Invoice No.:
購買商號 Purchased From:	購買日期 Purchase Date:

1. 未能出示購買發票正本者，將不獲免費維修服務。

2. 用戶應依照說明書的指示操作。本保用並不包括：

 - 上門安裝、檢驗、維修或更換零件之人工以及一切運輸費用；
 - 因天然與人為意外造成的損壞 (包括運輸及其他)；
 - 任何塑膠附件及輔助裝置；
 - 電源接合不當、不依說明書而錯誤或疏忽使用本機所引致之損壞。

3. 於下列情況下，用戶之保用資格將被取消：

 - 購買發票有任何非認可之刪改；
 - 產品被用作商業或工業用途；
 - 產品經非認可之技術人員改裝或加裝任何配件；
 - 機身編號被擅自塗改、破壞或刪除。

4. 總代理有權選擇維修或更換配件。

5. 產品一經被轉讓，其保用即被視作無效。
1. Customer who fails to present original purchase invoice will be disqualified for free warranty.

2. Customer should always follow the operating instructions. This warranty does not apply to:

 - labour costs for on-site installation, check-up, repair, replacement of parts and other transportation costs;
 - damages caused by accidents of any kind (including transport and others);
 - plastic parts and accessories;
 - operating failures resulted from incorrect voltage, improper operations and unauthorized installations or repairs.

3. This warranty is invalid if:

 - purchase invoice is modified by unauthorized party;
 - product is used for any commercial or industrial applications;
 - product is repaired or modified by unauthorized personnel, or unauthorized parts are installed;
 - serial number is modified, damaged or removed from the product.

4. German Pool will, in its discretion, repair or replace any defective part.

5. This warranty will be void if there is any transfer of ownership from the original purchaser.

客戶服務及維修中心

中國香港	中國澳門	Hong Kong, China	Macau, China
九龍灣啟業道1-3號	澳門俾利喇街145號	10/F, Kowloon Godown	3/F, Edifício Industrial Pou Fung,
九龍貨倉10樓	寶豐工業大廈3樓	1-3 Kai Hing Road, Kowloon Bay,	145 Rua de Francisco Xavier Pereira,
電話：+852 2333 6249	電話：+853 2875 2699	Kowloon, Hong Kong	Macau
傳真：+852 2356 9798	傳真：+853 2875 2661	Tel : +852 2333 6249	Tel : +853 2875 2699
電郵：repairs@germanpool.com		Fax : +852 2356 9798	Fax : +853 2875 2661
		Email : repairs@germanpool.com	

此保用只適用於香港及澳門 | This warranty is valid only in Hong Kong and Macau