

Microwavable Stainless Steel Containers

Quick User Guide

GERMAN POOL

Please follow these guidelines for proper usage.

WARNING!

After heating, the product will become very hot, please use pot holder or oven mittens when retrieving product from the oven to avoid getting scalded.

Microwave Heating

- DO NOT place the lid in the microwave oven, and DO NOT use aluminum foil or plastic wrap to cover the product during heating.
- DO NOT allow the product to come in touch with metal object or the oven wall to avoid causing sparks.
- DO NOT put other containers in the microwave oven when heating this product.
- DO NOT use this product with microwave power over 1000W (medium power) and heating time over 5 minutes.
- This product is not suitable for use with Microwave Grill function.
- DO NOT heat empty product in the microwave oven.
- DO NOT use this product to microwave popcorn, caramelized sugar or sugar syrup.

Oven Heating

- DO NOT place the product lid in the oven.

Induction Cooker Heating

- Remove the product lid when using induction cooker.
- Only suitable for reheating food over low heat.
- DO NOT use the product as a cooking utensil for high heat cooking with oil.

Note:

- This product can be used for storing food in the refrigerator or freezer. Keep the lid away from heat sources.
- For food with liquid, DO NOT fill to above 70% of the product. Leave ample space in case the food expands after freezing. It is recommended to let the product defrost in ambient temperature 2-3 minutes before opening the lid.
- DO NOT drop this product or apply external impact in order to avoid causing dents.
- DO NOT cut food on this product, or use abrasive cleansers or scouring pad to clean this product to avoid causing scratches.
- This product may take 2-3 times longer than glass or plastic containers to heat up in the microwave oven, therefore the food may come out dryer. It is recommended to add a suitable amount of water into the food before microwaving.

Customer Service & Repair Centre

Hong Kong

Unit B, G/F, Sunshine Kowloon Bay
Cargo Centre, 59 Tai Yip Street,
Kowloon, Hong Kong
Tel : +852 2773 2888
Fax : +852 2356 9798
Email : repairs@germanpool.com

Macau

A, 1 Andar, Mei Kui Kuong
Cheong Fase 2, No.515 Avenida
Do Conselheiro Borja Macau
Tel : +853 2875 2699
Fax : +853 2875 2661



可微波 不銹鋼保鮮盒 快速使用指南

GERMAN POOL

請遵循以下指示正確使用本產品。

⚠ 警告！

產品加熱後，盒身會變得很熱，取出時必須使用隔熱手套或隔熱墊，以免燙傷。

微波爐加熱

- 只有盒身可放入微波爐中使用，嚴禁放入上蓋；嚴禁使用鋁箔或保鮮膜等物品覆蓋容器加熱。
- 嚴禁盒身接觸爐內的金屬材質或爐壁，以避免產生火花。
- 嚴禁在微波爐中同時與另一個容器一起使用。
- 確保微波加熱功率為1,000W（中火）或以下，及加熱時間在5分鐘之內。
- 嚴禁使用微波燒烤功能。
- 嚴禁在微波爐中使用空的不銹鋼容器。
- 嚴禁使用本產品在微波爐中製作爆谷、融化糖或糖漿。

焗爐加熱

- 只有盒身可放入焗爐中使用，嚴禁放入上蓋。

電磁爐加熱

- 只有盒身可放在電磁爐上使用，嚴禁使用上蓋。
- 僅適用於以小火翻熱食物。
- 嚴禁將盒身當作鍋具，以大火及油烹調食物。

注意：

- 本產品可存放食物於冰箱或冷凍庫中，上蓋請勿靠近熱源。
- 放入冷凍庫前，含有豐富水份的固體食物或液體，切勿超過約7分滿，需預留空間以防食物冷凍後體積膨脹。建議在室溫下解凍2-3分鐘後才打開盒蓋。
- 保鮮盒請避免高處掉落或外力撞擊，任何外力擠壓、撞擊或掉落皆可能造成本產品凹陷變形。
- 請勿直接在產品上切割食物或使用粗糙顆粒之清潔劑、銅絲刷或研磨刷擦洗本產品，以免刮傷產品。
- 使用微波爐加熱時間可能比玻璃或塑料容器長2-3倍，有可能令食物可變得較乾，建議為食物先加入適當水份。

客戶服務及維修中心

香港

九龍大業街59號
三湘九龍灣貨運中心地下B室
電話：+852 2773 2888
傳真：+852 2356 9798
電郵：repairs@germanpool.com

澳門

澳門青洲大馬路(青洲新路)
515號美居廣場第二期1樓A座
電話：+853 2875 2699
傳真：+853 2875 2661

