

3-In-1 SlimTower Air Purifier Heater & Fan

EFB-P20H



Online Warranty Registration



Please read these instructions and warranty information carefully before use and keep them handy for future reference.

USER MANUAL

Please register your warranty information now!

For Warranty Terms & Conditions,
please refer to the last page of this user manual.

請即進行保用登記!

有關保用條款細則，請看本說明書最後一頁。

Tables of Contents

Safety Instructions	4
Product Structure	5
Getting Started	6
Operating Instructions	7
Cleaning & Maintenance	12
Troubleshooting	14
Technical Specifications	14
Warranty Terms & Conditions	27

Safety Instructions




Warnings!

When using electrical appliances, basic precautions should always be followed to reduce the risk of fire, electrical shock and injury to persons, including the following:

- This product is only suitable for indoor use and should not be used outdoors.
- Non-professional personnel or unauthorized repair personnel may not repair or modify the machine by themselves.
- Before plugging in the power supply, please check if the rated voltage matches the voltage in your home.
- Keep at least 1.5 meters away from fire source or tinder, and avoid direct sunlight.
- It is forbidden to be used near objects that are flammable, explosive, subject to heat, deformation, discoloration or deterioration. It is forbidden to use in places with severe dust.
- It is forbidden to replace the power switch by the method of plugging (unplugging) the power cord plug.
- To avoid overheating, it is forbidden to cover the heater.
- It is strictly forbidden to insert any wire or other foreign matter into any hole in the machine to avoid electric shock.
- Do not use the heater against the power outlet or under the power outlet; The power outlet should be placed behind the fan when the heater is in use.
- Do not share the socket with other high-power appliances.
- Do not use this heater around the bathtub, spray head or swimming pool.
- This product must be equipped with a CE-approved fixed socket that is consistent with the rated working current. Do not use a mobile multi-purpose socket.
- Fire risk when the heater is covered or incorrectly placed. Do not use programmer or timer that can be automatically connected to the power supply.
- If the heater fails, please turn off the power and unplug the power cord immediately.
- Before use, check the power cord and the plug. If the power cord is damaged, in order to avoid danger, the user must not disassemble or replace the power cord. It must be replaced by the manufacturer's maintenance department or a similar professional.
- Children, elderly people or patients who have lost their ability to take care of themselves should use this appliance under the supervision of an adult to prevent accidents.

Product Structure

This product uses PTC heating, sends heat by hot air, which can quickly raise room temperature. It has no open flame; thereby it is safe, efficient and energy-saving.

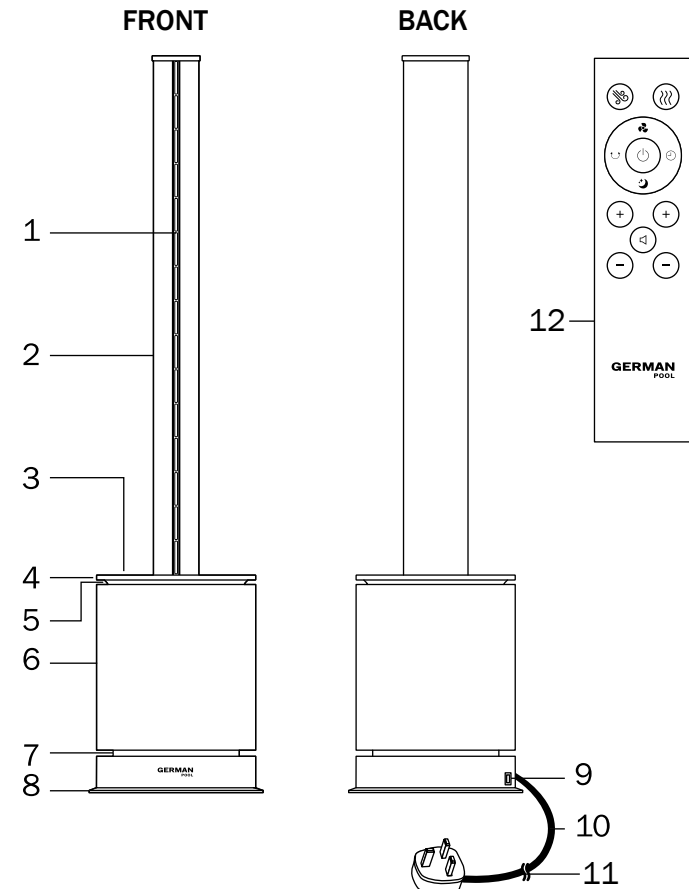


- | | |
|------------------|--------------------|
| 1. Air Outlet | 7. Air Inlet |
| 2. Air Duct | 8. Base |
| 3. Control Panel | 9. Power Switch |
| 4. Top Cover | 10. Power Cable |
| 5. Air Inlet | 11. Three-pin plug |
| 6. Body | 12. Remote Control |

Getting Started

Location

- Please place the fan in a level position. Avoid putting it on a slope or soft surface to prevent the fan from falling over.
- Please do not use it in high temperature area with high humidity, such as bathroom or kitchen.
- Avoid blocking the Air Inlet and Outlet during use. Please keep the product far away from curtains, so that they will not block the inlet/outlet and obstruct the product from working.
- Do not place objects within 1 meter of the Air Outlet to ensure that the volume of cool air will not be reduced. Pay attention to the effects on warm air blowing on objects.

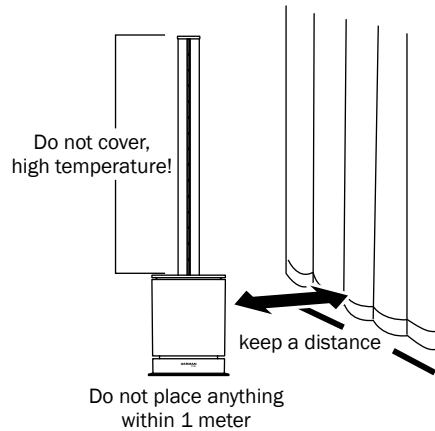

Caution:

Safety System: This product includes an Overheat Protection Sensor, which is an automatic fail-proof safety protection that cuts off power automatically when the product is accidentally tipped over or overheats. If this sensor is triggered and the product stops running, unplug the machine and let the product cool. Check and remove any obstructions before restarting the product and be sure to place it on a hard, level surface.


Battery Installation Method

1. Open the Remote Control Battery Cover;
2. Load two new AAA (No. 7) dry cell batteries;
3. Close the Battery Cover of the Remote Control.




Caution:

- Do not charge this battery. Please keep out of reach of children. If swallowed, please seek medical advice promptly.
- Please insert the battery +- orientation correctly.
- If you will not be using the Remote Control for a prolonged period of time, remove the battery.
- Dispose of dead batteries in accordance with local laws and regulations.

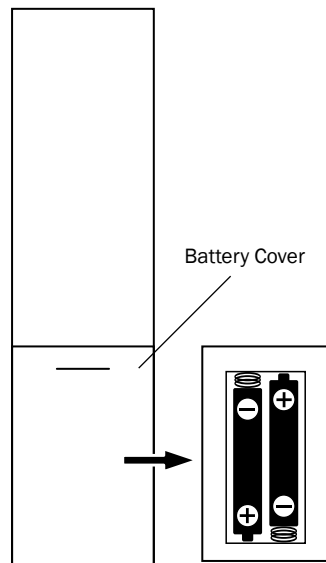

Operating Instructions

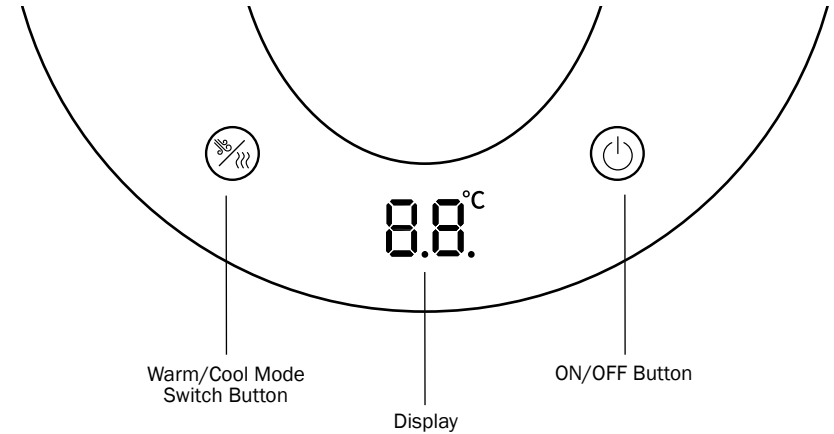

Turning On and Off

1. Insert the plug into socket, turn on Power Switch and the product enters the standby mode:
2. Press ON/OFF Button for 1 second, the buzzer will beep once and the product starts running.
3. Press and hold ON/OFF Button for 2 seconds, the buzzer will prompt you twice, and then stop running after you release your hand.

Watch the video clip



Air Volume Shift

When the product is running in "Cool Mode", press the "ON/OFF Button" on the unit to switch the air volume from 1 to 9.

When the product is running in "Warm Mode", press the "ON/OFF Button" on the unit to switch the air volume from 1 to 4.


Oscillating operation

Press and hold the ON/OFF Button for 1 second, the buzzer will beep once and product starts oscillating.

Press and hold the ON/OFF Button for 1 second again, the buzzer will beep once and product stops oscillating.

Operating Instructions

Remote Control

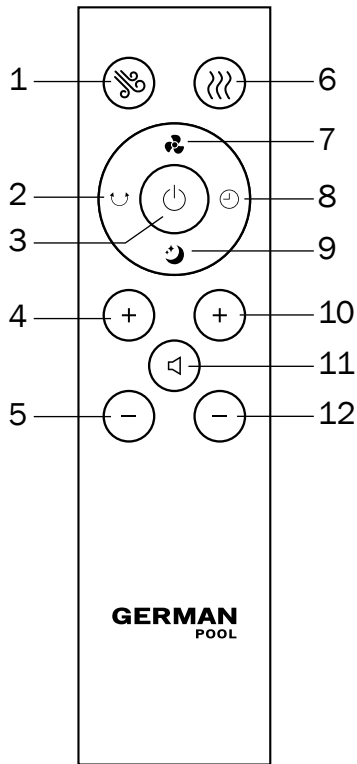

 





 
 
 

- | | |
|--------------------|------------------------|
| 1. Cool Mode | 7. Turbo Mode |
| 2. Oscillating | 8. Timer |
| 3. ON/OFF | 9. Sleep Mode |
| 4. Increase Volume | 10. Raise Temperature |
| 5. Decrease Volume | 11. Sound Button |
| 6. Warm Mode | 12. Reduce temperature |



Attention!

When using the Remote Control, please make sure to point it directly at the LED Display on the Control Panel for best signal reception.

Operating Instructions

 On/Off	The device can be switched on and off by pressing the “ON/OFF” button
 Sleep Mode	Press Sleep Mode button on the Remote Control. The display shows LL and the wind speed becomes lowest. Press again to exit the Sleep Mode. (You can also exit the current mode by pressing the Wind Strength + button.)
 High Cool	Press Turbo Mode button on the Remote Control. The display shows HH and the wind speed become highest. Press again to exit the Turbo Mode. (You can also exit the current mode by pressing the Wind Strength + button.)
 Oscillating	Press the Oscillation button to turn on the Oscillation Function. This fan can swing left and right 80°. Press this button again to stop oscillating.
 Sound	Press Sound button to turn on/off sound of product. The product will make a short beeping sound.
 Cool Mode	Press this button to activate the Cool Mode. Note: The default starting mode is Cool Mode.
 Increase / Decrease Air Volume	Press the ‘+’ button on the left side of the Remote Control to increase airflow; press the “-” button on the left side of the Remote Control to decrease the airflow. There are 9-level settings for Cool Mode, and 4 levels for Warm Mode.
 Warm Mode	Press this button to activate the Warm Mode. Note: In Warm Mode there is no Turbo Mode or Sleep Mode.
 Raise / Reduce Tempera- ture	In Warm Mode, press the temperature button on the right side of the Remote Control to set the temperature (1-30°C). Note: this button does not work in Cool Mode.
 Timer	Press the Timer button on the Remote Control to set 1 to 8 hours of timing.

Operating Instructions


Remote Control



Caution:

Occasionally, remote control frequencies for various appliances may overlap. To avoid this issue, please make sure Remote Control is not within range of other appliances (and vice versa), as:

1. This product may react when using a remote device for other appliances.
2. When using the Remote Control of this product, other electrical appliances may react.

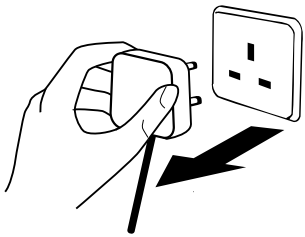


The ON/OFF button on the Remote Control or Unit will only turn this product to Standby Mode, but not complete shutdown. Use the Power Switch on the base of the main unit to completely power off when product is not in use. If product is not in use for a prolonged period of time, please unplug the power cord.

Operating Instructions

Heating Mode Instructions

1. Press the Warm Mode button and the display shows the ambient temperature;
2. Press Temperature button to set the temperature, and the display will flash digitally, which can be set to 1-30 °C;
3. 10 seconds after the desired temperature is set, the flashing will stop;
4. Set temperature should be higher than the ambient temperature, so that the Heating function will turn on;
5. When the ambient temperature reaches the set temperature, the Heating function will stop and turn into a cool breeze;
6. When the ambient temperature is lower than the set temperature, the Heating function will automatically activate.

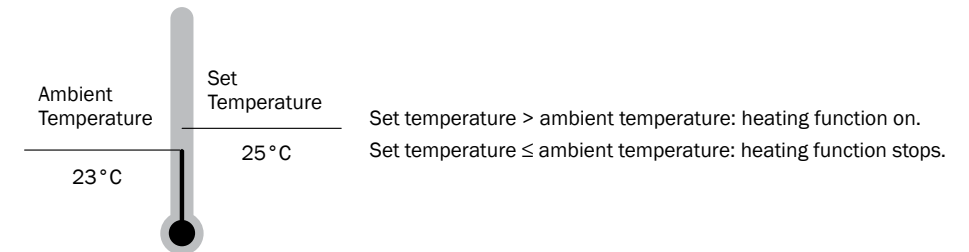

Note: The default setting temperature is 25 °C.

In the Warm Mode, when the ambient temperature is below 0 °C, the display only shows 01, Unit does not display negative temperature values. After the Warm Mode has run over 9 hours, the machine will automatically stop running. Restart by pressing the ON/OFF button or by using the Remote Control.




Caution:

Warm Mode: Please use Remote Control to set temperature, the Body of the product does not support this operation.

Cleaning & Maintenance



Caution: Unplug the power supply before performing maintenance.

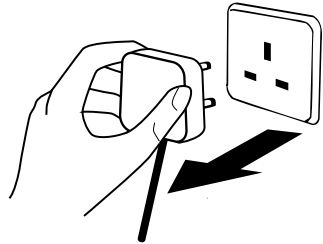


Watch the video clip



Filter Replacement

This machine is equipped with a purifying air filter, which can purify the air. For best results, change a new HEPA filter every 3 months. To replace filter:

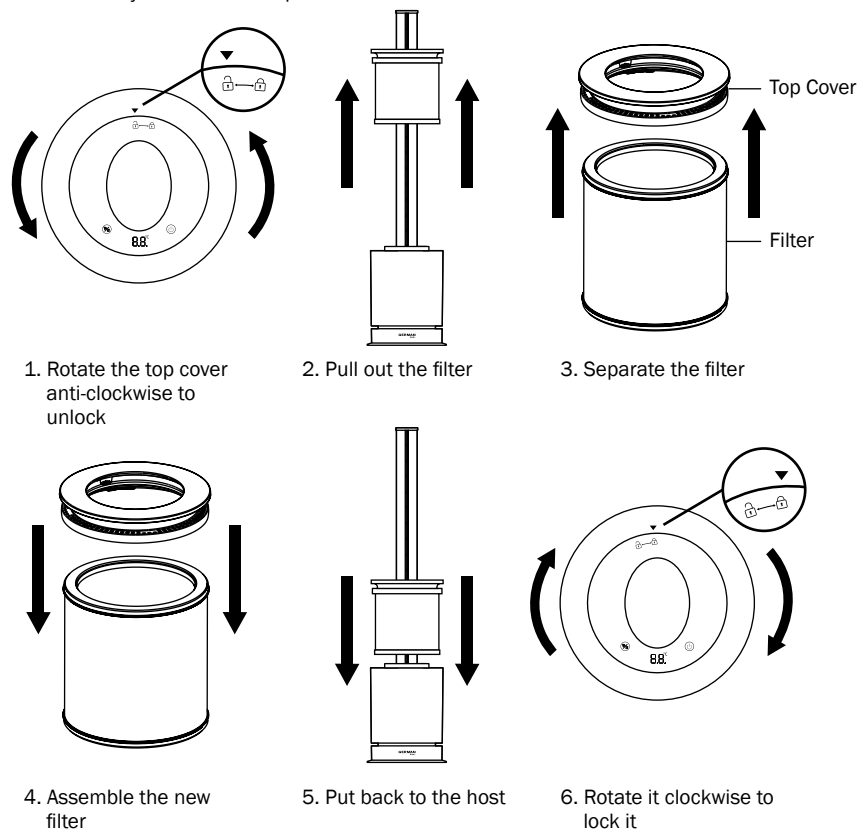

Cleaning & Maintenance

Surface Cleaning

- Wipe the surface with a soft, dry cloth; If especially dirty, dilute with a mild detergent and wipe with a soft cloth. Then wipe with a dry soft cloth.
- Please do not put the product on a wet surface or let the product touch water, which may cause the machine to be damaged.
- Do not use banana oil, benzine, alcohol, bleach or metal objects to wipe the surface of the product, which may cause discoloration of the surface.

Air Inlet/Outlet

- Use a soft brush or vacuum cleaner to clean the dust at the air inlet and outlet. Do not let product accumulate too much dust. Too much dust is not healthy and will reduce product efficiency.

Remote Control


- Gently wipe the surface of the Remote Control with a soft, dry cloth. If you will not be using it for a prolonged period of time, to avoid battery drainage, please remove the battery inside the Remote Control.

Power Plug

- Use a soft, dry cloth to clean.

Storage

- If you will not be using the product for a prolonged period of time, place it in a plastic bag after cleaning;
- Please avoid places that have vibration (eg. car trunk);
- Do not place near electrical appliances with cooling / heating functions;
- Please avoid placing it in direct sunlight, high temperature and humidity;
- Please keep out of reach of young children.

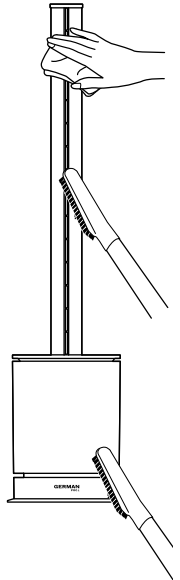

Troubleshooting



Caution: Do not disassemble machine or repair it yourself.

Problem	Possible Cause and Solution
Has plugged in power but the product does not work	Is the plug properly inserted into the socket?
Remote does not work	Are the batteries dead? Are the batteries inserted correctly? Is the Remote Control aligned with the Signal Receiver?

If the problem still cannot be solved after troubleshooting, please contact Customer Service. Do not disassemble, repair, or install it yourself.

Technical Specifications

Model	EFB-P20H
Voltage	220V
Frequency	50Hz
Power	45W (Cool Mode) / 2,000W (Warm Mode)
Swing Range	80°
Timer Range	1-8 hours
Motor	BLDC Brushless Direct Current Motor
Product Dimensions	(H)985mm (W)230mm (D)230mm
Net Weight	4.2kg

Specifications are subject to change without prior notice.

If there is any inconsistency or ambiguity between the English version and the Chinese version, the Chinese version shall prevail.
Refer to www.germanpool.com for the most up-to-date version of the Operating Instructions.

目錄

注意事項	16
產品結構	17
使用前的準備	18
操作說明	19
清潔及維護	24
故障檢修	26
技術規格	26
保用條款	27

注意事項




警告！

為避免火災、電擊、人身傷害，請務必遵守以下要求；其它請遵循國家及地區的有關電氣法規。

- 本產品只適宜室內使用，不宜在室外使用。
- 非專職人員或未授權修理人員，不得自行修理或改造本機。
- 插接電源前，請檢查本產品標明的額定電壓是否與您家中的電壓相符。
- 機器正常使用或閒置時離火源和火種1.5米以上，並避免陽光直射。
- 禁止在易燃、易爆、受熱易變形、變色、變質的物體附近使用，禁止在有嚴重粉塵的地方使用。
- 禁止在有容易跌落懸掛物的地方使用，禁止在易受衝擊或擺放在不穩定的地方使用。
- 禁止用插（拔）電源線插頭的方法代替功率開關的開機和關機。
- 禁止把本機作為動植物的保溫、加熱設備。
- 為避免過熱，禁止覆蓋加熱器。
- 嚴禁用細的金屬絲或其他異物插入機內任何孔隙，以免造成觸電事故。
- 如果本產品跌落或有明顯的損壞跡象，請勿使用。
- 嚴禁將機器浸入水中。
- 嚴禁將機器對著電源插座或置於電源插座下使用。
- 嚴禁將本機與其他大功率電器共用插座。
- 嚴禁直接拉著電源線移動機體。
- 因為機器被覆蓋或不正確的放置會引起火災危險，故不得利用帶有可自動接通電源的程序器、定時器、或任何其他裝置來使用本產品。
- 本產品在使用時電源線應置於機體後面，放在機體前面會使其過熱而損壞，甚至發生安全事故。
- 小孩、喪失生活自理能力的老人或病人請在成人監護下使用本電器，以防發生意外。
- 若本產品出現故障，請立即關機並拔下電源線插頭，必須由製造商維修部或類似部門專業人員維修。
- 使用前需要先檢查電源線以及插頭是否破損，如果電源軟線損壞，為了避免危險，用戶不得自行拆卸、更換電源線，必須由製造商或其維修部或類似部門的專業人員更換。
- 使用本產品時，為避免灼傷，請不要讓裸露的皮膚直接接觸出風口表面。
- 僅適合在乾燥環境下使用。在浴缸、噴頭或游泳池的四周不得使用本產品。
- 如果插頭與插座之間出現鬆動或插頭變得很燙，可能需要更換插座。諮詢有資質的電工以更換插座。
- 本產品必須配套與插頭額定工作電流一致的有3C認證的固定插座，嚴禁使用移動多用插座。

產品結構


本產品採用PTC發熱體，將產生的熱量通過熱空氣送出，能夠快速提高室內溫度，取暖面積大，無明火，安全、高效、節能。

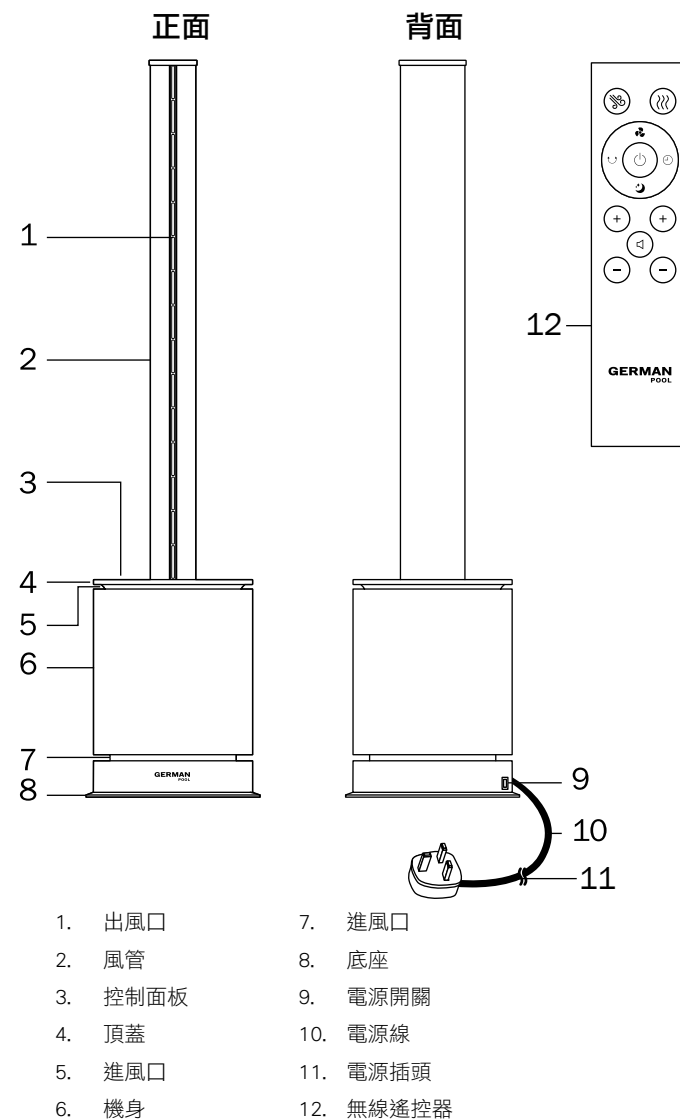

使用前的準備

安裝位置

- 請將本產品放置在水平位置使用，請不要放置在不穩定地方（如有斜度、柔軟的表面），以避免本產品翻倒造成損壞或故障；請不要在高溫多濕的地方使用（如浴室、廚房）。
- 在使用過程中，需避免擋住進風口，請遠離裝有窗簾的地方使用以避免物體堵住進風口導致機器無法工作。
- 出風口前面1米內不要放置物體以減弱吹風效果並注意高溫。

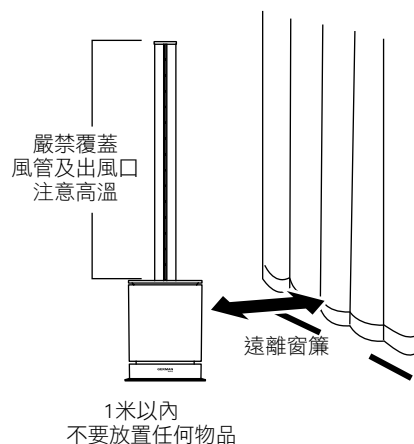

注意：

暖風模式下風管會發熱，使用後短時間內尚有餘熱，請注意高溫。為了確保人身安全，機器上安裝了自動斷電開關，可在機器傾倒或過熱時自動關閉，如果觸發此開關，請拔出機器插頭並使其冷卻，並在重新啟動機器前檢查並清除任何阻塞物，並且確保將其放置在堅硬的水平表面。

安裝遙控器電池


電池安裝方法：

- 打開遙控器電池蓋
- 裝入兩節全新的AAA(七號)乾電池
- 蓋上遙控器的電池蓋




注意：

- 此電池請勿充電。請置於小孩接觸不到的地方，如若吞服請及時就醫。
- 請正確裝入電池+-朝向。
- 如果長時間不使用遙控器，請取出電池。
- 處置廢舊電池時需遵循當地的法令或規章。

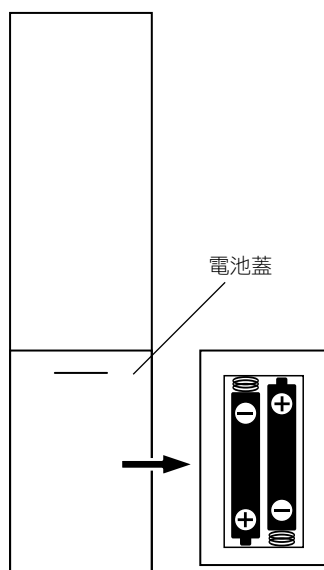

操作說明

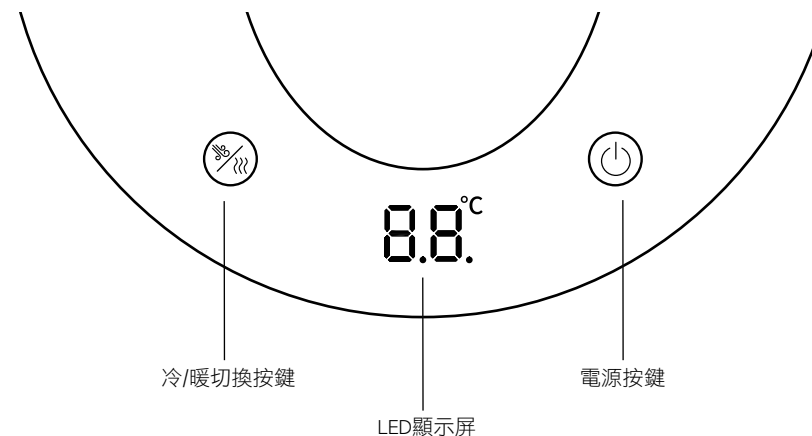

開關機操作

- 插頭插入插座後，打開電源開關，機器進入待機狀態；
- 點按主機電源按鍵，蜂鳴器提示聲響一聲並啟動運行；
- 長按主機電源按鍵2秒，蜂鳴器提示聲響二聲，鬆手後停止運行。

風量檔位切換

當主機處於運行狀態時：

涼風模式：點按主機電源按鍵，風量從1檔到9檔循環切換。

暖風模式：點按主機電源按鍵，風量從1檔到4檔循環切換。

搖擺操作

當主機處於運行狀態時：

長按主機電源按鍵1秒，蜂鳴器提示聲響一聲，鬆手後開始搖擺；

再次長按主機電源按鍵1秒，蜂鳴器提示聲響一聲並停止搖擺。

冷暖模式切換


當主機處於運行狀態時：

點按冷/暖切換按鍵，即可切換涼風或暖風模式


觀看操作視頻



遙控器功能介紹

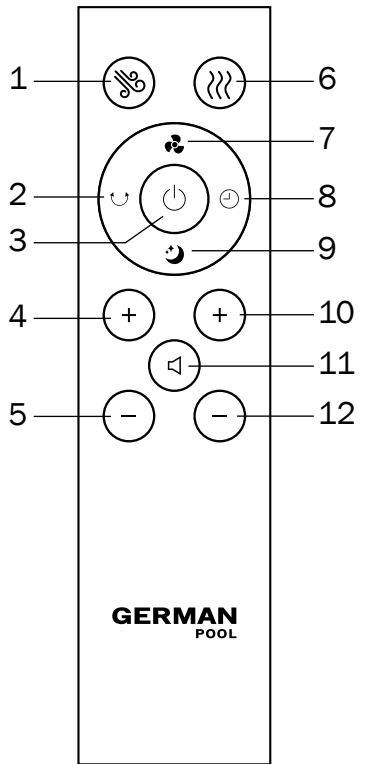

- 1. 涼風模式
- 2. 搖擺
- 3. 開關機
- 4. 增風量
- 5. 減風量
- 6. 暖風模式
- 7. 強勁風
- 8. 定時
- 9. 睡眠風
- 10. 提高溫度
- 11. 聲音
- 12. 降低溫度

 **注意！**
使用遙控器控作時，需將遙控器對準控制面板上的顯示屏使遙控信號接收達到最好。

 開關機	當主機處於待機狀態按下開關機鍵，啟動運行；當主機處於運行狀態按下開關機鍵，停止運行並進入待機狀態。
 睡眠風	按下遙控器上的睡眠風按鍵，顯示幕顯示「LL」風量變為柔和；再按一次睡眠風按鍵或按風量鍵返回涼風模式。
 強勁風	按下遙控器上的強勁風按鍵，顯示幕顯示「HH」風量變為強勁。再按一次強勁風按鍵或按風量鍵返回涼風模式。
 搖擺	按下遙控器上的搖擺按鍵，開啟左右搖擺。搖擺角度為80°。再按一次，退出搖擺操作。
 聲音	按下遙控器聲音鍵，可以開啟/關閉聲音。關閉聲音狀態下，遙控器或主機操作均不再發出蜂鳴器聲響。
 涼風模式	按此鍵調整為涼風模式（開機啟動預設涼風模式運行）。
 增風量/減風量	按下遙控器左側「+」鍵，風量變大；按下遙控器左側「-」鍵，風量變小。涼風模式可進行9檔調風；暖風模式可進行4檔調風。
 暖風模式	按此鍵調整為暖風模式，暖風模式下，沒有強勁風和睡眠風功能。
 提高/降低溫度	在暖風模式下，按遙控器右側溫度鍵設定溫度1-30℃；涼風模式按此鍵無效。
 定時	按下遙控器上的定時按鍵，可以啟動1到8小時定時功能。定時功能設定後其他功能仍可正常使用，而電源關閉後，定時設定也會被取消；定時時間到機器會自動停止運行，如果需要重新開機請重新按開關機鍵。

操作說明




注意：

操作時有可能會發生以下現象：

1. 使用其它電器的遙控器時，本產品可能會產生反應。
2. 使用本產品的遙控器時，其它電器可能會產生反應。

這是由於遙控器的頻率產生重疊而發生的現象，產品本身並無品質問題，為了避免誤操作，操作時請將遙控器遠離其他電器。

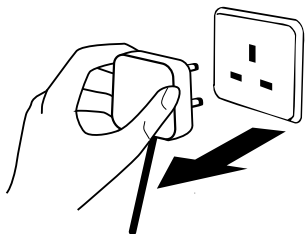


遙控器上的開關機鍵或主機電源按鍵並不能使電源完全關閉，請使用主機底部的電源開關按鍵切斷電源。如果長時間不使用，請拔掉電源插頭。

操作說明

暖風模式功能說明

1. 按下暖風模式按鍵，開啟暖風模式，顯示屏顯示環境溫度；
2. 按下溫度鍵，顯示屏處於閃爍狀態，顯示設定溫度，可設定1-30℃；
3. 溫度設定好10秒後，顯示屏停止閃爍並顯示環境溫度；
4. 當設定溫度高於環境溫度，製熱功能開啟；
5. 當環境溫度達到設定溫度，製熱功能停止，機器繼續運行40秒後停止運行，進入待機狀態；
6. 當環境溫度低於設定溫度，機器啟動運行並開啟製熱功能。

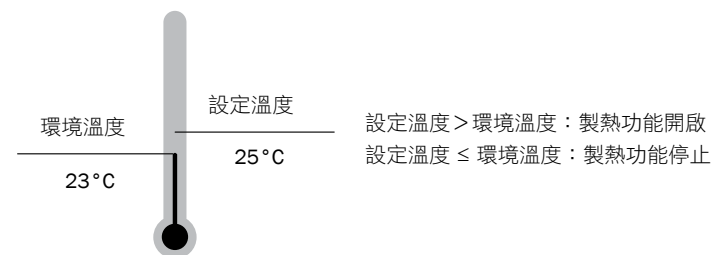

注意！預設設定溫度為25℃


- 暖風模式下環境溫度0℃以下時，顯示幕只顯示01，不顯示負溫度值。
- 暖風模式持續運行9小時後，機器會自動停止運行；需按主機電源按鍵或用遙控器重新開機。



注意！暖風模式設定溫度請用遙控器操作，主機電源按鍵不支援操作



警告！進行保養時請一定要先拔下插頭切斷電源。

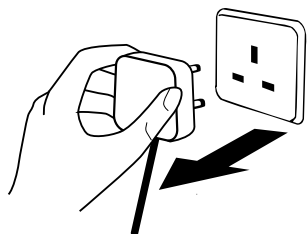


觀看操作視頻



過濾網更換

本機配有淨化空氣過濾網，能起到淨化空氣的作用。建議使用周期三個月更換一次過濾網。

更換方法：

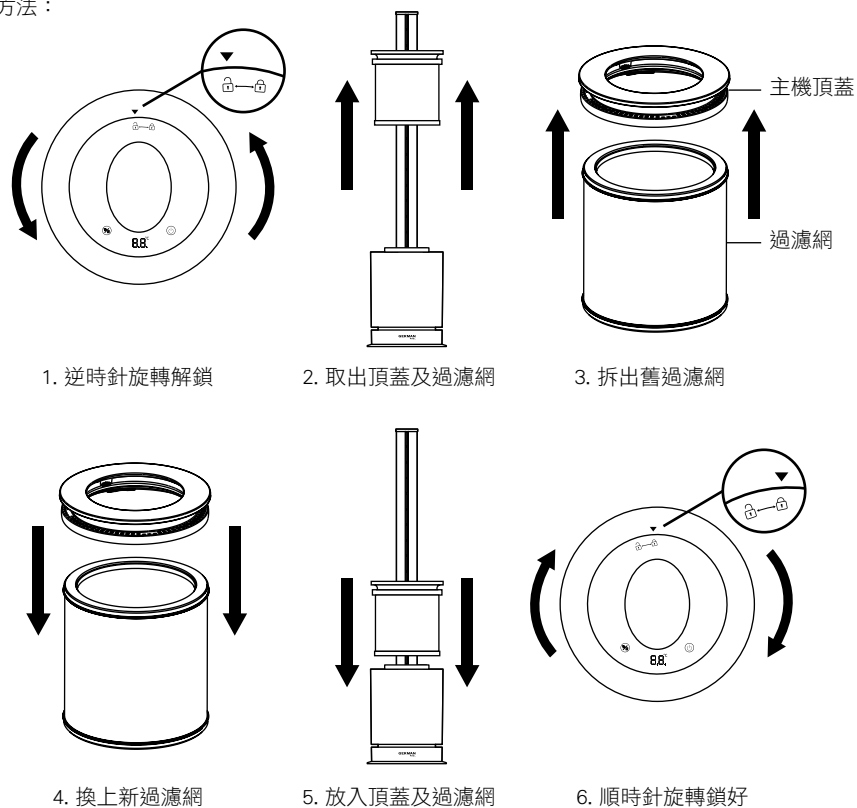

產品表面

- 保養的時候，請不要讓產品沾上水或者潑上水，可能會導致機器進水而損壞。
- 請不要使用香蕉水、汽油、酒精、漂白劑或者金屬物體去擦拭產品表面，可能會導致表面變色、變質。
- 請用乾的軟布輕輕擦拭產品表面；如果表面比較髒，可以用中性洗滌劑稀釋後用濕軟布擦拭；擦拭乾淨後再用乾軟布進行擦拭。

進氣口及出風口

- 請用軟刷或吸塵器清潔進風口和出風口處的灰塵，集聚太多灰塵的話可能會影響使用效果，請在灰塵較少的時候及時進行清潔。

遙控器


- 請用乾的軟布輕輕擦拭遙控器表面。如果長時間不使用，避免電池消耗，請取出遙控器內的電池。

電源插頭

- 請用乾的軟布清潔電源插頭。

保管方法

- 本產品保養後可以裝入塑膠袋並進行收藏；
- 請避開震動的場所以及有製冷或製熱功能的電器；
- 請避免放置在陽光直射，高溫潮濕的地方；
- 請放置在幼兒碰不到的地方。

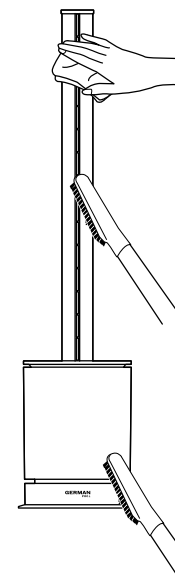

故障檢修



危險：請不要自行拆解，修理風扇。

故障現象	解決方法
插上電源但不運作	插頭有沒有正確插入插座？
遙控器不運作	電池是不是沒電了？ 電池方向是否安裝正確？ 遙控器是否有對準風扇主體的遙控信號接收器？

發生故障時，如按照以上方法處理無效，應立即與維修中心聯絡，嚴禁自行拆卸、維修和安裝。

技術規格

型號	EFB-P20H
額定電壓	220V
頻率	50Hz
額定功率	45W（涼風）/ 2,000W（暖風）
搖擺角度	80°
定時範圍	1-8 小時
摩打	BLDC無刷直流摩打
產品尺寸	(H)985mm (W)230mm (D)230mm
淨重	4.2kg

產品規格及設計如有變更，恕不另行通知。
中英文版本如有出入，一概以中文版為準。
本產品使用說明書以 www.germanpool.com 網上版為最新版本。

保用條款

此保用提供德國寶產品之機件在正常使用下壹年保用（自購買日起計算）。

* 貴戶須在購機十天內，以下列其中一種方式向本公司登記資料，保用手續方正式生效：

1) 填妥本公司網頁內之
保用登記表格
[www.germanpool.com/
warranty](http://www.germanpool.com/warranty)

2) 填妥保用登記卡，
郵寄至本公司。



另請填妥以下表格並與正本發票一併保存，以便維修時核對資料。用戶提供之所有資料必須正確無誤，否則免費保用將會無效。
Please fill out the form below. This information and the original purchase invoice will be required for any repairs. Warranty will be invalidated if information provided is found to be inaccurate.

型號 Model No. : **EFB-P20H**

機身號碼 Serial No. : _____ 發票號碼 Invoice No. : _____

購買商號 Purchased From : _____ 購買日期 Purchase Date : _____

- 未能出示購買發票正本者，將不獲免費維修服務。
- 用戶應依照說明書的指示操作。本保用並不包括：
 - 上門安裝、檢驗、維修或更換零件之人工以及一切運輸費用；
 - 因天然與人為意外造成的損壞（包括運輸及其他）；
 - 電源接合不當、不依說明書而錯誤或疏忽使用本機所引致之損壞。
- 於下列情況下，用戶之保用資格將被取消：
 - 購買發票有任何非認可之刪改；
 - 產品被用作商業或工業用途；
 - 產品經非認可之技術人員改裝或加裝任何配件；
 - 機身編號被擅自塗改、破壞或刪除。
- 總代理有權選擇維修或更換配件或其損壞部份。
- 產品一經被轉讓，其保用即被視作無效。

客戶服務及維修中心 香港

九龍灣啟興道1-3號

九龍貨倉10樓

電話：+852 2333 6249

傳真：+852 2356 9798

電郵：repairs@germanpool.com

澳門

澳門俾利喇街145號

寶豐工業大廈3樓

電話：+853 2875 2699

傳真：+853 2875 2661

Warranty Terms & Conditions

Under normal operations, the product will gurantee a 1-year full warranty provided by German Pool (effective from the date of purchase).

* This warranty is not valid until customer registration information is received by our Service Centre within 10 days of purchase via one of the following means:

1) Visit our website and register online:
[www.germanpool.com/
warranty](http://www.germanpool.com/warranty)

2) Complete all the fields on the attached Warranty Card and mail it back to our Customer Service Centre.



- Customer who fails to present original purchase invoice will not be eligible for free warranty service.
- Customer should always follow the operating instructions. This warranty does not apply to:
 - labour costs for on-site installation, check-up, repair, replacement of parts and other transportation costs;
 - damages caused by accidents of any kind (including material transfer and others);
 - operating failures resulting from applying incorrect voltage, improper usage, and unauthorized installations or repairs.
- This warranty is invalid if:
 - the purchase invoice is modified by an unauthorized party;
 - the product is used for any commercial or industrial purposes;
 - the product is repaired or modified by unauthorized personnel, or unauthorized parts are installed;
 - the serial number is modified, damaged or removed from the product.
- German Pool will, at its discretion, repair or replace any defective part.
- This warranty will be void if there is any transfer of ownership from the original purchaser.

Customer Service & Repair Centre Hong Kong

10/F, Kowloon Godown

1-3 Kai Hing Road, Kowloon Bay,
Kowloon, Hong Kong

Tel : +852 2333 6249

Fax : +852 2356 9798

Email : repairs@germanpool.com

Macau

3/F, Edificio Industrial Pou Fung,

145 Rua de Francisco Xavier Pereira,
Macau

Tel : +853 2875 2699

Fax : +853 2875 2661

此保用只適用於香港及澳門 | This warranty is valid only in Hong Kong and Macau

German Pool (Hong Kong) Limited

Hong Kong

Room 113, Newport Centre Phase II, 116 Ma Tau
Kok Road, Tokwawan, Kowloon, Hong Kong
Tel: +852 2773 2888
Fax: +852 2765 8215

China

8th, Xinxiang Road, Wusha Industrial Park,
Daliang, Shunde, Foshan, Guangdong
Tel: +86 757 2980 8308
Fax: +86 757 2980 8318

Macau

3/F, Edificio Industrial Pou Fung,
145 Rua de Francisco Xavier Pereira, Macau
Tel: +853 2875 2699
Fax: +853 2875 2661



香港名牌十年成就獎



香港卓越品牌



香港服務名牌



2011
出口品質大獎
EXPORT QUALITY
STANDARD AWARD
金牌獎 證書



2009
品質大獎
QUALITY AWARD
金牌獎 證書



香港星級品牌



2009
Superbrands
Hong Kong's Choice



香港名牌
品質大獎
2008-09



HONG KONG
CONSUMERS CHOICE
2007

© All rights reserved. Copying, reproducing or using the contents of this manual is not allowed without prior authorization from German Pool, violators will be prosecuted.