

## EXPRESS EGG COOKER

EGG-252



## USER MANUAL






Please read these instructions and warranty information carefully before use and keep them handy for future reference.

## Warnings and Safety Precautions

### **WARNING!**

Read all instructions carefully before using this product.

- This product is for domestic indoor use only. If this product is used for any commercial, industrial, rental or other purposes, product warranty will be VOIDED.
- This product is not intended for use by children or persons with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of this product by an adult responsible for their safety.
- Mind your children and DO NOT let children play with this product.
- Cleaning and user maintenance shall not be made by children without supervision.
- Check the voltage indicated on the rating label before using this product.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid hazards.
- Unplug this product from the power source before cleaning and maintenance.
- Contact German Pool authorized service technician for repair or maintenance of this product.

 
 
1.  **WARNING!** Hot steam escapes from the steam outlet during operation!
2.  **WARNING!** Take care when using the needle at the bottom of the measuring cup which is intended for piercing the eggs. Danger of injury!
3.  **WARNING!** Keep this product out of reach from children or infirm persons.
4.  **WARNING!** The following marking is the safe cautionary symbol of a Hot Surface accessible to people. This symbol alerts you to the hot hazards that you can be injured.  
 **WARNING!** Hot surface. The surface can be hot and should not be touched without taking care.
5. This product can be used by children aged from 8 years and above if they have been given supervision or instruction concerning use of this product in a safe way and if they understand the hazards involved. Cleaning and user maintenance shall not be made by children unless they are older than 8 and supervised. Keep this product and its cord out of reach of children aged less than 8 years.
6. This product can be used by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision and instruction concerning use of this product in a safe way and understand the hazards involved.
7. Children shall not play with this product.
8. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

## Warnings and Safety Precautions

1. **⚠WARNING!** Avoid injuries from the egg pricker.
2. Heating element surface is subject to residual heat after use.
3. Use this product according to this instruction manual, any misuse may cause electric shock or other hazards.
4. This product is intended to be used in household and similar applications such as:
  - staff kitchen areas in shops, offices and other working environments;
  - farm houses;
  - by clients in hotels, motels and other residential type environments;
  - bed and breakfast type environments.
5. To protect against electrical hazard, DO NOT immerse any part of this product or cord in water or any other liquid.
6. Always use this product on a dry, clean, stable and level surface.
7. Only use this product for its intended purpose and indoors.
8. Always unplug from the plug socket when not in use and before cleaning.
9. Never start up this product without filling water into the cooking tray.
10. DO NOT operate this product if damaged, after a product malfunction or it has been damaged in any manner. Return to the customer service department for repair, because special purpose tools are required.
11. DO NOT let the cord hang over the edge of a table or counter or touch hot surfaces. Allow unit to cool before wrapping cord around base for storage.
12. DO NOT move this product and DO NOT pull at the cord during operation.
13. DO NOT move this product while it still has hot water in it.
14. Care must be taken not to touch any hot surfaces, DO NOT store or cover this product until it has fully cooled down.
15. DO NOT place this product on or near a hot gas or electric burner, in or where it could touch a heated oven, or a microwave oven.
16. DO NOT use harsh abrasives, caustic cleaners or oven cleaners when cleaning this product.
17. Let this product cool down in a safe place, inaccessible to children, before you clean it.
18. This product is not designed for commercial purposes.
19. **⚠WARNING!** Danger of swallow: Lay the egg pricker protector in a safe place, DO NOT allow children to play with it.
20. **⚠WARNING!** Danger of electric shock: Never attempt to repair this product yourself. In case of defects only let a qualified specialist repair this product.
21. **⚠WARNING!** Danger of burns: This product will become very hot during operation. DO NOT remove the top cover until the buzzer sets in. Regarding the operational details, refer to the section of "Operation Instructions".


 
# Product Structure



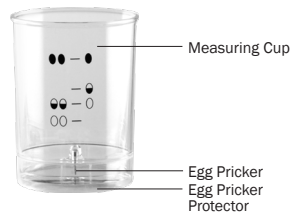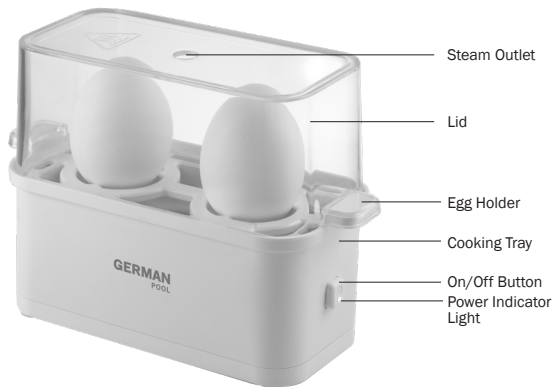

## Main Body



## Operation Instructions

### WARNING!

- DO NOT overfill the water tray. To prevent overflowing, make sure the amount of water used does not exceed the maximum water mark  —  on the measuring cup.
  - Make sure the product is placed on a sturdy and level surface before use, this is to ensure user safety and that the hot water will not spill out.
  - If the product is placed on a slanted surface, the product may switch off prematurely.
  - DO NOT turn on the product unless the lid is in place.
1. Measure the required amount of water with the supplied measuring cup. The amount of water needed depends on the number of eggs and the desired degree of hardness (It is recommended to use purified or distilled water to minimize limescale build-up).

Icon	Water level for
	1 or 2 hard-boiled eggs
	1 medium-boiled egg
	2 medium-boiled eggs or 1 soft-boiled egg
	2 soft-boiled eggs

2. Pour the water into the cooking tray.
3. Pierce the dull end of the egg with the egg pricker at the bottom of the measuring cup. This prevents the egg from cracking.
4. Place the egg holder on the cooking tray, place in the eggs with the dull end facing upwards. Place on the lid.
5. Connect to the power source. Press On/Off button to turn on the product. The Power Indicator Light will light up constant in blue.
6. When the eggs are done, product will stop heating and buzzer will beep continuously until user presses On/Off button to turn off the product.
7. Hold the handles to remove the egg holder together with the lid, set onto a flat surface.

### WARNING!

Be careful of hot steam when removing the lid.

## Cleaning & Maintenance

### ⚠ WARNING!

- Turn off the power, disconnect product from the power source and let the product cool down completely before cleaning and maintenance.
  - DO NOT immerse the product body in water or any liquid.
1. Wipe the cooking tray with a damp cloth, then dry off with a dry cloth. In case of scale deposits, pour a little diluted vinegar into the cooking tray, let it sit for approx. 30 minutes, then carefully rinse out with water. Take care not to wet the outside of the product. DO NOT use detergent or cleansing agents.
  2. The heating plate is made of stainless steel. In case of stubborn residue, please wipe with special cleansing agent for stainless steel.
  3. Egg holder can be washed with water and mild detergent.
  4. The exterior casing of this product can be wiped with a slightly dampened cloth and polished with a soft dry cloth.

## Technical Specification

Model No.	EGG-252
Voltage / Frequency	220-240 V / 50-60 Hz
Power	250 W
Maximum Volume	62 ml
Product Dimensions	(H)121 (W)164 (D)74 mm
Net Weight	426 g

- Specification is subject to change without prior notice.
- If there is any inconsistency or ambiguity between the English version and the Chinese version, the English version shall prevail.
- Refer to [www.germanpool.com](http://www.germanpool.com) for the most update version of the user manual.

## 保用條款

此保用提供德國寶產品之機件在正常使用下壹年保用（自購買日起計算）。

\*貴戶須在購機十天內，以下列其中一種方式向本公司登記資料，保用手續方正式生效：

1) 填妥本公司網頁內之保用登記表格

[www.germanpool.com/warranty](http://www.germanpool.com/warranty)

2) 填妥保用登記卡，郵寄至本公司。

另請填妥以下表格並與正本發票一併保存，以便維修時核對資料。用戶提供之所有資料必須正確無誤，否則免費保用將會無效。

Please fill out the form below. This information and the invoice will be required for any repairs. Warranty will be invalidated if information provided is found to be inaccurate.

型號 Model No.: EGG-252

機身號碼 Serial No.: \_\_\_\_\_

購買商號 Purchased From: \_\_\_\_\_

- 未能出示購買發票正本者，將不獲免費維修服務。
- 用戶應依照說明書的指示操作。本保用並不包括：
  - 上門安裝、檢驗、維修或更換零件之人工以及一切運輸費用；
  - 因天然與人為意外造成的損壞（包括運輸及其他）；
  - 任何塑膠附件及輔助裝置；
  - 電源接合不當、不依說明書而錯誤或疏忽使用本機所引致之損。
- 於下列情況下，用戶之保用資格將被取消：
  - 購買發票有任何非認可之刪改；
  - 產品被用作商業或工業用途；
  - 產品經非認可之技術人員改裝或加裝任何配件；
  - 機身編號被擅自塗改、破壞或刪除。
- 總代理有權選擇維修或更換配件。
- 產品一經被轉讓，其保用即被視作無效。

## 客戶服務及維修中心

### 中國香港

九龍大業街59號

三湘九龍灣貨運中心地下B室

電話：+852 2333 6249

傳真：+852 2356 9798

電郵：[repairs@germanpool.com](mailto:repairs@germanpool.com)

### 中國澳門

澳門青洲大馬路(青洲新路)

515號美居廣場第二期1樓A座

電話：+853 2875 2699

傳真：+853 2875 2661

## Warranty Terms & Conditions

Under normal operations, the product will guarantee a 1-year full warranty provided by German Pool (effective from the date of purchase).

\* This warranty is not valid until customer registration information is received by our Service Centre within 10 days of purchase via one of the following means:

1) Visit our website and register online:

[www.germanpool.com/warranty](http://www.germanpool.com/warranty)

2) Complete all the fields on the attached Warranty Card and mail it back to our Customer Service Centre.

發票號碼 Invoice No.: \_\_\_\_\_

購買日期 Purchase Date: \_\_\_\_\_

- Customer who fails to present original purchase invoice will be disqualified for free warranty.
- Customer should always follow the operating instructions. This warranty does not apply to:
  - labour costs for on-site installation, check-up, repair, replacement of parts and other transportation costs;
  - damages caused by accidents of any kind (including transport and others);
  - plastic parts and accessories;
  - operating failures resulted from incorrect voltage, improper operations and unauthorized installations or repairs.
- This warranty is invalid if:
  - purchase invoice is modified by unauthorized party;
  - product is used for any commercial or industrial applications;
  - product is repaired or modified by unauthorized personnel, or unauthorized parts are installed;
  - serial number is modified, damaged or removed from the product.
- German Pool will, in its discretion, repair or replace any defective part.
- This warranty will be void if there is any transfer of ownership from the original purchaser.

## Customer Service & Repair Centre

### Hong Kong, China

Unit B, G/F, Sunshine Kowloon Bay

Cargo Centre, 59 Tai Yip Street.

Kowloon, Hong Kong

Tel : +852 2333 6249

Fax : +852 2356 9798

Email : [repairs@germanpool.com](mailto:repairs@germanpool.com)

### Macau, China

A, 1 Andar, Mei Kui Kuong Cheong Fase 2,

No.515 Avenida Do Conselheiro Borja,

Macau

Tel : +853 2875 2699

Fax : +853 2875 2661

## 警告及注意事項

### △警告！

使用本產品前，請仔細閱讀所有說明。

- 本產品只限家居室內日常使用，如產品作任何商業、工業、出租或其他用途，保用證即告失效。
- 請勿讓兒童或身體有殘障、精神不健全及對本產品缺乏經驗或知識的人士單獨使用本產品；如需使用，必須要在負責任的成年人監管下方可使用。
- 應照顧好兒童，確保他們不會玩耍本產品。
- 無成年人監管下，勿讓兒童清潔及維護本產品。
- 使用前，請先檢查所有電壓是否與本產品標籤上的電壓相符。
- 如果電源線損壞，為免發生意外，電源線必須由廠方、廠方指定的維修中心或同等合格的技術人員進行更換。
- 清潔或檢查本產品前，必須先關機及拔掉插頭。
- 請聯繫德國寶授權的技術人員進行維修或保養本產品。

1. **△警告！**本產品運行期間，熱蒸氣會從蒸氣排氣口溢出！
2. **△警告！**量杯底部用的刺蛋針只用於刺穿蛋殼，使用時必須小心避免受傷！
3. **△警告！**請將本產品放在兒童或體弱者接觸不到的地方。
4. **△警告！**以下標誌是使用者可接觸到的發熱表面的安全警示符號。此符號提醒您注意可能因高溫導致的受傷危險。  
**△警告！**高溫表面。產品表面可能很熱，嚴禁觸摸。
5. 8歲或以上兒童在接受有關安全使用本產品的監督或指導，並明白當中潛在危險的情況下，可以使用本產品。兒童不得清潔和維護本產品，除非他們年滿8歲且有對其安全負責的人進行監管。必須將本產品及其電源線放置在8歲或以下兒童接觸不到的地方。
6. 肢體不健全、感覺或神經上有障礙或缺乏相關經驗和知識的人士使用本產品時，必須有對其安全負責的人進行監管，並確保使用者的安全及其明白當中潛在危險。
7. 嚴禁讓兒童玩耍本產品。
8. 如果電源線損壞，為了避免危險，必須由製造商或指定的維修部門的專業人員更換。
9. **△警告！**避免刺蛋針造成傷害。
10. 使用後發熱單元表面有餘熱。
11. 必須按照說明使用本產品，任何錯誤使用都可能導致觸電或其他危險。
12. 本產品只適宜在家居及以下環境使用：
  - 店鋪、辦公室及其他工作環境之員工廚房；

 


## 警告及注意事項

- 農舍；
  - 酒店、汽車旅館或其他居住環境；
  - 旅舍類型之環境。
1. 嚴禁將本產品或電源線任何部份浸入水或其他液體中，以免造成電氣危險。
  2. 必須在乾燥、清潔、穩定和水平的表面上使用本產品。
  3. 本產品只可用作其原本用途，只限於在室內使用。
  4. 不使用或清潔前，必須拔除電源插頭。
  5. 嚴禁在未於加熱底座中注水的情況下啟動本產品。
  6. 如本產品有任何損壞跡象或出現異常現象，嚴禁使用。由於維修需要特別的專業工具，因此必須交予客戶服務及維修中心維修。
  7. 嚴禁讓電源線懸掛在桌或櫃邊緣或接觸發熱表面。在將電源線纏繞在底座上進行收納之前，必須先讓本產品徹底冷卻。
  8. 本產品運行期間，嚴禁移動本產品或拉抽電源線。
  9. 如本產品內裝載熱水，嚴禁移動本產品。
  10. 請勿觸摸任何發熱表面，收納或覆蓋本產品前必須先讓其徹底冷卻。
  11. 嚴禁將本產品放置在熱的氣體煮食爐或電爐上或附近，或放置在有機會接觸到熱的焗爐或微波爐的地方。
  12. 嚴禁使用粗糙的研磨劑、腐蝕性清潔劑或焗爐清潔劑清潔本產品。
  13. 清潔前必須將本產品放置在兒童無法觸及的安全地方冷卻。
  14. 本產品並非設計為商用目的。
  15. **⚠警告！**吞食危險：必須將刺蛋針放置在安全地方，嚴禁讓兒童玩耍。
  16. **⚠警告！**觸電危險：嚴禁自行維修本產品。如果出現異常情況，必須由合資格專業人員進行維修。
  17. **⚠警告！**燙傷危險：本產品在運行過程中會變熱。在蜂鳴器響起之前，嚴禁拆下頂蓋。請參閱「操作說明」部分。

## 產品結構

### 機身

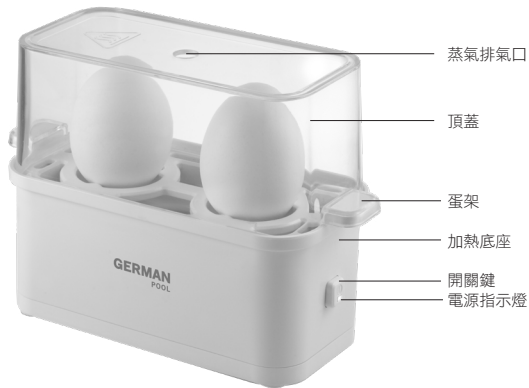

GERMAN POOL

## 使用說明

### △警告！

- 嚴禁在儲水箱注入過滿。必須確保注入的水量不超過量杯最高水量刻度。
- 使用前必須確保將本產品放置在堅固且水平的表面上，以確保使用安全且熱水不會溢出。
- 如將本產品放置在傾斜表面上使用，產品可能會過早自動關機。
- 未蓋上頂蓋前嚴禁開機。

- 在量杯注入所需水量，水量取決於蛋的數量和所需生熟程度（建議使用純淨水或蒸餾水，以減少水垢積聚）。

圖標	水量適用於
●●—●	1 隻 或 2 隻全熟蛋
●—●	1 隻半熟蛋
○●—○	2 隻半熟蛋 或 1 隻溏心蛋
○○	2 隻溏心蛋

- 將水倒入加熱底座。
- 用量杯底部的刺蛋針刺穿蛋底部較圓的一端，防止蒸煮時蛋殼破裂。
- 將雞蛋架放在加熱底座上，將雞蛋底部朝上放在架上，蓋上頂蓋。
- 接通電源，按開關鍵開機，電源指示燈以藍色常亮。
- 烹調完成後，產品自動停止加熱，蜂鳴器會持續發出提示聲直至使用者按開關鍵關機。
- 握住雞蛋架手柄連同頂蓋一起取下，放在平坦表面上。

### △警告！

打開頂蓋時小心蒸氣燙手。

## 清潔與保養

### ⚠警告！

- 清潔及保養前必須關閉電源，拔掉插頭，並讓產品完全冷卻。
  - 嚴禁將本產品浸入水或任何液體中。
- 用濕布清潔加熱底座，再用乾布擦乾。如有水垢積聚，請倒入少量稀釋的醋並浸泡約 30 分鐘，然後小心用水沖洗乾淨，注意別弄濕產品的外殼。嚴禁使用清潔劑。
  - 加熱元件由不銹鋼製成，如有頑固污漬可使用不銹鋼專用清潔劑清潔。
  - 雞蛋架可以清水或稀釋洗潔精清洗，再用水沖洗乾淨。
  - 產品外殼可用微濕的布擦拭，再用軟乾布擦乾。

## 技術規格

型號	<b>EGG-252</b>
電壓 / 頻率	220-240 V / 50-60 Hz
功率	250 W
最高水量	62 ml
產品尺寸	(H)121 (W)164 (D)74 mm
淨重	426 g

- 產品規格及設計如有變更，恕不另行通知。
- 中英文版本如有出入，一概以英文版為準。
- 本產品使用說明書以 [www.germanpool.com](http://www.germanpool.com) 網上版為最新版本。