

Healthy Slow Cooker

GMD-305



Online Warranty Registration



Please read these instructions and warranty information carefully before use and keep them handy for future reference.

## USER MANUAL

請即進行保用登記！  
有關保用條款細則，請看說明書最後一頁。

---

Please register your warranty information now !  
For Warranty Terms & Conditions,  
please refer to the last page of this user manual.

## Table of Contents

---

 
 
Warnings & Safety Precautions	04
Product Structure	05
Operation Instructions	06
Cleaning & Maintenance	08
Technical Specification	08
Warranty Terms & Conditions	15

## Warnings & Safety Precautions

### ⚠ WARNING!

- Read all instructions carefully before using this product.
  - This product is not intended for use by children or persons with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of this product by a person responsible for their safety.
  - Mind your children and DO NOT let children play with this product.
  - Cleaning and user maintenance shall not be made by children without supervision.
  - Check the voltage indicated on the rating label before using this product.
  - This product is for domestic indoor use only.
  - If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid hazards.
  - Unplug this product from the power source before cleaning and maintenance.
  - Contact German Pool authorized service technician for repair or maintenance of this product.
1. Be careful not to drop the glass pot, and avoid striking it against any hard surfaces or hard objects.
  2. To prevent boiling water from overflowing, glass pot should not be too full
  3. Power socket voltage must comply with required voltage
  4. In the event of power cord damage, replace a new cord of the same specification and type.
  5. In the event of damage or malfunction, it must be repaired by a qualified professional technician or a manufacturer assigned repair center. DO NOT disassemble the product yourself.
  6. Do not let children touch the product during use and operation to avoid any risk of injuries
  7. DO NOT immerse the product base in water.
  8. Use a moist soft cloth to clean this product. DO NOT use hard objects or metal scrubbers to avoid scratching the surface of the product.
  9. This slow cooker can only be used with its original glass pot. DO NOT use other substitute containers to avoid affecting the cooking effect.
  10. DO NOT let the glass pot boil dry. When product is not in use, please unplug product from the power source.
  11. DO NOT remove the glass pot and use the product base separately as a heating/cooking device.
  12. DO NOT operate this product with an external timer or remote control system.

## Product Structure

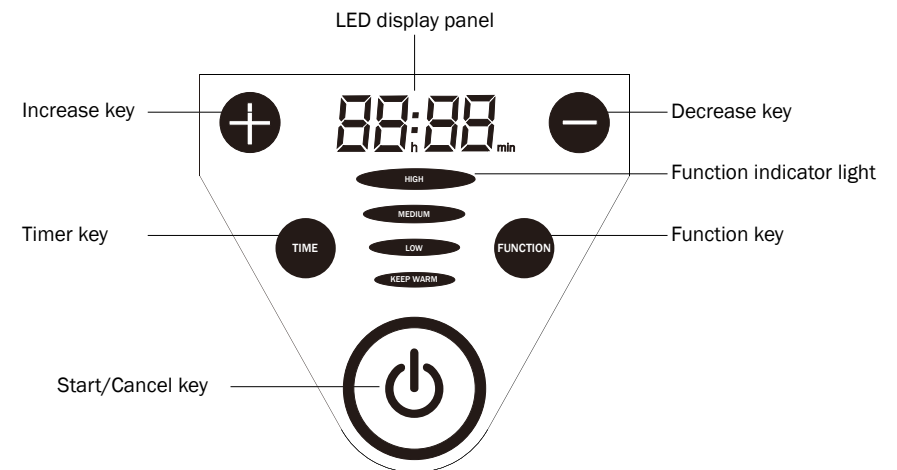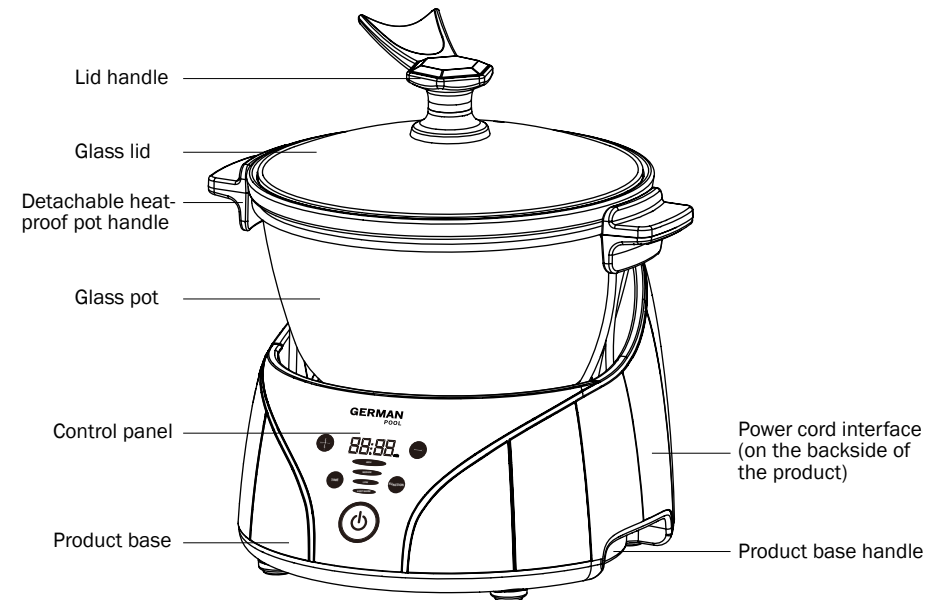

# Operation Instructions

## Before Cooking

1. Wash the glass pot thoroughly. Add in food ingredients and a suitable amount of water (we recommend you use warm water, this will shorten the cooking time needed).
2. Use a dry cloth to wipe dry any water on the bottom of the glass pot and the surface of the heating base.
3. Make sure the product base is placed on a flat and level surface. Place the glass pot on the heating surface, and place on the pot lid properly.

### ⚠ WARNING!

- DO NOT overload power socket or share power supply with other appliances.
- DO NOT directly pour hot water into the cooker.
- DO NOT touch the lid or glass pot during cooking or immediately after cooking.
- DO NOT add cold water into glass pot immediately after cooking.

## Connecting To The Power Source

1. Attach the power cord securely into the power cord interface, then insert the plug side into a wall socket. Make sure the supplied power voltage matches the product's required voltage.
2. After turning on the power, the buzzer will beep once, the whole LED display panel will light up, and product enters Standby status.

### Note:

In Standby status, if product is left idle for 15 seconds, it will automatically enter Sleep status, LED display flashes "--:--". To wake up product, press "Start/Cancel key" and product will re-enter Standby status.

# Operation Instructions

## Start Cooking

1. In Standby status, press Function key to cycle among "High-Medium-Low-Keep Warm" functions. The corresponding indicator light will flash.

Function	High	Medium	Low	Keep Warm
Default time	3 hours	4 hours	5 hours	8 hours

2. If user wishes to adjust cooking time, press Timer key to enter into Timer Setting (hour), press Increase key or Decrease key to adjust cooking time from 1-24 hours; then press Timer key again to enter Timer Setting (minute), press Increase key or Decrease key to adjust cooking time from 00-59 minutes.

### Note:

- Short-press Increase key or Decrease key to adjust timer by 1 hour or 1 minute.
- Long-press Increase key or Decrease key to speed up timer adjustment.

3. After selecting function and time, press Start/Cancel key to start cooking. Function indicator light will flash continuously throughout the entire cooking operation.
4. After cooking is completed, product will automatically enter into Keep Warm function. Buzzer will beep continuously until user presses Start/Cancel key to acknowledge cooking has completed.

### Note:

During cooking/keep warm process, press Start/Cancel key will cancel cooking/keep warm and product will return to Standby status.

5. When Keep Warm time is up, LED display will show "--:--", and product will return to Standby status. When user finishes using this product, unplug it from the power source.

## Cleaning and Maintenance

### WARNING!

Disconnect the product from the power source and let the glass pot and heating base cool down completely before cleaning.

1. DO NOT immerse the slow cooker heating base in water.
2. Use moist towel or soft cloth for cleaning. DO NOT use hard objects or metal scrubber to avoid scratching the product's surfaces.
3. If the product emits strange noise or severe vibration, DO NOT disassemble it yourself. Unplug the product from the power source immediately, then contact a professional licensed technician or our Customer Service & Repair Centre for diagnosis and repair.

## Technical Specification

Model	GMD-305
Voltage	220 V / 50 Hz
Power	300 W
Capacity	5 L
Cooking Temperature	65-100 °C
Product Dimensions	(H) 330 (W) 329 (D) 285 mm
Glass Pot Dimensions	(H) 145 (Ø) 265 mm
Net Weight	4.6 kg

Specifications are subject to change without prior notice.

If there is any inconsistency or ambiguity between the English version and the Chinese version, the Chinese version shall prevail.  
Refer to [www.germanpool.com](http://www.germanpool.com) for the most updated version of the Operating Instructions.

## 目錄

警告及注意事項	10
---------	----

產品結構	11
------	----

使用說明	12
------	----

清潔與保養	14
-------	----

技術規格	14
------	----

保用條款	15
------	----

 
## 警告及注意事項

### ⚠ 警告！

- 使用本產品前，請仔細閱讀所有說明。
- 請勿讓兒童或身體有殘障、精神不健全及對本產品缺乏經驗或知識的人士單獨使用本產品；如需使用，必須要在負責任的成年人監管下方可使用。
- 應照顧好兒童，確保他們不會玩耍本產品。
- 無成年人監管下，嚴禁讓兒童清潔及維護本產品。
- 使用前，請先檢查所有電壓是否與本產品標籤上的電壓相符。
- 本產品只宜在家居室內使用。
- 如果電源線損壞，為免發生意外，電源線必須由廠方、廠方指定的維修中心或同等合格的技術人員進行更換。
- 清潔或檢查本產品前，必須先關機及拔掉插頭。
- 請聯繫德國寶授權的技術人員進行維修或保養本產品。

1. 玻璃缸慎防與硬物碰撞和從高處跌落。
2. 使用時水不能加得太滿，以防熱水溢出。
3. 使用與要求相同的電壓。
4. 電源線若損壞，請更換相同規格及型號的電源線。
5. 本產品如有異常或損壞，請送專業人員或廠商指定維修點維修，嚴禁自行拆卸維修。
6. 在使用過程中禁止小孩接觸，以免發生危險。
7. 禁止將機身底座浸入水中。
8. 清潔本產品時用濕毛巾擦拭，嚴禁使用硬物和金屬刷，以避免擦傷本產品表面。
9. 玻璃缸與機身必須配套使用，不可代用，以免影響使用效果。
10. 本產品嚴禁乾燒，不用時請將電源線插頭拔下。
11. 不能取下玻璃缸單獨使用機身進行通電加熱。
12. 本產品不能在外接計時器或獨立的遙控控制系統的方式下運行。

## 產品結構

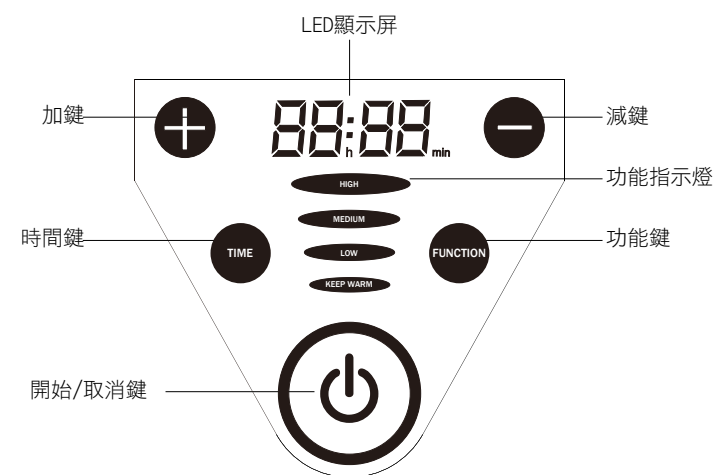

# 使用說明

## 使用前準備事項

1. 玻璃鍋洗淨，放入食材及加入適量水（建議使用溫水，可縮短烹調時間）。
2. 用乾布將發熱盤與玻璃鍋底部之接觸部份上的水份擦乾。
3. 底座水平放置好，玻璃鍋置於底座的發熱盤上，將鍋蓋蓋好。

### ⚠ 警告！

- 不可使電源插頭超負荷或與其他電器共用電源插座。
- 注水時，不可直接注入熱水。
- 烹調時或烹調後不可用手觸摸鍋蓋及玻璃鍋。
- 烹調完成後，不可馬上在容器內注入冷水。

## 接駁電源

1. 將電源線一端插入底座後部的品字形插座內，另一端插入固定插座（注意插座的電壓與要求電壓相同）。
2. 接通電源後，蜂鳴器發出提示聲響一聲，LED顯示屏全亮，進入待機狀態。

### 注意：

如在待機狀態下15秒無任何操作，本產品將自動進入休眠狀態，LED顯示屏閃爍「--:--」，此時按「開始/取消鍵」可返回待機狀態。

# 使用說明

## 開始烹調

1. 在待機狀態下，按「功能鍵」順序循環選擇「高-中-低-保溫」功能，對應功能指示燈閃爍。

功能	高	中	低	保溫
預設時間	3小時	4小時	5小時	8小時

2. 如需調整烹調時間，按「時間鍵」進入烹調時間設置（小時），按「加鍵」或「減鍵」調整1-24小時；再按「時間鍵」進入烹調時間設置（分鐘），按「加鍵」或「減鍵」調整00-59分鐘。

### 注意：

- 點按「加鍵」或「減鍵」，時間以1小時或1分鐘作調整。
- 長按「加鍵」或「減鍵」，時間會快速遞增或遞減。

3. 完成選擇後，按「開始/取消鍵」開始烹調，功能指示燈持續閃爍。

4. 烹調完成後自動進入保溫功能，蜂鳴器持續發出提示聲響，直至用戶按「開始/取消鍵」。

### 注意：

在烹調或保溫過程中按「開始/取消鍵」可取消烹調或保溫並返回待機狀態。

5. 保溫結束後，LED顯示屏顯示「--:--」，返回待機狀態。使用完畢後，必須將電源線從固定插座拔下。

## 清潔與保養

### ⚠ 警告！

清潔本產品前必須先拔下電源插頭，待玻璃鍋及機件完全冷卻後方可進行清洗。

1. 禁止將本產品的底部發熱盤浸入水中。
2. 清潔時以濕毛巾或軟布抹拭，嚴禁使用硬物或金屬刷，以免擦傷鍋身表面。
3. 如本產品通電後有異聲或較大振動，切勿自行拆卸維修，應先切斷電源，然後立即請專業技術人員或聯絡本公司進行維修。

## 技術規格

型號	GMD-305
電壓	220 V / 50 Hz
功率	300 W
容量	5 L
烹調溫度範圍	65-100 °C
產品尺寸	(H) 330 (W) 329 (D) 285 mm
玻璃鍋尺寸	(H) 145 (Ø) 265 mm
重量	4.6 kg

產品規格及設計如有變更，恕不另行通知。  
中英文版本如有出入，一概以中文版為準。

本產品使用說明書以 [www.germanpool.com](http://www.germanpool.com) 網上版為最新版本。

## 保用條款

此保用提供德國寶產品之機件在正常使用下壹年保用（自購買日起計算）。

- \* 貴戶須在購機十天內，以下列其中一種方式向本公司登記資料，保用手續方正式生效：

- 1) 填妥本公司網頁內之保用登記表格

[www.germanpool.com/warranty](http://www.germanpool.com/warranty)

- 2) 填妥保用登記卡，郵寄至本公司。



另請填妥以下表格並與正本發票一併保存，以便維修時核對資料。用戶提供之所有資料必須正確無誤，否則免費保用將會無效。  
Please fill out the form below. This information and the original purchase invoice will be required for any repairs. Warranty will be invalidated if information provided is found to be inaccurate.

型號 Model No. : ☐ GMD-305

機身號碼 Serial No. : \_\_\_\_\_ 發票號碼 Invoice No. : \_\_\_\_\_

購買商號 Purchased From : \_\_\_\_\_ 購買日期 Purchase Date : \_\_\_\_\_

1. 未能出示購買發票正本者，將不獲免費維修服務。
2. 用戶應依照說明書的指示操作。本保用並不包括：
  - 上門安裝、檢驗、維修或更換零件之人工以及一切運輸費用；
  - 因天然與人為意外造成的損壞（包括運輸及其他）；
  - 電源接合不當、不依說明書而錯誤或疏忽使用本機所引致之損壞。
3. 於下列情況下，用戶之保用資格將被取消：
  - 購買發票有任何非認可之刪改；
  - 產品被用作商業或工業用途；
  - 產品經非認可之技術人員改裝或加裝任何配件；
  - 機身編號被擅自塗改、破壞或刪除。
4. 總代理有權選擇維修或更換配件或其損壞部份。
5. 產品一經被轉讓，其保用即被視作無效。

## Warranty Terms & Conditions

Under normal operations, the product will guarantee a 1-year full warranty provided by German Pool (effective from the date of purchase).

- \* This warranty is not valid until customer registration information is received by our Service Centre within 10 days of purchase via one of the following means:

- 1) Visit our website and register online:  
[www.germanpool.com/warranty](http://www.germanpool.com/warranty)

- 2) Complete all the fields on the attached Warranty Card and mail it back to our Customer Service Centre.



1. Customer who fails to present original purchase invoice will not be eligible for free warranty service.
2. Customer should always follow the operating instructions. This warranty does not apply to:
  - labour costs for on-site installation, check-up, repair, replacement of parts and other transportation costs;
  - damages caused by accidents of any kind (including material transfer and others);
  - operating failures resulting from applying incorrect voltage, improper usage, and unauthorized installations or repairs.
3. This warranty is invalid if:
  - the purchase invoice is modified by an unauthorized party;
  - the product is used for any commercial or industrial purposes;
  - the product is repaired or modified by unauthorized personnel, or unauthorized parts are installed;
  - the serial number is modified, damaged or removed from the product.
4. German Pool will, at its discretion, repair or replace any defective part.
5. This warranty will be void if there is any transfer of ownership from the original purchaser.

## 客戶服務及維修中心

中國香港

九龍大業街59號

三湘九龍灣貨運中心地下B室

電話：+852 2333 6249

傳真：+852 2356 9798

電郵：[repairs@germanpool.com](mailto:repairs@germanpool.com)

中國澳門

澳門俾利喇街145號

寶豐工業大廈3樓

電話：+853 2875 2699

傳真：+853 2875 2661

## Customer Service & Repair Centre

Hong Kong, China

Unit B, G/F, Sunshine Kowloon Bay

Cargo Centre, 59 Tai Yip Street, Kowloon

Kowloon, Hong Kong

Tel : +852 2333 6249

Fax : +852 2356 9798

Email : [repairs@germanpool.com](mailto:repairs@germanpool.com)

Macau, China

3/F, Edificio Industrial Pou Fung,

145 Rua de Francisco Xavier Pereira,

Macau

Tel : +853 2875 2699

Fax : +853 2875 2661

此保用只適用於香港及澳門 | This warranty is valid only in Hong Kong and Macau



## German Pool (Hong Kong) Limited

### Hong Kong, China

Room 113, Newport Centre Phase II, 116 Ma Tau  
Kok Road, Tokwawan, Kowloon, Hong Kong.  
Tel: +852 2773 2888  
Fax: +852 2765 8215

### Mainland China

8th, Xinxiang Road, Wusha Industrial Park,  
Daliang, Shunde, Foshan, Guangdong  
Tel: +86 757 2980 8308  
Fax: +86 757 2980 8318

### Macau, China

3/F, Edificio Industrial Pou Fung,  
145 Rua de Francisco Xavier Pereira, Macau  
Tel: +853 2875 2699  
Fax: +853 2875 2661



香港《S MARK》  
安全認證



中國游泳池/泳電行業  
十大影響力品牌



CEO非凡品牌大賞



香港優質商標



香港工商業獎



2007  
最具價值  
創建品牌企業獎



香港中小企業  
最佳拍攝大獎



香港消費者推獎品牌



香港《Q標》  
優質服務證書



香港名牌十年成就獎  
HONG KONG TOP BRAND TEN YEAR  
ACHIEVEMENT AWARD

© All rights reserved. Copying, reproducing or using the contents of this manual is not allowed without prior authorization from German Pool, violators will be prosecuted.