

GERMAN  
POOL

 


德國寶

## 座檯式電磁爐

Free-Standing Induction Cooker

# GIC-BS2800WB

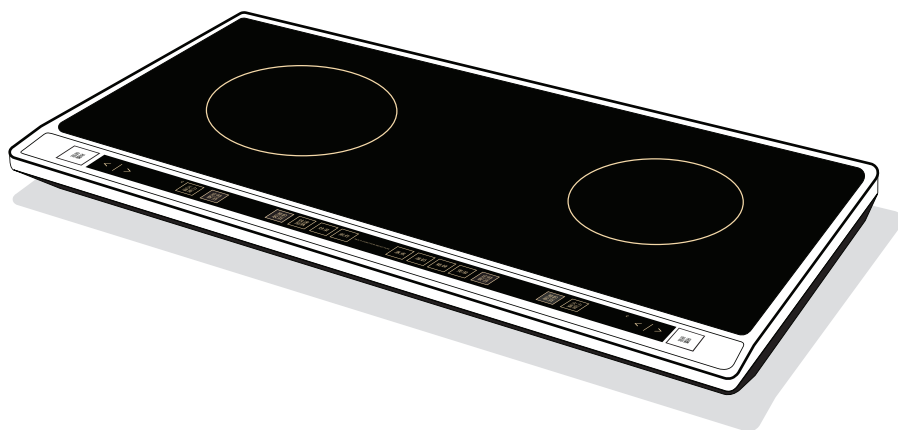

在使用之前請詳細閱讀「使用說明書」及「保用條例」，並妥為保存。

Please read these instructions and warranty information carefully before use and keep them handy for future reference.

## 使用說明書 OPERATING INSTRUCTIONS

# 目錄 TABLE OF CONTENTS

---

注意事項 SAFETY CAUTION	3
產品結構 PRODUCT STRUCTURE	3
操作說明 OPERATIONS	6
鍋具 COOKWARE	7
清潔及保養 CARE & MAINTENANCE	8
常見故障及處理 TROUBLE SHOOTING	9
技術規格 TECHNICAL SPECIFICATIONS	10

 
# 注意事項 SAFETY CAUTION



- 請單獨使用13A以上的插座，切勿使用萬用插座或與其他電器共用插座
  - 請勿用水直接沖洗電磁爐，以免破壞電器絕緣性能
  - 請勿於排氣口及吸氣口插入鐵絲、金屬等物件，以免發生觸電危險
  - 切勿讓鍋具猛烈撞擊陶瓷面板
  - 電磁爐水平放置後，側面及背面距離牆壁必須預留最少10cm或以上，切勿堵塞出風口、將爐身鑲嵌或密封
  - 請勿將電磁爐放置在煤氣爐、煤油爐等熱源附近使用
  - 請勿將鐵片或其他鐵磁性材料直接放在陶瓷面板上加熱，避免因高溫而產生灼傷危險
  - 空鍋具請勿加熱過久，以免發生危險，鍋具溫度過高時，電磁爐會自動停止加熱
  - 切勿加熱罐頭等密封的東西，否則會因罐頭內氣體受熱膨脹導致爆炸
  - 不使用電磁爐時，請將電源插頭由插座拔出
- Single 13A power jack must be used. Do not share power jack with other appliances
  - Do not apply water directly on to induction cooker
  - Do not insert any wire or metal objects through air inlet or venting outlet of the induction cooker
  - Please avoid collision between cook top panel and cookware
  - A distance of at least 10 cm between the wall and the sides of induction cooker must be reserved for venting purposes
  - Do not place or use induction cooker near any heat source
  - Do not heat up any metal plate or other magnetic objects on the cook top
  - Do not heat empty cookware for an extended time. Overheating of cookware will cause damages and injuries
  - Do not heat un-opened cans on cook top. It may cause explosion
  - When induction cooker is not in use, unplug the power cord

## 產品結構 PRODUCT STRUCTURE


### I. 外型 Main Body

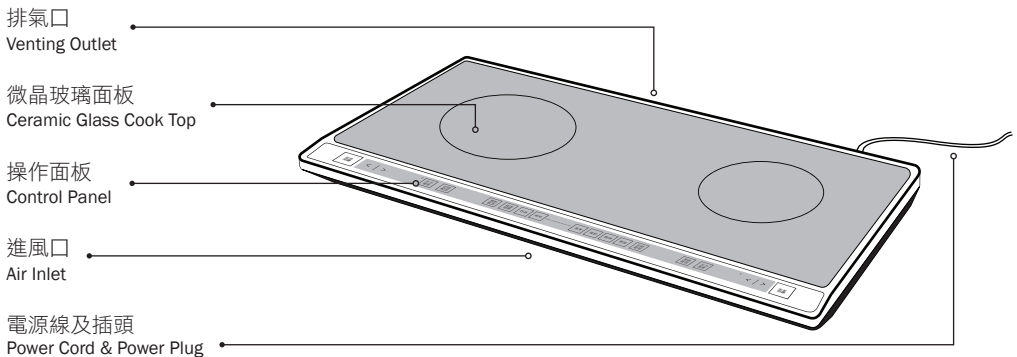

# 產品結構 PRODUCT STRUCTURE

## II. 控制面板 Control Panel
 
### 大爐頭(左) Large Hob (Left)

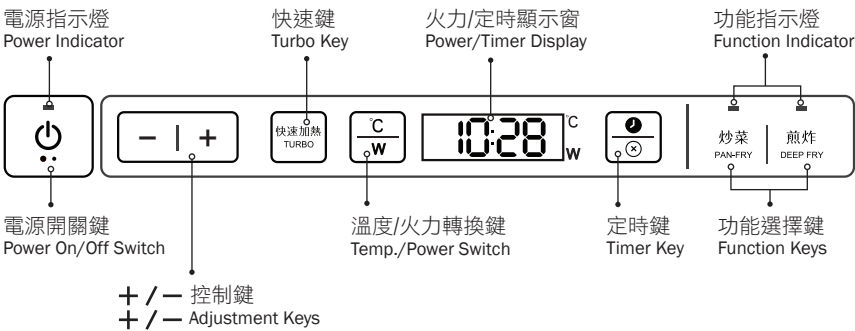

## III. 按鍵說明 Touch Keys

### “電源開關” 鍵

於待機狀態下，按此鍵可啟動電磁爐，接著可按其中一個“功能選擇”鍵選擇烹調功能以啟動運作。再按此鍵一次便可轉回待機狀態。

### “POWER ON / OFF” Key

Under standby mode, press this button to turn on cooker. Select cooking function by pressing one of the “Function” keys. Press this button again to return to standby mode.

### “+ / -” 控制鍵

於“加熱狀態”下，按此兩鍵可設定火力（功率）大小。於“定時狀態”下，按此兩鍵可設定預約關機時間及預約開機時間。

### “+ / -” Adjustment Keys

Under “Heating” mode, press to set power level; Under “Timer Mode” (i.e. when “Timer” Indicator lights up), press to adjust timer

## 功率參考 Power Level

 
段數	1	2	3	4	5	6	7	8
大爐頭功率 (約數)	200 W	400 W	800 W	1200 W	1600 W	2000 W	2200 W	2600 W
小爐頭功率 (約數)	200 W	400 W	800 W	1000 W	1100 W	1200 W	1400 W	1600 W

## 溫度參考 Temperature Level

段數	1	2	3	4	5	6	7	8
大爐頭溫度 (約數)	80 °C	110 °C	140 °C	170 °C	200 °C	230 °C	250 °C	280 °C
小爐頭溫度 (約數)	80 °C	110 °C	140 °C	170 °C	200 °C	230 °C	250 °C	280 °C

# 產品結構 PRODUCT STRUCTURE

## 小爐頭(右) Small Hob (Right)

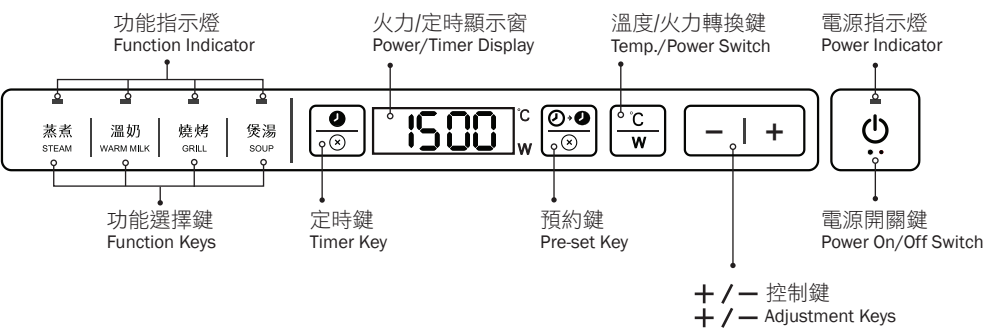

### “定時關機” 鍵

於加熱狀態下，按此鍵切換至“定時狀態”，顯示窗會先顯示預設火力（大爐頭1600W；小爐頭1200W），調校火力後，再按此鍵一次以顯示定時時間（預設設定為1分鐘）。“0:01”開始閃動，定時設定完成後（範圍：0-120分鐘），再按此鍵確認設定。

### “TIMER” Key

Press TIMER key to switch to “Timer” mode. The digits will be flashing to indicate power level (large hob 1600W; small hob 1200W). After adjusting power level, press TIMER key again. Timer clock “0:01” will be displayed (default setting: 1 min). After adjusting timer, press TIMER key once again to confirm.

### “預約開機” 鍵（小爐頭適用）

按此鍵切換至“預約狀態”，顯示窗會先顯示預設火力（1200W），調校火力後，再按此鍵一次以顯示預約開機時間（預設為00:00分鐘，可調範圍：1 min -24hr）。設定完成後，再按此鍵確認設定。

### “PRE-SET” Key (Small Hob Only)

Press PRE-SET key to switch to “Pre-set” mode. The digits will be flashing to indicate power level (1200W). After adjusting power level, press PRE-SET key again. “00:00” will be displayed (adj. range: 1 min to 24 hr ). After adjusting the desired starting time, press PRE-SET key once again to confirm.

### “快速加熱” 鍵（大爐頭適用）

- 按 1 下：電磁爐設定在火力1600W 運作
- 按 2 下：電磁爐設定在火力2800W 運作

### “TURBO” Key (Large Hob Only)

- Press 1 time: cooker will operate at 1600W
- Press 2 times: cooker will operate at 2800W

# 產品結構 PRODUCT STRUCTURE

## “功能選擇” 鍵

### 大爐頭功能

#### 煎炸

8段火力調校，電子屏幕會顯示相應功率。開始設定為第5段火力 (1600W)

#### 炒菜

8段火力調校，電子屏幕會顯示相應功率。開始設定為第5段火力 (1600W)

按 1 下：火力1600W

按 2 下：火力2600W

### 小爐頭功能

#### 蒸煮

8段火力調校，電子屏幕會顯示相應功率。開始設定為第4段火力 (1000W)

#### 溫奶

低火力 (200W) 加熱。完成加熱後電磁爐會發出聲響，並轉為保溫狀態，移鍋即自動關機

#### 燒烤

8段溫度調校，電子屏幕會顯示相應溫度。開始設定為第5段溫度 (200°C)

#### 煲湯

8段火力調校，電子屏幕會顯示相應功率。開始設定為第7段火力 (1400W)

## “FUNCTION” Keys

### Large Hob Functions

#### DEEP FRY

8-level power control; default – level 5 (1600W)

#### STIR-FRY

8-level power control; default – level 5 (1600W)

Press 1 time: power level set to 1600W

Press 2 times: power level set to 2600W

### Small Hob Functions

#### STEAM / BOIL

8-level power control; default – level 4 (1000W)

#### WARM MILK

Automatic low-power heating (200W by default).

When heating is over, a “beep” sound will be heard, and induction cooker with switch to “Keep Warm” mode until cookware is removed from cook top

#### GRILL


8-level temperature control; default – level 5 (200 °C)


#### SOUP


8-level power control; default – level 7 (1400W)


# 操作說明 OPERATIONS

1. 將電源插頭插入插座，電磁爐發出“嗶”一聲，表示電磁爐進入待機狀態。


2. 將鍋具置於玻璃面板中央，按  “開 / 關” 鍵。

3. 按  鍵，設定火力段數。  
註：若沒有放置鍋具或鍋具不合適，電磁爐不會進行加熱，並會發出警號。

4. 烹調完成後，按  “開 / 關” 鍵，使電磁爐轉回待機狀態，然後將電源插頭從插座拔出。
1. Connect power. A “beep” sound will be heard. Induction cooker enters “Standby” status.

2. Place cookware at the centre of cook top. Press  “ON / OFF” key.

3. Press  to adjust power level.  
Note: if there is no cookware or cookware not appropriate, cooker will not start, and a buzzing sound is heard.

4. When finish, press  “ON / OFF” key to switch to “Standby” status, and then unplug power.

# 鍋具 COOKWARE

請使用德國寶電磁爐專用或認可之鍋具，儘量不要選用其他代替品，以免性能受影響。  
Please use only German Pool authorized cookware or cookware recommended by us. Any unauthorized cookware may affect induction cooker's heating capacity and quality.

## 適用的各類鍋具 Appropriate

材質：鐵、鑄鐵或導磁不銹鋼。  
Material: Metal, ferromagnetic stainless steel or cast iron.

形狀：底部直徑12 cm以上之平底鍋。鍋具底部直徑不宜超過25 cm，鍋具加上食物的重量不宜超過6 kg。  
Shape: Flat bottom with a diameter of 12 cm or more. Cookware bottom diameter should not exceed 25 cm and must not weight over 6 kg (with food).



磁性不銹鋼水壺  
Ferromagnetic  
Stainless Steel  
Cooking Pot



鐵製炸鍋  
Ferromagnetic  
Stainless Steel  
Water Pot



磁性不銹鋼鍋  
Metal Frying Pan



鐵製彩色鍋  
Metal Saucepan



磁性鐵製琺瑯壺  
Ferromagnetic  
Metal Water Pot



鐵板/鑄鍋  
Cast Iron Grilling  
Pan

## 不適用的各類鍋具 Not Appropriate

材質：非鐵質金屬、陶瓷、玻璃以及鋁或銅為底的鍋具。  
Material: Non-metallic, non-ferromagnetic, ceramic, glass, aluminum or brass.

形狀：底部凹凸差距過大的，底部直徑小於8 cm。  
Shape: Bottom not flat or too bumpy, or bottom diameter smaller than 8 cm.



鋁製水壺  
Aluminum Water Pot



耐熱玻璃鍋  
Glass Pot



陶瓷鍋  
Ceramic Pot



底部凹凸不平  
Pot With Non-Flat/  
Curved Bottom



鍋底附腳  
Pot With Bumpers



底部直徑過小  
Pot Bottom Too  
Small

# 清潔及保養 CARE & MAINTENANCE

---

- 清潔前必須先拔下電源插頭
- 任何污垢必須即時清理
- 必須待爐面完全冷卻才進行清潔
- 清潔面板時，先以扭乾的濕布擦拭；若仍未能除掉污漬，可用中性去污粉或洗潔精擦拭，然後再用濕布擦拭即可
- 清潔電磁爐機身時，先用柔軟濕布擦拭；若有油污難以清除時，用中性洗潔精擦拭後再用濕布擦拭乾淨
- 切勿用水直接沖洗或將機身浸入水中清洗
- 切勿使用堅硬之刷子刷洗爐面
- 切勿使用有機溶劑或苯等化學藥品擦拭電磁爐
- Power plug must be disconnected before cleaning
- Any stain or deposit on the cook top surface must be cleaned off immediately before re-using
- Cleaning must be done when cook top surface has completely cooled down
- If stain is minimal, wipe off with a dry cloth. If stain remains, clean cook top with a moist sponge (soaked with mild soap) and then wipe again with a clean cloth
- To clean the body of induction cooker, wipe with a soft clean cloth. If stain remains, clean with a moist sponge (soaked with mild soap) and then wipe with a clean cloth
- Do not immerse induction cooker into water
- Do not clean cook top with any rough cloth or abrasive tool
- Do not use organic solvents or any cleaning products that contain chemicals such as Benzene



# 常見故障及處理 TROUBLE SHOOTING

使用中如發現電磁爐操作上有問題，在送回本公司維修前請先依照下表進行檢查：  
When you run into any problem operating this product, use the table below to troubleshoot the problem.  
If the problem persists, contact our Repair & Customer Service Centre.

故障現象	檢查要點	處理方法
接通電源，按“開/關”鍵，電磁爐無反應。 Power is connected, but the induction cooker does not respond when the On/Off button is pressed.	<ul style="list-style-type: none"><li>· 是否停電? Is there a power shortage in your area?</li><li>· 府上的自動開關或保險絲是否發生短路? Is there a short circuit in the power source of your home?</li><li>· 插頭是否脫落或接觸不良? Is the power plug too loose or not connected well?</li></ul>	電源恢復後再使用。 Try again after power supply resumes.  檢查短路原因，排除後才使用。 Find out the cause of short circuit and eliminate it before switching on the cooker again. 插牢或更換插孔後使用。 Re-connect the plug or replace the power jack.
蜂鳴器斷續鳴響且鍋具不加熱。 Buzzer beeps continuously and pan is not heated.	<ul style="list-style-type: none"><li>· 鍋具不適應? Is the pan not suitable for induction cooking?</li><li>· 鍋具位置不合適? Is the pan positioned properly?</li></ul>	使用電磁爐適用之鍋具。 Use an appropriate pan.  將鍋具放置在電磁爐面板中心。 Position the pan in the centre of cook top.
在正常運作時停止加熱。 Induction cooker stops heating during normal operations.	<ul style="list-style-type: none"><li>· 是否空鍋或溫度過高? Is the pan empty or cooking temperature too high?</li><li>· 吸氣口或排氣口是否堵塞? Are the air inlet and outlet being blocked?</li><li>· 室溫是否太高? Is the surrounding temperature too high?</li></ul>	防止乾燒，降溫後自動繼續。 Avoid operating cooker with an empty pan. Let cooker cool down before switching it on again. 待機件冷卻後才使用，並注意保持內部通風。 Remove obstruction from the vent. Let induction cooker cool down and try again. 室溫降低後才使用。 Try again after the room cools down.
保溫失控。 Temperature fluctuates.	<ul style="list-style-type: none"><li>· 鍋底是否凹凸不平? Is pan bottom not flat?</li></ul>	更換平底鍋具後使用。 Replace pan with a flat-bottomed one.

\* 以上為常見故障的判斷與檢查，只供用戶作參考之用。  
Above table enlists the most common problems regarding the operations of the product and their possible causes as well as suggested solutions. It is strictly for users' reference only.  
\* 如遇故障切勿自行修理，避免發生危險及對機件造成損害，請立即找專業技術人員或聯絡本公司作出適當維修。  
Should there be any product malfunction or breakdown, DO NOT repair it yourself. Contact our Repair & Customer Service Centre or consult a licensed technician immediately.

故障代碼 Code	故障說明 Error	故障代碼 Code	故障說明 Error
E0	無鍋具/鍋具不合適 No cookware / Inappropriate cookware	E7	爐面過熱 Cook top overheat
E3*	電壓過高 Voltage over-loaded	E8	機內溫度感應器短路 Short circuit of internal temperature sensor
E4*	電壓過低 Voltage under-loaded	E9	機內溫度感應器斷路 Open circuit of internal temperature sensor
E5	爐面感應器斷路 Open circuit of cook top sensor	EA	機內溫度過高 Internal overheat
E6	爐面感應器短路 Short circuit of cook top sensor		

\* E3及E4並不屬於機器故障，待電壓恢復後（187V—250V）即可使用。  
E3 & E4 are not product errors. Operation can be resumed when power voltage returns to normal rating (187V - 250V).

# 技術規格 TECHNICAL SPECIFICATIONS

---

型號 Model	GIC-BS2800WB
電壓 Voltage	220 V
頻率 Frequency	50 Hz
功率 Power	2.8 kW
電流 Electric Current	12.8 A
爐頭數目 Number of Hobs	2
顏色 Colour	Black
尺寸 Dimensions	(H) 70 mm (W) 660 mm (D) 355 mm
淨重 Net Weight	7.7 kg
總重 Gross Weight	8.4 kg

產品規格及設計如有變更，恕不另行通知。一切均以產品實物為準。  
Specifications are subject to change without prior notice.

請填妥以下空格並與發票一併保存，以便維修時核對資料。用戶提供本公司之所有資料必須正確無誤，否則免費保用將會無效。  
Please fill out the form below. This information and the purchase invoice will be required for any repairs. Warranty will be invalid if information provided is found to be inaccurate.

型號 Model No. : ☐ GIC-BS2800WB

機身號碼 Serial No. : \_\_\_\_\_ 發票號碼 Invoice No. : \_\_\_\_\_

購買商號 Purchased From : \_\_\_\_\_ 購買日期 Purchase Date : \_\_\_\_\_

## 保用條例

在正常使用下，此保用提供德國寶嵌入式電磁爐之機件壹年及微晶玻璃面板五年保用(自購買日起計算)，但不包括安裝、維修、保養及更換零件之人工或其他費用。

## Warranty Terms & Conditions

Our Repairs & Customer Service Centre will provide rectification of any defect of manufacturing materials free of charge given that such defect is reported within 12 months from purchase date. (For built-in induction cookers, an extra 4-year warranty on ceramic glass cook top panel is included)

\* This warranty is not valid until Customer's registration information is returned to and received by our Service Centre within 10 days of purchase via one of the following methods:

- 1) Visit our website and register online:  
[www.germanpool.com/warranty](http://www.germanpool.com/warranty)
- 2) Complete all fields on the attached Warranty Card and mail it back to our Repairs & Customer Service Centre along with a photocopy of the purchase invoice (Warranty Card and invoice copy will not be returned to Customer)

\* 貴戶須在購機十天內，以下列其中一種方式向本公司登記資料，保用手續方正式生效：

- 1) 填妥本公司網頁內之保用登記表格  
[www.germanpool.com/warranty](http://www.germanpool.com/warranty)
- 2) 填妥保用登記卡，並連同購機發票之副本一併郵寄到維修及客戶服務部  
(本公司將不發還發票副本或登記卡)

\* 此保用不包括：非家庭性質用途；塑膠配件；因意外而造成的損壞(包括運輸及其它)；任何附件及輔助裝置；以及一切因人為、電源接合不當、不依說明書而錯誤或疏忽使用本機、經非本公司認可之安裝及不適當維修等等所引致之損壞。

\* Product must be used solely for domestic purposes. Customer should always follow the operating instructions. This warranty does not apply to: replacement of accessories and parts; damages caused by incorrect voltage, improper operations, unauthorized installation or repairs as well as accidents.

\*\* 保用只在香港、九龍、新界區有效，東涌、愉景灣及離島，需額外收取交通費用。

\*\* Service area includes Hong Kong Island, Kowloon and New Territories. Repairs in Tung Chung, Discovery Bay or other areas are subject to extra service charge.

## 客戶服務部

德國寶(香港)有限公司  
香港九龍土瓜灣馬頭角道116號  
新寶工商中心高層地下2-4號室  
電話：+852 2333 6249  
傳真：+852 2355 7100  
電郵：[repairs@germanpool.com](mailto:repairs@germanpool.com)

## Customer Service Centre

German Pool (Hong Kong) Limited  
Room 2-4, Upper G/F,  
Newport Centre, 116 Ma Tau Kok Road,  
Tkwawan, Kowloon, H.K.  
Tel : +852 2333 6249  
Fax : +852 2355 7100  
Email : [repairs@germanpool.com](mailto:repairs@germanpool.com)

此保用證只適用於香港

This warranty card is valid only in Hong Kong

GERMAN  
POOL



德國寶

## 德國寶（香港）有限公司 German Pool (Hong Kong) Limited

香港九龍土瓜灣馬頭角道116號新寶工商中心高層地下2-4號室  
Room 2-4, Upper Ground Floor, Newport Centre  
116 Ma Tau Kok Road, Tokwawan, Kowloon, Hong Kong

電話 (Tel) :  
+852 2333 6245  
+852 2773 2888

傳真 (Fax) :  
+852 2765 8215  
+852 2365 6009

電郵 (E-mail) :  
info@germanpool.com



© 版權所有。未獲德國寶授權，不得翻印、複製或使用本單張作任何商業用途，違者必究。

© All rights reserved. Copying, reproducing or using the contents of this leaflet is not allowed without prior authorization from German Pool, violators will be prosecuted.

[www.germanpool.com](http://www.germanpool.com)