

Free-standing Ceramic Cooktop

GID-RS22T



Online Warranty Registration



Please read these instructions and warranty information carefully before use and keep them handy for future reference.

## USER MANUAL



請即進行保用登記！

有關保用條款細則，請看本說明書最後一頁。

Please register your warranty information now!

For Warranty Terms & Conditions,  
please refer to the last page of this user manual.

## Contents

Safety Instructions	4
Product Structure	6
Operating Instructions	7
Cleaning & Maintenance	11
Error Code	12
Technical Specification	13
Warranty Terms & Conditions	23

## Safety Instructions

---

1. Before use, please remove the plastic bag, poly foam, leaflet, etc. to ensure that the body is clean, the bottom vent is not blocked, and the power cord or plug is not damaged. If the furnace surface is damaged, please contact our Customer Service & Repair Center for replacement to avoid danger.
2. When using the product, it is necessary to use sockets with various technical indicators meeting the standards.
3. Please use a pot of suitable size. The diameter of the pot shall not exceed 225mm and the pot shall be placed at the center of the furnace surface to avoid touching the silicon rubber ring.
4. Please make sure the furnace and bottom of pot are dry and clean before heating. Do not heat an empty or dry pan. During cooking, do not leave for a long time.
5. The product must be used in a place that children cannot touch.
6. The product shall be placed on the level bench, avoid being used on the blanket, tablecloth or film to prevent the bottom vent from being blocked.
7. The product will heat up quickly after opening. Please do not touch or move the product during the working process of the product and during "Hot" flashing. The furnace surface is still hot during heating and after shutdown. Please keep away from combustibles such as paper, rags, curtains or cleaners to avoid fire!
8. Do not heat paper, film, plastic and other inflammables on the furnace surface to avoid fire!

## Safety Instructions

---

9. Do not directly heat food on the furnace surface, especially the food with much oil and grease is easy to cause fire when heated!
10. After shutdown, the fan is in normal operation when it is working for heat dissipation. Please do not pull out the plug immediately. Please do not touch or clean the furnace surface during the display screen flashing "Hot".


# Product Structure

## Body



- 1. Ceramic Glass Panel
- 2. Control Panel
- 3. Power Cord
- 4. Silicon rubber ring

## Control Panel

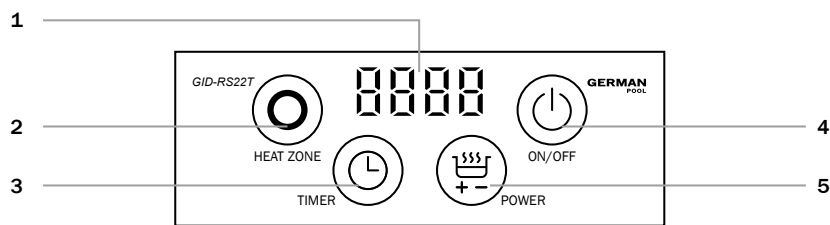

- 1. LED DISPLAY
- 2. HEAT ZONE
- 3. TIMER
- 4. ON/OFF
- 5. POWER

# Operating Instructions

## Utensil Selection

- 1. There are not too many restrictions on the selection of pots and pans. All pots and pans made of high temperature resistant materials can be used.
- 2. It is recommended to use smooth flat-bottomed pots and pans with size not more than 225mm in diameter, and placed in the center of the furnace surface for heating, to avoid touching the silicon rubber ring.
- 3. Before heating, please make sure that the bottom of the pot is dry and clean, and there is no residue to avoid affecting the effectiveness of the product.

## Quick Start Guide

BUTTON		FUNCTION
	ON/OFF	Turns the product ON and OFF
	HEAT ZONE	Select DOUBLE RING, INNER RING ONLY or OUTER RING ONLY Mode
	POWER	Adjust POWER OUTPUT
	TIMER	Set COUNTDOWN TIMER

### Turns Product ON and OFF

After plugging in the power source, product will emit a "BEEP" sound, and Display Screen will show "----". Press , Display Screen will show "00", and product will enter into STANDBY MODE.




### or to enter into COOKING MODE

In STANDBY MODE, press or , product will enter into DEFAULT COOKING MODE of DOUBLE RING /2200W, Display Screen will show "2200".

# Operating Instructions

## Select HEAT ZONE

When product is in COOKING MODE, press  to select among DOUBLE RING, INNER RING ONLY and OUTER RING ONLY modes.

HEAT ZONE	DEFAULT POWER OUTPUT	INDICATOR LIGHT DISPLAY
DOUBLE RING	2200W	 Light On
INNER RING ONLY	1100W	 Light Off
OUTER RING ONLY	1100W	 Light On

# Operating Instructions

## Adjust POWER OUTPUT





When product is in COOKING MODE, press  to adjust desired POWER OUTPUT.

HEAT ZONE	DEFAULT POWER OUTPUT	INDICATOR LIGHT DISPLAY
DOUBLE RING	300W-2200W	300W, 600W, 900W, 1200W, 1400W, 1600W, 1800W, 2000W, 2200W
INNER RING ONLY	100W-1100W	100W, 300W, 500W, 700W, 900W, 1100W
OUTER RING ONLY	100W-1100W	100W, 300W, 500W, 700W, 900W, 1100W

## Operating Instructions

---

### Set **TIMER COUNTDOWN**

When product is in COOKING MODE, press  to set **TIMER COUNTDOWN**. Each short-press of  will add 1 minute to Timer, each long-press of  will add 10 minutes to Timer. (Minimum timer countdown is 1 minute, maximum is 3 hours). 3 seconds after Timer is set, product will automatically start countdown, Timer and Power Level will display in alternation. To cancel the Timer, press and hold  for 3 seconds.

### **WARNING:**

- When product is in use, **DO NOT** allow children near product to avoid danger!
- When product is in use, **DO NOT** touch or move product to avoid getting burnt!
- **DO NOT** unplug the product immediately after use, because the built-in fan system is still dissipating residual heat!
- Even after product is turned off, the product is still hot to the touch. **DO NOT** touch the product for at least 1 hour, to allow product to cool down completely. **DO NOT** touch, move or clean the product until it has completely cooled down!
- **UNDER NO CIRCUMSTANCES** should food be cooked directly on the cooktop surface. This product should be used with appropriate cookware at all times!
- **DO NOT** place any flammable items on top or around the vicinity of the product, such as paper, film, plastic, cloth, curtain etc. to avoid fire hazard!

## Cleaning & Maintenance

---

1. Before cleaning and maintenance, make sure product has been unplugged and the furnace surface has cooled to normal temperature!
2. Do not wash product directly with water or immerse product in water.
3. If there is cooking residue on the furnace surface, gently scrape off with a ceramic hob scraper at a 45 degree angle, and then wipe clean with a soft wet cloth. It can also be wiped with neutral detergent. Do not use corrosive liquid or steel scrubber for cleaning to avoid damaging the surface of the ceramic glass panel.

## Error Code

ERROR CODE	ANALYSIS	SOLUTION
E1	Voltage lower than 90V	Check power supply first; if problem remains, contact Customer Service and Repair Centre
E2	Voltage higher than 280V	Check power supply first; if problem remains, contact Customer Service and Repair Centre
E3	Sensor detects temperature higher than 750°F	Contact Customer Service and Repair Centre
E4	1. Temperature sensor is short circuited or open circuited during operation 2. Heating plate is burnt out and product cannot heat up 3. Fuse is cut 4. PCB power board malfunction	Contact Customer Service and Repair Centre
E5	PCB power board overheated	Restart the product; if problem remains, contact Customer Service and Repair Centre
E6	Sensor detects short circuit or open circuit	Contact Customer Service and Repair Centre
E7	Fan malfunction	Contact Customer Service and Repair Centre

### ATTENTION:

If problem remains unsolved, please contact Customer Service and Repair Centre. Disassembly and repair of this product must only be conducted by qualified professionals.

## Technical Specification

Model	GID-RS22T
Rated Voltage/Frequency	220V / 50Hz - 60Hz
Rated Power	2,200W
No. of hob	1
Product Dimensions	(H)80 (Φ)280 mm
Net Weight	Approx. 1.9kg
Gross Weight	Approx. 2.2kg
Power Range	100W - 2,200W

- All information in this manual is for reference only. If there are any errors or omissions, the specifications produced by the factory shall prevail. Specification is subjected to change without prior notice.
- If there is any inconsistency or ambiguity between the English version and the Chinese version of this manual, the Chinese version shall prevail.
- Refer to [www.germanpool.com](http://www.germanpool.com) for the most up-to-date version of the Operating Instructions.

## 目錄

安全注意事項	15
產品結構	16
使用說明	17
清潔及維護	20
故障檢修	21
技術規格	22
保用條款	23


## 安全注意事項

1. 使用前請把膠袋、發泡膠、宣傳單等易燃物移開，確保機身乾淨，底部通風口沒有堵塞，電源線或插頭沒有破損。如發現爐面破損請聯繫客戶服務及維修中心更換，以免造成危險。
2. 使用產品時，必須使用各項技術指標符合標準的插座。
3. 請使用合適尺寸的鍋具。鍋具的直徑不能超過225mm，並把鍋具置於爐面圓心處進行加熱，避免觸及矽膠圈。
4. 加熱之前請確保鍋底和爐面乾淨。切勿空鍋或者乾鍋進行加熱。烹飪期間需有人看管，請勿長時間離開。
5. 產品必須放在小孩不能觸碰的地方使用。
6. 產品應放置在水平工作檯使用，避免在地攤、枱布、薄膜上使用，以防底部通風口被堵塞。
7. 產品開啟後會快速升溫。在產品工作過程中以及關機後閃爍「Hot」期間，請勿觸碰或移動產品！加熱期間和關機之後爐面依然高溫，請遠離易燃物，如紙張、抹布、窗簾或清潔劑，以免發生火災！
8. 請勿在爐面上加熱紙張、薄膜、塑膠等易燃物，以免發生火災！
9. 請勿在爐面直接加熱食物，尤其是多油、多油脂的食物受熱容易引起火災！
10. 停機之後，內置風扇仍在工作散熱屬正常操作，請勿馬上拔出插頭。顯示屏閃爍「Hot」期間請勿觸碰或清潔爐面。




# 產品結構

## 機身

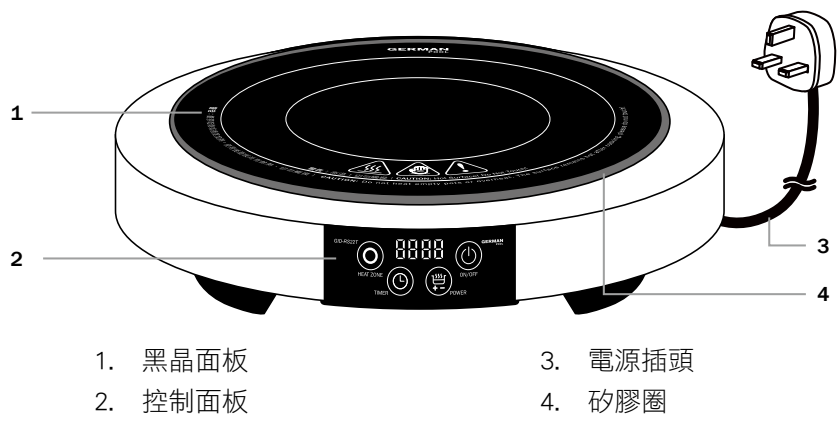

## 控制面板

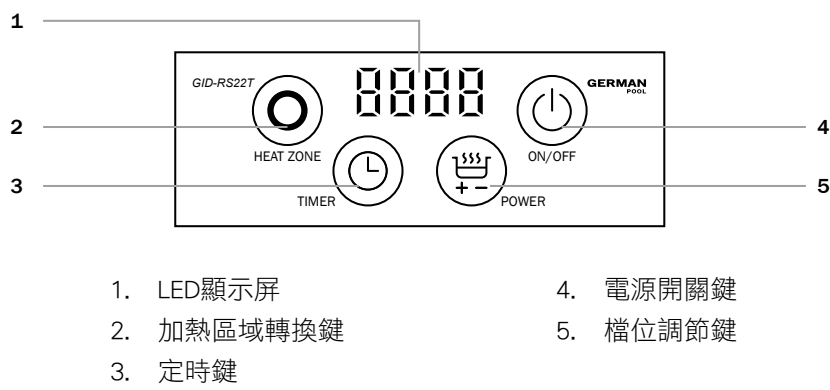

# 使用說明

## 鍋具選擇

- 對於鍋具的選擇沒有過多限制，採用耐高溫材料的鍋具都可使用。
- 建議使用平底且底部光滑的鍋具，直徑不可超過225mm並置於爐面圓心進行加熱，避免觸及矽膠圈。
- 加熱前請確保鍋具底部乾淨，沒有殘留物以免影響使用。

## 按鍵說明

按鍵		功能
	電源開關鍵	開機/關機
	加熱模式轉換鍵	調整雙環、單內環、單外環加熱模式
	火力調節鍵	調整加熱功率
	定時鍵	設定定時關機

### 開啟電源


插上電源後，蜂鳴器發出聲響一聲，LED顯示屏顯示「----」，按 ，LED顯示屏顯示「00」，產品進入「待機狀態」。

### 或 進入烹調狀態

待機狀態下按 或 ，進入「烹調狀態」，預設雙環2200W加熱模式，LED顯示屏顯示對應功率。

## 使用說明

### 🕒 選擇加熱模式

「烹調狀態」下按  可轉換雙環、單內環及單外環加熱模式。

加熱模式	預設加熱功率	指示燈
雙環模式	2200W	 常亮
單內環模式	1100W	 熄滅
單外環模式	1100W	 常亮





### 🔧 選擇加熱模式

「烹調狀態」下按  可調整加熱功率。

加熱模式	可調功率範圍	可調功率級數
雙環模式	300W-2200W	300W, 600W, 900W, 1200W, 1400W, 1600W, 1800W, 2000W, 2200W
單內環模式	100W-1100W	100W, 300W, 500W, 700W, 900W, 1100W
單外環模式	100W-1100W	100W, 300W, 500W, 700W, 900W, 1100W

## 使用說明

### 🕒 設定定時關機

「烹調狀態」下按  設定定時關機，每短按  一下增加1分鐘，長按  以10分鐘遞增（最長可設定3小時，最短1分鐘）。設定完成3秒後進入時間倒數，時間和功率替換顯示。時間倒數期間，長按  3秒可取消定時。

### ⚠️ 警告：


- 使用本產品時，嚴禁小孩走近，免生危險！
- 使用本產品時，嚴禁任何人士觸碰或移動產品以避免燙傷！
- 關機後請勿馬上拔出插頭，內置風扇在工作散熱！
- 關機後爐面仍然高溫，嚴禁任何人士觸碰或移動產品以避免燙傷！必須靜置至少1小時以上，待爐面徹底冷卻後方可移動或進行清潔！
- 任何情況下切勿在爐面直接加熱食物，必須配合鍋具進行烹調！
- 切勿在爐面或爐邊四周擺放任何易燃物，如紙張、薄膜、塑膠、洗碗布、窗簾布等，以免發生火災！

## 清潔及維護

- 1. 清潔和保養產品時，必須拔出插頭，並待爐面降至常溫下進行！
- 2. 請勿把產品直接用水沖洗，或在水中浸泡。
- 3. 當爐面有結焦物時，可用電陶爐專用刮刀呈45度進行剷除，再用柔軟濕抹布擦拭。也可用中性清潔劑進行擦拭。請勿使用腐蝕性液體或者鋼絲球進行清潔，以免損壞黑晶面板表面。

## 故障檢修

代碼	原因分析	處理方法
E1	電壓低於90V	先檢查電源；如無法處理，聯絡客戶服務及維修中心
E2	電壓高於280V	先檢查電源；如無法處理，聯絡客戶服務及維修中心
E3	溫度感測器高於華氏750度	聯絡客戶服務及維修中心
E4	1. 在加熱情況下，溫度感測器短路或者開路 2. 發熱盤燒壞，無法加熱 3. 保險管燒斷 4. 電源主機板損壞	聯絡客戶服務及維修中心
E5	電源主機板溫度過高	關機後重啟；如無法處理，聯絡客戶服務及維修中心
E6	溫度感測器短路或開路	聯絡客戶服務及維修中心
E7	風扇失靈	聯絡客戶服務及維修中心

 **注意：**  
如無法順利排除故障，請與客戶服務及維修中心聯絡，嚴禁非專業人員對本機拆卸。

# 技術規格

型號	GID-RS22T
電壓/頻率	220V / 50Hz - 60Hz
額定總功率	2,200W
爐頭數目	1
機身尺寸	(H)80 (Φ)280 mm
淨重	約1.9kg
總重	約2.2kg
功率調校範圍	100W - 2,200W

- 所有資料僅供參考，如有錯漏以廠方生產的規格為準。產品規格及設計如有變更，恕不另行通知。
- 中英文版本如有出入，一概以中文版為準。
- 本產品使用說明書以www.germanpool.com網上版為最新版本。

# 保用條款

此保用提供德國寶產品之機件在正常使用下壹年保用 (自購買日起計算)。

\* 貴戶須在購機十天內，以下列其中一種方式向本公司登記資料，保用手續方正式生效：

1) 填妥本公司網頁內之保用登記表格  
[www.germanpool.com/warranty](http://www.germanpool.com/warranty)

2) 填妥保用登記卡，郵寄至本公司。



另請填妥以下表格並與正本發票一併保存，以便維修時核對資料。用戶提供之所有資料必須正確無誤，否則免費保用將會無效。 Please fill out the form below. This information and the original purchase invoice will be required for any repairs. Warranty will be invalidated if information provided is found to be inaccurate.

型號 Model No. : GID-RS22T

機身號碼 Serial No. : \_\_\_\_\_ 發票號碼 Invoice No. : \_\_\_\_\_

購買商號 Purchased From : \_\_\_\_\_ 購買日期 Purchase Date : \_\_\_\_\_

1. 未能出示購買發票正本者，將不獲免費維修服務。
2. 用戶應依照說明書的指示操作。本保用並不包括：
  - 上門安裝、檢驗、維修或更換零件之人工以及一切運輸費用；
  - 因天然與人為意外造成的損壞 (包括運輸及其他)；
  - 電源接合不當、不依說明書而錯誤或疏忽使用本機所引致之損壞。
3. 於下列情況下，用戶之保用資格將被取消：
  - 購買發票有任何非認可之刪改；
  - 產品被用作商業或工業用途；
  - 產品經非認可之技術人員改裝或加裝任何配件；
  - 機身編號被擅自塗改、破壞或刪除。
4. 總代理有權選擇維修或更換配件或其損壞部份。
5. 產品一經被轉讓，其保用即被視作無效。

# Warranty Terms & Conditions

Under normal operations, the product will guarantee a 1-year full warranty provided by German Pool (effective from the date of purchase).

\* This warranty is not valid until customer registration information is received by our Service Centre within 10 days of purchase via one of the following means:

1) Visit our website and register online:  
[www.germanpool.com/warranty](http://www.germanpool.com/warranty)

2) Complete all the fields on the attached Warranty Card and mail it back to our Customer Service Centre.



1. Customer who fails to present original purchase invoice will not be eligible for free warranty service.
2. Customer should always follow the operating instructions. This warranty does not apply to:
  - labour costs for on-site installation, check-up, repair, replacement of parts and other transportation costs;
  - damages caused by accidents of any kind (including material transfer and others);
  - operating failures resulting from applying incorrect voltage, improper usage, and unauthorized installations or repairs.
3. This warranty is invalid if:
  - the purchase invoice is modified by an unauthorized party;
  - the product is used for any commercial or industrial purposes;
  - the product is repaired or modified by unauthorized personnel, or unauthorized parts are installed;
  - the serial number is modified, damaged or removed from the product.
4. German Pool will, at its discretion, repair or replace any defective part.
5. This warranty will be void if there is any transfer of ownership from the original purchaser.

# 客戶服務及維修中心

中國香港

九龍灣啟興道1-3號

九龍貨倉10樓

電話：+852 2333 6249

傳真：+852 2356 9798

電郵：repairs@germanpool.com

中國澳門

澳門俾利喇街145號

寶豐工業大廈3樓

電話：+853 2875 2699

傳真：+853 2875 2661

# Customer Service & Repair Centre

Hong Kong, China

10/F, Kowloon Godown

1-3 Kai Hing Road, Kowloon Bay,

Kowloon, Hong Kong

Tel : +852 2333 6249

Fax : +852 2356 9798

Email : repairs@germanpool.com

Macau, China

3/F, Edificio Industrial Pou Fung,

145 Rua de Francisco Xavier Pereira,

Macau

Tel : +853 2875 2699

Fax : +853 2875 2661

此保用只適用於香港及澳門 | This warranty is valid only in Hong Kong and Macau

## German Pool (Hong Kong) Limited

### Hong Kong, China

Room 113, Newport Centre Phase II, 116 Ma Tau  
Kok Road, Tokwawan, Kowloon, Hong Kong  
Tel: +852 2773 2888  
Fax: +852 2765 8215

### Mainland China

8th, Xinxiang Road, Wusha Industrial Park,  
Daliang, Shunde, Foshan, Guangdong  
Tel: +86 757 2980 8308  
Fax: +86 757 2980 8318

### Macau, China

3/F, Edifício Industrial Pou Fung,  
145 Rua de Francisco Xavier Pereira, Macau  
Tel: +853 2875 2699  
Fax: +853 2875 2661



香港名牌十年成就獎



香港卓越品牌



香港服務名牌



香港星級品牌



香港卓越品牌2008-09



© All rights reserved. Copying, reproducing or using the contents of this manual is not allowed without prior authorization from German Pool, violators will be prosecuted.