

WiFi Smart Cordless Kettle | KTW-115-SC
KTW-117-SC



Online Warranty Registration



Please read these instructions and warranty information carefully before use and keep them handy for future reference.

USER MANUAL

Table of Contents

Warnings & Safety Precautions	03
Product Structure	05
Operation Instructions	06
Cleaning & Maintenance	18
Technical Specification	18
Warranty Terms & Conditions	35


Warnings & Safety Precautions

WARNING!

Read all instructions carefully before using this product.

- This product is for domestic indoor use only. If this product is used for any commercial, industrial, rental or other purposes, product warranty will be VOIDED.
 - This product is not intended for use by children or persons with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of this product by an adult responsible for their safety.
 - Mind your children and DO NOT let children play with this product.
 - Cleaning and user maintenance shall not be made by children without supervision.
 - Check the voltage indicated on the rating label before using this product.
 - If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid hazards.
 - Unplug this product from the power source before cleaning and maintenance.
 - Contact German Pool authorized service technician for repair or maintenance of this product.
-
1. Before connecting this product to the power supply, check that the voltage indicated on this product rating label (on the underside of the kettle base) corresponds with the voltage in your home. If this is not the case, contact your dealer and stop using this product.
 2. DO NOT let the cord hang over the edge of a table or touch a hot surface.
 3. DO NOT place this product on or near a hot gas or electric burner or in a heated oven.
 4. DO NOT operate this product without anything in it (ie. without water) to avoid damaging the heating elements.
 5. Ensure that this product is used on a firm and flat surface out of reach of children; this will prevent this product from overturning and avoid damage or injury.
 6. To protect against a fire, electric shock or personal injury, DO NOT immerse cord, electric plugs or kettle in water or other liquids.
 7. While water is boiling, or just after the water has been boiled, avoid contacting with steam from the spout.
 8. Always take care to pour boiling water slowly and carefully without tipping the kettle too fast.
 9. Be careful of refilling when the kettle is hot.
 10. Children should be supervised to ensure that they DO NOT play with this product.
 11. DO NOT touch the hot surface. Use the handle. Position the lid so that steam is directed away from the handle. DO NOT remove the lid while the water is boiling.
 12. The attached base cannot be used for other than its intended use.
 13. Extreme caution must be used when moving an appliance containing hot water.
 14. This product is not a toy. DO NOT let the children play with it.
 15. This product is for household use only. DO NOT use outdoors.
 16. The use of accessories, which are not recommended by the appliance manufacturer, may result in fire, electric shock or personal injury.
 17. Unplug this product from the outlet when not in use and before cleaning. Allow this product to cool before putting on or taking off parts, and before cleaning this product.
 18. To disconnect, turn any control to "off", then remove plug from outlet.
 19. If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.

Warnings & Safety Precautions

20. DO NOT use this product for other than its intended use.
 21. The kettle can only use with the stand provided.
 22. If the kettle is overfilled, boiling water may spill out.
 23. Always ensure the lid is closed and DO NOT open it while the water is boiling. Scalding may occur if the lid is removed during heating water.
 24. This product is intended to be used in household and similar applications such as:
 - Staff kitchen areas in shops, offices and other working environments;
 - Farm houses;
 - By clients in hotels, motels and other residential type environments;
 - Bed and breakfast type environments.
 25. Avoid spillage on the connector.
 26. This product can be used by children aged from 8 years old and above if they have been given supervision or instruction concerning use of this product in a safe way and if they understand the hazards involved. Cleaning and user maintenance shall not be made by children unless they are older than 8 years old and supervised. Keep this product and its cord out of reach of children who are younger than 8 years old.
 27. Potential injury from misuse: This product is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
 28. Always disconnect the power supply when this product is not in use.
 29. The heating element surface may have residual heat after use. Please be careful!
-  This marking indicates that this product should not be disposed with other household wastes. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To dispose of this product, please return it to your local recycling centre.

Product Structure



Operation Instructions

Before Initial Use

It is recommended that you give this product a cleaning before using it for the first time. Fill the kettle with water (DO NOT exceed the maximum water mark), boil it once and discard the water, then wipe the interior with a moist cloth.



WARNING!

- DO NOT exceed the maximum water mark when filling the kettle with water.
- When using this product to boil water, make sure the lid is properly closed in order to avoid getting scalded by the hot steam.


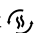
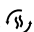
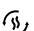
How To Use

1. Fill the kettle with water (DO NOT exceed the maximum water mark), place the lid on.
2. Connect the Base Stand to the power source, place kettle on the base stand. Buzzer will beep 1 time to indicate power is connected, and LED Display will show current water temperature.

Boil Mode

Tap On/Off Key  once, Boil Indicator Light  lights up constant, Temperature Display blinks 3 times, and water will automatically boil to 100°C.


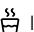
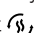
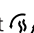
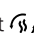
Warm Mode

1. Tap Temperature Key  repeatedly to cycle among preset temperature of 40°C, 55°C, 80°C or 90°C, Keep Warm Indicator Light  lights up constant, Temperature Display blinks 3 times and water automatically keeps warm at selected temperature.
2. If current water temperature is below your selected temperature, product will automatically heat to then maintain at your selected temperature.
3. If current water temperature is above your selected temperature, Keep Warm Indicator Light  blinks, product will automatically cool to then maintain at your selected temperature, after which Keep Warm Indicator Light  will light up constant.

Note:

In Warm Mode, water will not boil to 100°C first.

Boil Then Keep Warm

1. Tap On/Off Key , Boil Indicator Light  lights up constant.
2. Tap Temperature Key repeatedly to cycle among preset temperature of 40°C, 55°C, 80°C or 90°C, Keep Warm Indicator Light , lights up constant, Temperature Display blinks 3 times then water automatically boils to 100°C.
3. After water is boiled, Keep warm Indicator Light  blinks. Water will cool to and maintain at your selected temperature, after which the Keep Warm Indicator Light  will light up constant.

Operation Instructions

Dry Boil Protection Mechanism

If kettle is empty or when all the water has evaporated, the kettle will automatically activate Dry Boil Protection Mechanism and cut off power. User must allow the kettle to cool down completely before adding water and boiling again.

Connecting The Product To WiFi

This product can be controlled via smartphone with German Pool Smart Control APP.

A. How To Set Up The APP

1. Connect your phone to WiFi then scan the QR Code below to download and install German Pool Smart Control APP.



Apple IOS System
App Store




Android System
Google Play


2. Open the APP and click “Sign Up” to register your account (Pic 1).
3. Enter your email address, click “Get Verification Code” and a one-time verification code (OTP) will be sent to your email (Pic 2).
4. Enter OTP, set up your password then click “Done” (Pic 3).



 (Pic 1)

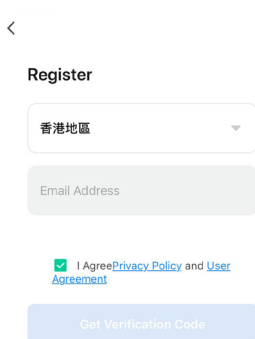

(Pic 2)

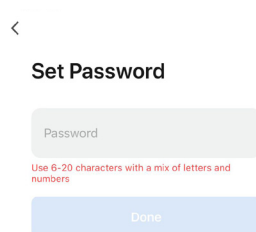 




(Pic 3)



Operation Instructions

B. Pairing Sequence

1. Click “+” on the upper right corner of the APP homepage, then click “Add Device” (Pic 4).
2. Tap and hold the kettle’s On/Off key  for 5 seconds until buzzer beeps for 5 times and both Boil  and Warm , indicator lights blink.
3. APP will show “Discovering devices...”. When you see the water kettle’s icon, click “Add” (Pic 5), APP will show a large icon of the water kettle, click “+” on the right.
4. Select WiFi name and enter your WiFi password, then click “Next” (Pic 6). water kettle and APP will automatically pair up (Pic 7).

Note:

 
During Pairing Sequence, if APP shows an exclamation mark icon, it means pairing is unsuccessful. Please repeat the steps in “B. Pairing Sequence” to pair again.

5. When pairing is completed, APP will show “Added successfully”. Click “Done” on the upper right corner to return to homepage (Pic 8).


Note:

- The product can only be paired to one account at a time. If another user pairs their smartphone to the product, the previous account will lose their control of the product.
- User who has already been paired can share their control rights with other users. For details, see “C. Sharing Control”.


Operation Instructions

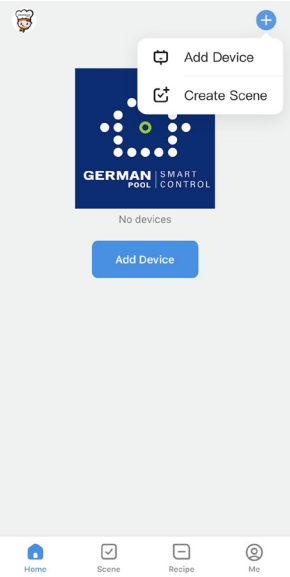


(Pic 4)

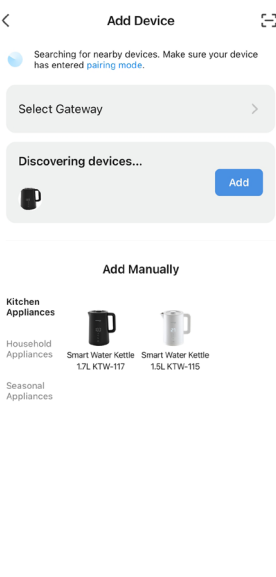 


(Pic 5)

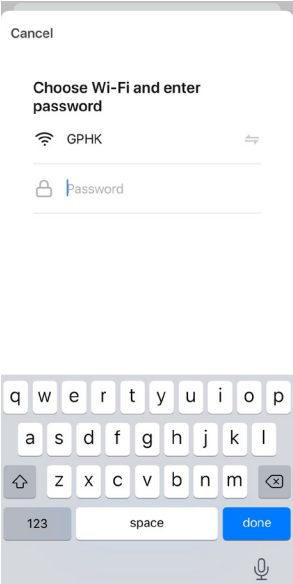 

(Pic 6)

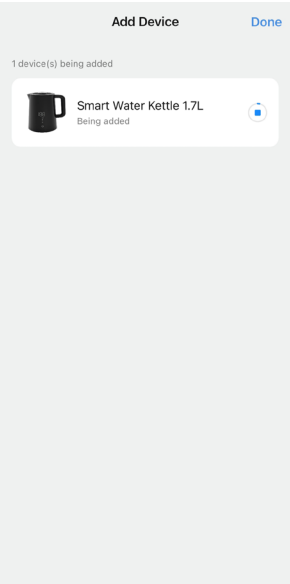 


(Pic 7)

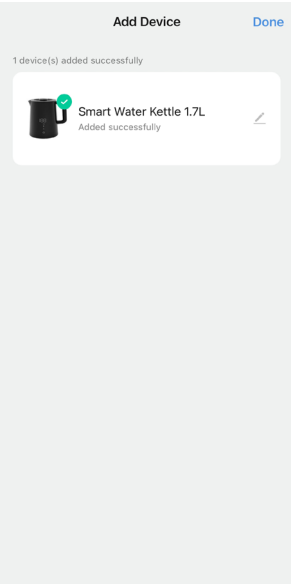 


(Pic 8)

Operation Instructions


C. Sharing Control

- 1. On the water kettle's homepage, click “Settings” on the upper right corner (Pic 9), then click “Share Device” (Pic 10).
- 2. Click “Add Sharing”, set the number of users you wish to share control with, then click “Share with the Account Smart Control” (Pic 11).
- 3. Enter that account's registered email address, then click “Done” on the upper right corner.

 
Note:
On the “Share Device” page, you can add or delete other accounts' control rights.

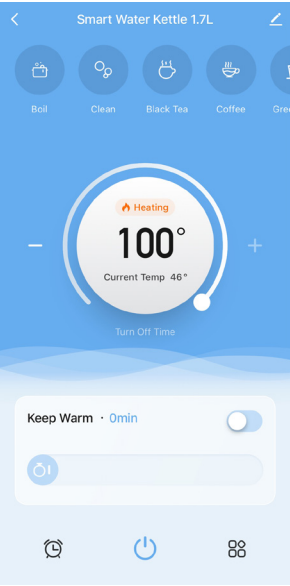

(Pic 9)

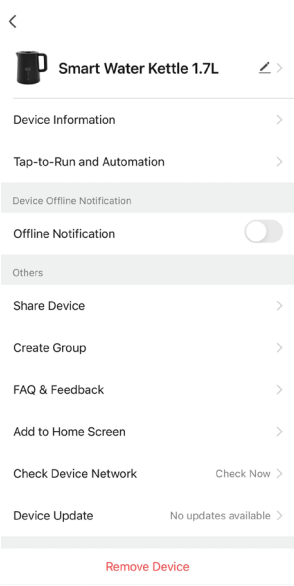 


(Pic 10)

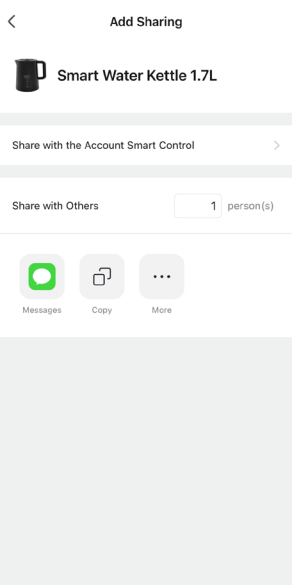 

(Pic 11)

Operation Instructions

 When using the APP

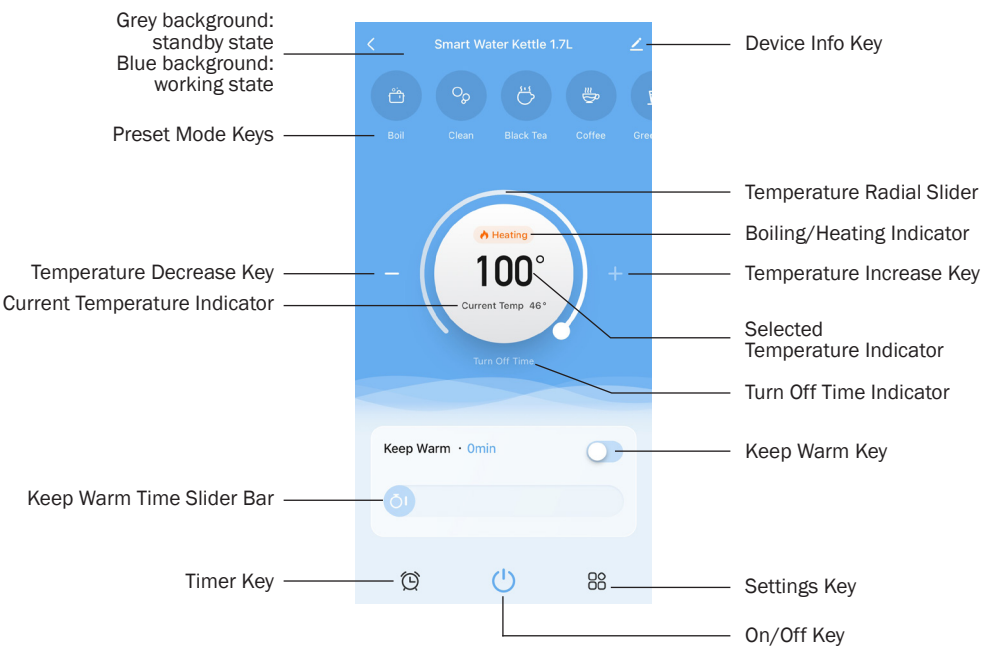







Preset Mode Keys








Icon	Mode	Icon	Mode
	Boil (100 °C) Boils water to 100 °C then returns to standby state		Green Tea (85 °C) Heats to 85 °C, Water will cool to and maintain at 70 °C for 2 hours
	Clean (100 °C) Boils water to 100 °C for 3 minutes then returns to standby state		Honey (60 °C) Heats to 60 °C then automatically keeps warm for 2 hours
	Black Tea (98 °C) Heats to 98 °C, Water will cool to and maintain at 70 °C for 2 hours		Milk Powder (45 °C) Heats to 45 °C then automatically keeps warm for 2 hours
	Coffee (90 °C) Heats to 90 °C, Water will cool to and maintain at 70 °C for 2 hours		

Operation Instructions

 Note:

- In standby state, if you tap any of the Preset Mode keys, you will have to tap On/Off Key  afterwards to turn on the kettle.
- When using Black Tea  / Coffee  / Green Tea  / Honey  / Milk Powder  preset modes, if the water temperature is higher than the selected mode's temperature, the kettle will not heat up, and will directly keep warm to the selected mode's temperature.
- Keep Warm time for all preset modes is adjustable from 0 min-12 hours.


Preset Mode Keys

	Icon	Function
	On/Off Key	<ul style="list-style-type: none"> • Tap this key to turn the kettle on and off • If user has not set Preset Mode, and water temperature is already 100°C, this key will not respond
	Temperature Radial Slider	<ul style="list-style-type: none"> • Press and slide to adjust target temperature • Temperature is adjustable from 0-100°C
	Temperature Decrease / Increase Keys	<ul style="list-style-type: none"> • Decrease key decreases temperature by 1°C increments; Increase Key increases temperature by 1°C increments • Temperature is adjustable from 0-100°C
Keep Warm 	Keep Warm Key	<ul style="list-style-type: none"> • Tap key to turn Keep Warm Function on and off • When Keep Warm Function is turned on, default keep warm time is 2 hours
	Keep Warm Time Slider Bar	<ul style="list-style-type: none"> • Press and slide to adjust Keep Warm time • Time is adjustable from 0 min-2 hours
	Settings Key	<ul style="list-style-type: none"> • Tap this key to enter Settings page to adjust Turn Off Time or Function • Turn Off Time: Set countdown time for the kettle. During countdown, kettle will keep warm at user's selected temperature; when countdown finishes, the kettle will automatically turn off (product will turn off even if Keep Warm Time hasn't finished) • Function: Select Heat to heat temperature directly to your chosen temperature, or select Boil to boil water to 100°C then lower to your chosen temperature
	Timer Key	<ul style="list-style-type: none"> • Tap this key to enter Timer page

Operation Instructions


Boil Alert

 1. When water is boiled, App will show “Boil Alert”.
2. To use this function, turn on “Notifications” on your phone, then turn on “App Notifications” on your German Pool Smart Control App:
Click “Me” on the App homepage, then click “Settings ⚙️” on the upper right corner to turn on “App Notifications”.




Timer Function ⌚

 
1. Tap Timer Key ⌚ to enter Timer page, tap + to enter Timer Setting page (Pic 1).
2. In Timer Setting page, you can set the following parameters (Pic 2):
 - a. Select timer turn-on time.
 - b. Day of the week: choose whether you want to repeat this timer (can select one or more days; when timer is turned on, kettle will heat up at your selected day and time).
 - c. Remark: write down remarks of that particular timer for your own reference.
 - d. Mode: choose Boil 🍵 / Clean 🧼 / Black Tea 🍵 / Coffee ☕ / Green Tea 🍵 / Honey 🍯 / Milk Powder 🍼 / DIY Mode.
 - e. Keep Warm: Set keep warm duration.
 - f. After setting all parameters, tap Save on the upper right corner to confirm your setting.
3. Return to Timer page. To set more timers, tap + at the bottom of the page (Pic 3).

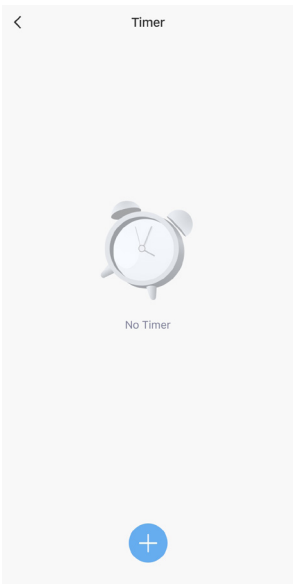

(Pic 1)

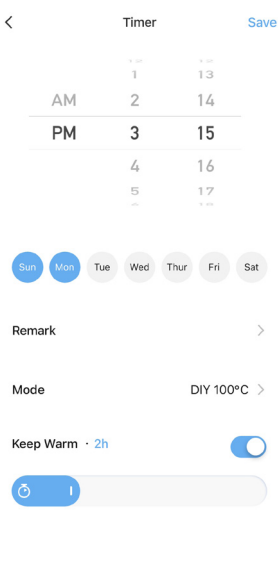 

(Pic 2)

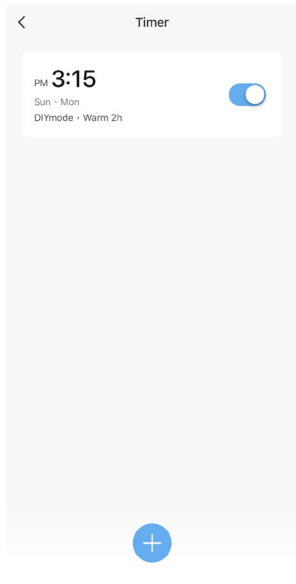 

(Pic 3)

Operation Instructions

Using Voice Control

This product can be voice-controlled via Amazon Alexa.

Note:

In order to use Alexa Voice Service to control this product, user must first connect this product with German Pool Smart Control APP (instructions provided on P.7 “Connecting The Product To WiFi” section) and download Amazon Alexa onto your smartphone.

 
A. Download & Set Up Amazon Alexa Account

1. Download and install Amazon Alexa APP onto your smartphone through App Store (IOS) or Google Play (Android).
2. After installation is complete, create or sign in your Amazon Alexa account (pic 1).


B. Installing Alexa Skills

1. After setting up your Amazon Alexa account, click “Home” (pic 2).
2. Click “Devices”, scroll to the bottom and click “Your Smart Home Skills” (pic 3), click “Enable Smart Home Skills”.
3. Click magnifying glass on upper right corner and search for “Smart Control”, click on the German Pool icon (pic 4), then click “ENABLE TO USE”.
4. Amazon Alexa will link with German Pool Smart Control, click “Agree and link” (pic 5). Amazon Alexa will auto link all devices available for use in German Pool Smart Control (pic 6), then follow the steps on your phone to install all the devices.

Operation Instructions

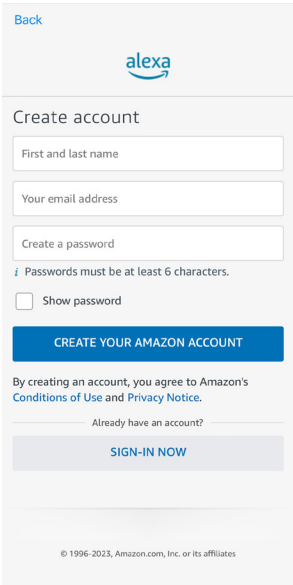

(Pic 1)

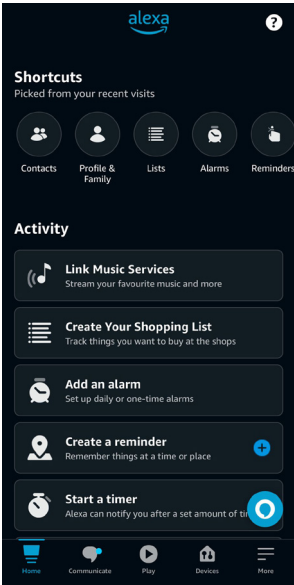 


(Pic 2)




(Pic 3)



 (Pic 4)

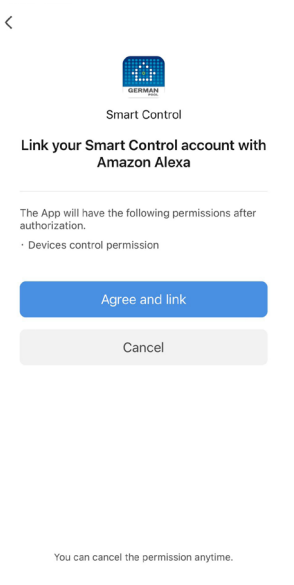

(Pic 5)

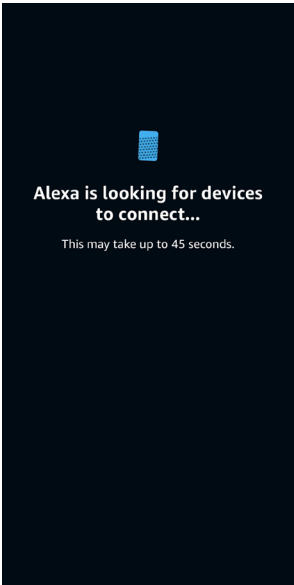 

(Pic 6)

Operation Instructions

C.Using Alexa Voice Control


1. As the devices in German Pool Smart Control are named in Chinese by default, and Amazon Alexa can only read English names, please set up English names for all of the devices, eg. "Water Kettle" for this product.
2. In "Devices" homepage, click "All Devices" (pic 7) and you will see a list of all the devices installed on your phone (pic 8).
3. Click on the product you want to rename, click "Edit Name" and type in a new name for this product (pic 9).

Note:


- When renaming a product, it is recommended to choose simple and distinct English name for it so it will not be confused with other products.
 - The new name you assign to your product will only apply to Amazon Alexa, and will not be synced to German Pool Smart Control.
4. Amazon Alexa supports the following functions. It is recommended to following these phrasings to achieve the best results:

Function	Command & Description
Turn on product	"Alexa, turn on <assigned name>" Kettle will turn on and boil to 100°C.
Setting the water temperature	"Alexa, set <assigned name> to <temperature>" The kettle must be turned on for Alexa to carry out this command. Turn on the kettle then set the water temperature, eg. "Alexa, set Smart Kettle to fifty", and the kettle will heat to 50°C then turn off.
Checking the current water temperature	"Alexa, what is the temperature of <assigned name>" Alexa will announce the water kettle's current temperature.
Turn off product	"Alexa, turn off <assigned name>" Kettle will turn off (please note that it will still be connected to the power source).

 
Operation Instructions

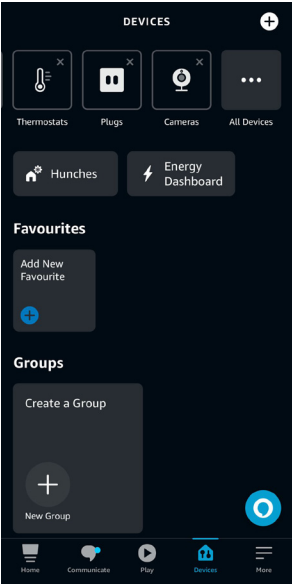

(Pic 7)

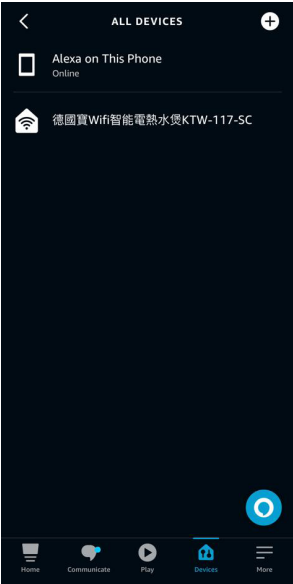 

(Pic 8)

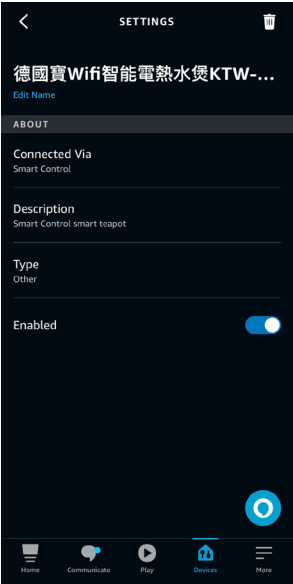 

(Pic 9)

Cleaning & Maintenance

WARNING!

- Disconnect the product from the power source and allow it to cool down completely before cleaning and maintenance.
 - DO NOT immerse the kettle, power cord or power base in water, or allow moisture to contact with these parts.
1. Wipe the exterior of the kettle with a damp cloth or cleaner, DO NOT use toxic cleaners.
 2. DO NOT use chemical, steel, wooden or abrasive cleaners to clean the outside of the kettle to prevent gloss loss.
 3. Periodically descale the kettle as mineral deposits in tap water may form scale at the bottom of the kettle interior and cause the product to operate inefficiently.
 4. When using commercially available descaling agents, make sure to follow the instructions on the package; or alternatively, follow the instructions below to use white vinegar for descaling:
 - 4.1. Fill the kettle with 3 cups of white vinegar, then add enough water to cover the bottom of the kettle completely. Leave the solution to soak for 24 hours.
 - 4.2. Discard the solution, then fill the kettle with clean water, boil and then discard the water. Repeat several times until the odor of vinegar has been flushed away. Remove any stains remaining inside the spout with a damp cloth.
 5. If product will not be used for a prolonged period, unplug the plug and wind the cord under the base stand, and store in a dry ventilated place away from sunlight.

Technical Specification

Model	KTW-115-SC	KTW-117-SC
Voltage	220-240 V~	220-240 V~
Frequency	50-60 Hz	50-60 Hz
Power	1850-2200 W	1850-2200 W
Product Dimensions	(H) 254 (W) 216 (D)153 mm	(H) 258.7 (W) 208 (D)162 mm
Net Weight	1.1 kg	1.1 kg
Capacity	1.5 L	1.7 L

- Specification is subject to change without prior notice.
- If there is any inconsistency or ambiguity between the English version and the Chinese version, the Chinese version shall prevail.
- Refer to www.germanpool.com for the most update version of the user manual.

目錄

警告及注意事項	20
---------	----

產品結構	21
------	----

使用說明	22
------	----

清潔與保養	34
-------	----

技術規格	34
------	----

保用條款	35
------	----

警告及注意事項

⚠ 警告！

使用本產品前，請仔細閱讀所有說明。

- 本產品只限家居室內日常使用，如產品作任何商業、工業、出租或其他用途，保用證即告失效。
- 請勿讓兒童或身體有殘障、精神不健全及對本產品缺乏經驗或知識的人士單獨使用本產品；如需使用，必須要在負責任的成年人監管下方可使用。
- 應照顧好兒童，確保他們不會玩耍本產品。
- 無成年人監管下，勿讓兒童清潔及維護本產品。
- 使用前，請先檢查所有電壓是否與本產品標籤上的電壓相符。
- 如果電源線損壞，為免發生意外，電源線必須由廠方、廠方指定的維修中心或同等合格的技術人員進行更換。
- 清潔或檢查本產品前，必須先關機及拔掉插頭。
- 請聯繫德國寶授權的技術人員進行維修或保養本產品。

1. 在將本產品連接到電源之前，請檢查銘牌上指示的電壓（在產品底座下方）是否與家中的電壓相符。如果不是這種情況，請聯繫您的經銷商並停止使用本產品。
2. 嚴禁讓電線懸掛在桌子或櫃檯的邊緣或觸摸灼熱的表面。
3. 嚴禁放在或靠近熱煤氣或電爐或加熱的焗爐。
4. 嚴禁在沒有任何東西（產品內沒有水）的情況下操作本產品，以免損壞熱元件。
5. 必須確保本產品放在兒童無法觸及的堅固平整的表面上；這將防止本產品翻轉，避免損壞或受傷。
6. 為防止火災、電擊或人身傷害，嚴禁將電線、插頭或主機浸在水中或其他液體中。
7. 當水燒開時，或剛燒開水後，避免與壺嘴的蒸汽接觸。
8. 必須小心慢慢地倒開水，嚴禁把水壺倒得太快。
9. 如本產品熱了，再加滿水必須小心。
10. 必須將本產品置於兒童或無行為能力的人接觸範圍以外，兒童及無行為能力的人必須在監護人監督下使用本產品。
11. 嚴禁接觸熱表面，必須使用本產品的手柄。確保壺蓋位置正確使蒸氣不會冒至手柄。煲水期間嚴禁打開壺蓋。
12. 所附底座只能用於指定用途，嚴禁用於其他用途。
13. 當本產品含有熱水，在移動時必須格外小心。
14. 本產品不是玩具，嚴禁讓孩子們玩它。
15. 本產品僅限於家用，嚴禁在室外使用本產品。
16. 本產品必須在供應商提供的底座上使用，否則可能導致火災、觸電或人身傷害。
17. 在不使用時和清洗前必須將本產品從插座上拔下。在安裝或拆卸部件之前，以及清洗本產品前，必須讓水壺冷卻。
18. 若要斷開連接，請將所有控制項關閉，然後從牆上的插座上拔除插頭。
19. 如電源線損壞，必須由製造商或其服務代理或類似的合格人員更換，避免危險。
20. 嚴禁將本產品用於非預期用途。
21. 本產品必須連同底座一併使用。

警告及注意事項

22. 如果本產品裡的水太多，開水可能會溢出來。
23. 必須確保壺蓋是關閉的，嚴禁在水沸騰時提起壺蓋。如果在煲水過程中打開壺蓋，可能會發生燙傷。
24. 本產品適用於家庭和類似的用途，例如員工在商店、辦公室和其他工作環境的廚房區域；農場的房子；酒店、汽車旅館等住宅類型的環境；民宿類型的環境。
25. 必須避免連接器洩漏。
26. 如果 8 歲及以上的兒童接受過有關以安全方式使用本產品的監督或指導，並且他們瞭解所涉及的危險，則可以使用本產品。兒童不得進行清潔和維護，除非他們已年滿8歲並受到監督。請將本產品及其電源線放在8歲以下兒童接觸不到的地方。
27. 如果身體、感官或精神能力下降或缺乏經驗和知識的人已接受有關以安全方式使用本產品的監督或指導並瞭解所涉及的危險，則可以使用本產品。
28. 本產品在不使用時必須切斷電源。
29. 發熱元件表面在使用後可能留有餘熱，請小心！



此標誌表明本產品不應與其他家庭垃圾一起處理。為防止不受控制的廢物處置可能對環境或人類健康造成危害，負責任地回收廢物以促進材料資源的可持續再利用。要退回您使用過的產品，請聯繫購買產品的零售商，他們可以將此產品用於環境安全回收。

產品結構



使用說明

初次使用

初次使用本產品前，建議先為本產品進行清潔。將水注滿（嚴禁超過最高水位線）後煮沸一次，將水倒掉後用濕布擦拭內膽。

⚠ 警告！

- 注水時嚴禁超過最高水位線。
- 使用本產品煲水時，必須蓋好壺蓋，避免蒸氣燙傷。





使用步驟

1. 將水注入壺內（嚴禁超越最高水位線），並蓋上壺蓋。
2. 底座接上電源後，將壺身放到底座上，蜂鳴器發出提示聲1聲，顯示屏顯示實時水溫。

煲水模式

按「開關鍵 」，煲水指示燈  常亮，溫度顯示閃爍3秒後自動煲水至沸騰（100°C）。

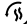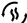


保溫模式

1. 按「溫度鍵 」循環選擇40°C、55°C、80°C、90°C，保溫指示燈  常亮，溫度顯示閃爍3秒後自動進入保溫狀態。
2. 如當前水溫未達到所選溫度，產品會自動加熱，然後維持在所選溫度。
3. 如當前水溫已超越所選溫度，保溫指示燈  閃爍，產品不會運行，待水降溫至低於所選溫度後，再自動加熱並維持在所選溫度，保溫指示燈  轉為常亮。

注意：

在保溫模式下，不會煲水至沸騰（100°C）。

煲水後保溫

1. 先按「開關鍵 」，煲水指示燈  常亮。
2. 再按「溫度鍵 」循環選擇40°C、55°C、80°C、90°C，保溫指示燈常亮，溫度顯示閃爍3秒後自動煲水至沸騰（100°C）。
3. 水煲好後，保溫指示燈閃爍。待水降溫至低於所選溫度後，再自動加熱並維持在所選溫度，保溫指示燈轉為常亮。

防乾燒保護功能

如壺內沒有水或水已經燒乾，水壺將啟動防乾燒保護功能自動切斷電源。必須先讓水壺冷卻後再注水，然後再進行煲水。

使用說明

使用WiFi連接本產品

本產品可透過德國寶智能控制應用程式「German Pool Smart Control」APP以智能手機操控。

A. 下載及註冊應用程式

1. 連接後WiFi後，掃描下方二維碼下載並安裝「German Pool Smart Control」APP。



蘋果iOS系統
App Store

 


安卓Android系統
Google Play

 
2. 點擊「Sign Up（註冊）」註冊用戶資料（圖1）。
3. 輸入電郵地址後，點擊「Get Verification Code（取得驗證碼）」，您將會收到一個一次性的驗證碼（圖2）。
4. 輸入驗證碼後，設定您的登入密碼，點擊「Done（完成）」（圖3）。



（圖1）

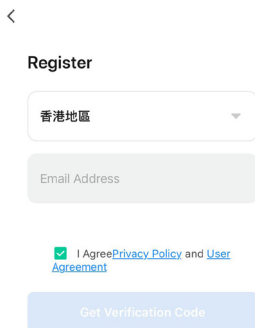

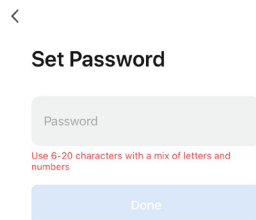


（圖2）



（圖3）

使用說明

B. 配對本產品

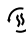1. 點擊APP主頁右上角「+」，再點擊「Add Device（添加裝置）」（圖4）。
2. 長按熱水壺上的「開關鍵 」5秒，直至蜂鳴器發出提示聲5聲，煲水  及保溫  指示燈閃爍。
3. APP顯示「Discovering devices...（搜尋裝置...）」，並顯示熱水壺圖案，點擊「Add（添加）」（圖5），APP顯示熱水壺圖案，再點擊右方的「+」。
4. 輸入手機所連接的WiFi名稱及密碼，點擊「Next（下一步）」（圖6），熱水壺與APP自動配對（圖7）。

注意：

 
如配對期間APP顯示感嘆號符號，代表配對失敗，請按照「B. 連接本產品」步驟重新配對。

5. 配對完成後，APP顯示「Added successfully（添加成功）」，按右上角「Done（完成）」返回主頁（圖8）。


注意：

- 每次只可以一個帳戶進行配對，如由另一帳戶再次進行配對，先前已配對的帳號將失去熱水壺的操作權。
- 已配對的帳戶可以分享熱水壺的操作權予其他帳戶，詳見「C. 操作權分享」部份。


使用説明

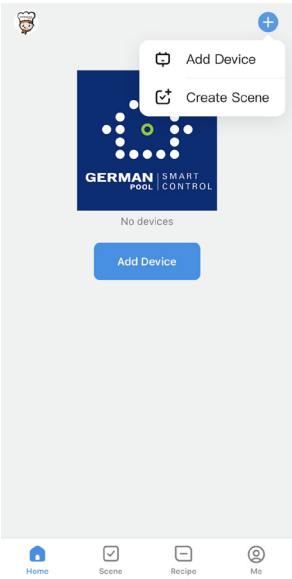


(圖4)

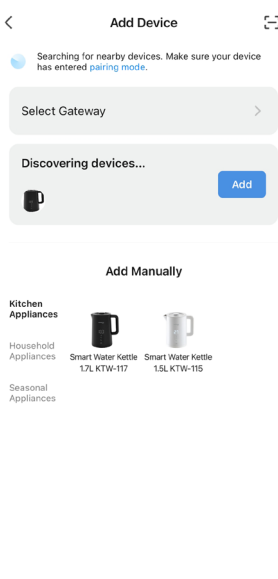 


(圖5)

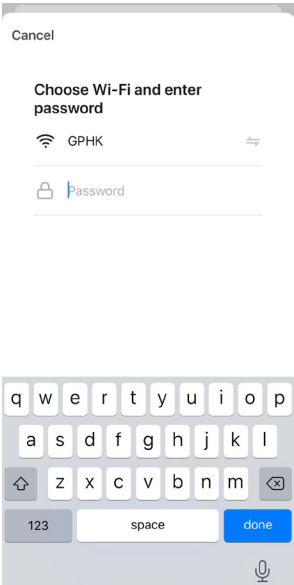 

(圖6)

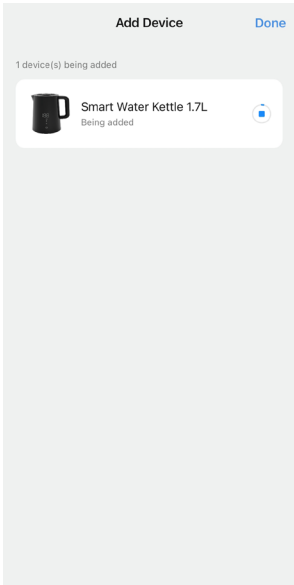 


(圖7)

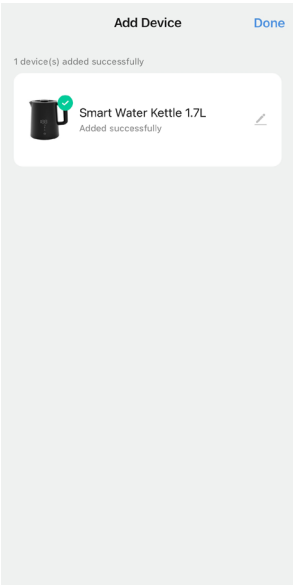 

(圖8)

 
使用說明

C. 操作權分享


1. 在熱水壺操作主頁面點擊右上角「」（圖9），再點擊「Share Device（分享裝置）」（圖10）。
2. 點擊下方「Add Sharing（添加分享）」，可設定所需分享的人數，再點擊「Share with the Account Smart Control（分享予帳戶）」（圖11）。
3. 輸入該帳戶的註冊電郵地址，再點擊右上角「Done（完成）」即可。

注意：


在「Share Device（分享裝置）」頁面裡，你可隨時添加或移除帳戶的操作權。

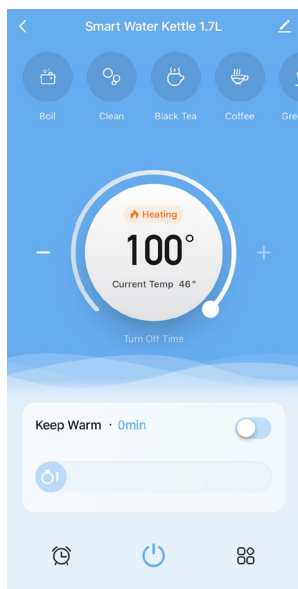

（圖9）

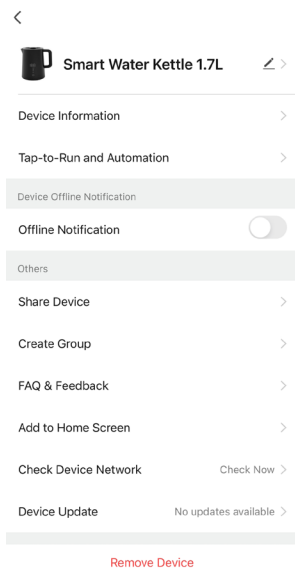 


（圖10）

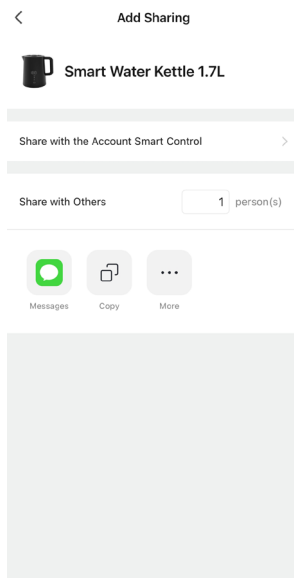 

（圖11）

使用說明

 使用APP操作

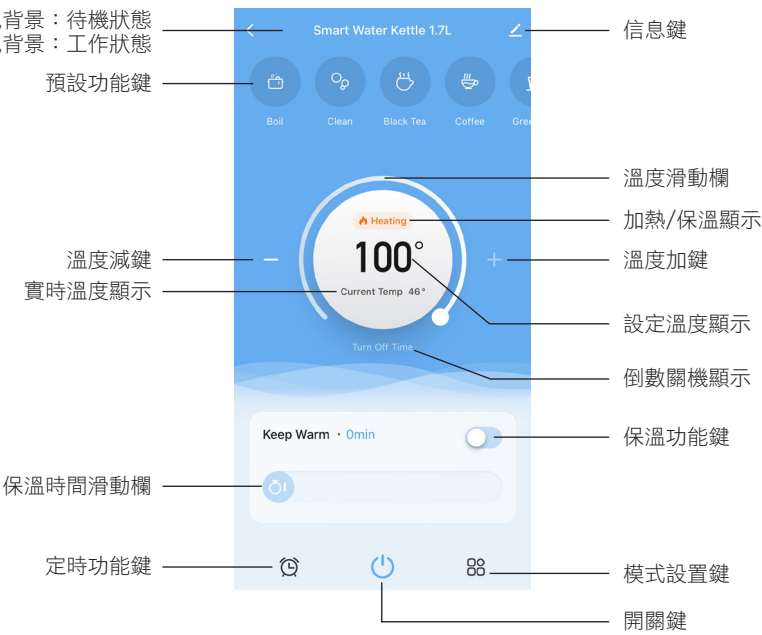







預設模式鍵







圖標	模式	圖標	模式
	煲水 (100°C) 煲水至100°C後返回待機狀態		綠茶 (85°C) 加熱至85°C，待水溫降至70°C後自動保溫2小時
	清潔 (100°C) 煲水至100°C後持續沸騰3分鐘後返回待機狀態		蜂蜜 (60°C) 加熱至60°C後自動保溫2小時
	紅茶 (98°C) 加熱至98°C，待水溫降至70°C後自動保溫2小時		奶粉 (45°C) 加熱至45°C後自動保溫2小時
	咖啡 (90°C) 加熱至90°C，待水溫降至70°C後自動保溫2小時		

使用說明


注意：

- 如在待機狀態下按預設模式鍵，需再按「開關鍵 」開機。
- 如使用紅茶 、咖啡 、綠茶 、蜂蜜 、奶粉  預設模式，當水溫超過預設溫度，水壺將不會加熱，並自動進入保溫狀態。
- 所有預設模式的保溫時間可自行調節，可調時間為0分鐘-12小時。

按鍵說明

	按鍵	說明
	開關鍵	<ul style="list-style-type: none">• 按此鍵開機或關機• 如未有使用預設功能，且水溫已達100°C，按此鍵無效
	溫度滑動欄	<ul style="list-style-type: none">• 按住滑動快速調節溫度• 可調溫度為0-100°C
- +	溫度減/加鍵	<ul style="list-style-type: none">• 按減鍵減少溫度1°C；按加鍵增加溫度1°C• 可調溫度為0-100°C
Keep Warm 	保溫功能鍵	<ul style="list-style-type: none">• 按鍵開啟或關閉保溫功能• 開啟保溫功能後預設保溫2小時
	保溫時間滑動欄	<ul style="list-style-type: none">• 按住滑動可快速調節保溫時間• 可調時間為0分鐘-12小時
	功能設置鍵	<ul style="list-style-type: none">• 按此鍵後，可調節「Turn Off Time倒數關機」或「Function功能」• Turn Off Time倒數關機：設置關機時間，倒數完畢後產品自動關機（如保溫時間未完結，產品仍會關機）• Function功能：可選「Heat加熱」，直接將水加熱至所選溫度，或「Boil煲滾」，將水加熱至100°C煲滾後待水降溫至所選溫度
	定時功能鍵	<ul style="list-style-type: none">• 按此鍵進入定時功能介面



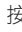





水滾提示

 
1. 當水煲好後，APP會彈出「水滾提示」。
2. 如需使用此功能，必須先開啟手機上的「Notifications通知」，及APP的「APP Notifications應用程式通知」：
在APP主頁進入「Me」頁面後，按右上角的「」進入「Settings設置」，開啟「APP Notifications應用程式通知」。




使用說明

定時功能


1. 按「定時功能鍵 」進入定時功能介面，按「+」進入定時設置界面（圖1）。
2. 在定時設置界面裡可設置以下內容（圖2）：
 - a. 選擇所需時間
 - b. 日子欄位：選擇是否需要重複此定時（可選星期一至日，開啟此功能後，水壺將在所選日子按此設置運行）。
 - c. 「Remark」欄位：可輸入筆記提示。
 - d. 「Mode」欄位：可選擇煲水 、清潔 、紅茶 、咖啡 、綠茶 、蜜糖 、奶粉  或DIY模式。
 - e. 「Keep Warm」欄位：可設置保溫時間。
 - f. 設置完成後，按右上方的「Save」確認設置。
3. 完成後返回定時功能介面。如需設置更多定時功能，可按底部的「+」（圖3）。

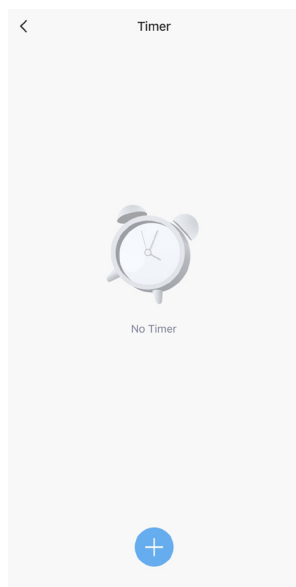

（圖1）

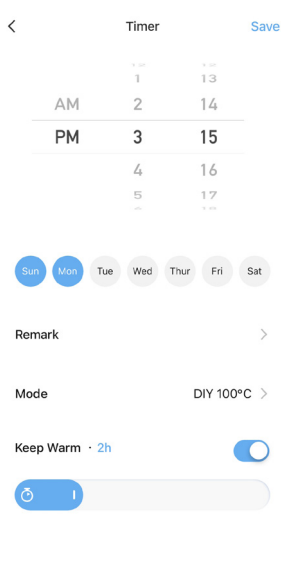 

（圖2）

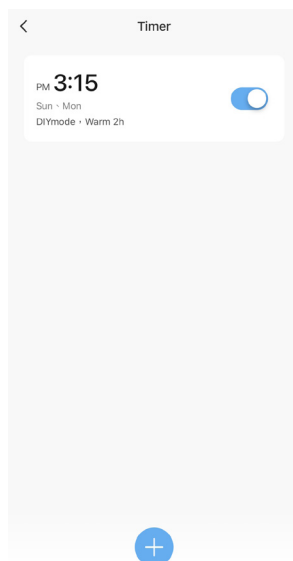 

（圖3）

使用說明

使用語音操控

本產品可透過智能手機上的「Amazon Alexa」以語音操控。

注意：

使用語音操控前，必須先按照說明書「使用WiFi連接本產品」部份，將本產品連接至「German Pool Smart Control」，否則無法進行以下語音操控步驟。

 
A. 下載及註冊Amazon Alexa

1. 於App Store（蘋果IOS系統）或Google Play（安卓Android系統）搜尋、下載並安裝「Amazon Alexa」APP。
2. 安裝完成後，按照APP上的指示註冊或登入Amazon Alexa帳號（圖1）。


B. 安裝Alexa Skills

1. 成功註冊Amazon Alexa帳號及按指示完成設定後，進入APP「Home（主界面）」（圖2）。
2. 按底部欄位的「Devices（裝置）」，拖曳頁面到底部再按「Your Smart Home Skills（您的智能家居技能）」（圖3），再按「Enable Smart Home Skills（啟用智能家居技能）」。
3. 按右上角搜尋「Smart Control」後，按圖標為「German Pool」的一欄（圖4），再按「ENABLE TO USE（啟用）」。
4. Amazon Alexa將與German Pool Smart Control連接，按「Agree and link（同意及連接）」（圖5），完成後Amazon Alexa將自動連接所有German Pool Smart Control上可使用的裝置（圖6），然後按APP上的指示安裝相關裝置即可。


使用説明

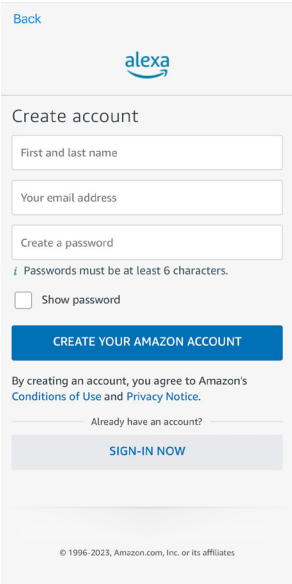


(圖1)

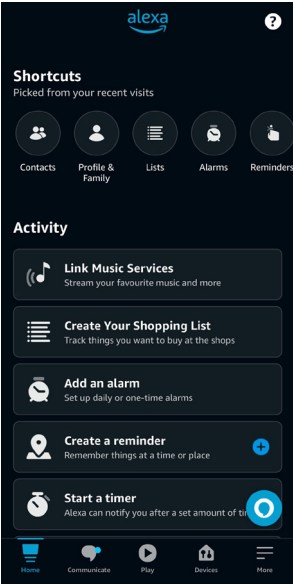 


(圖2)

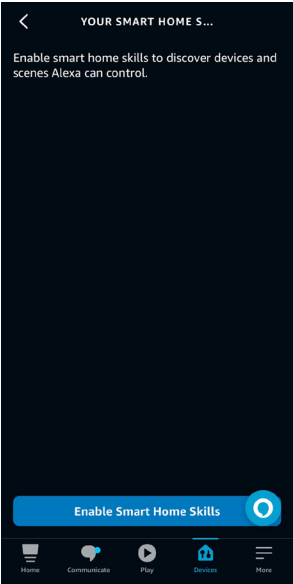 


(圖3)

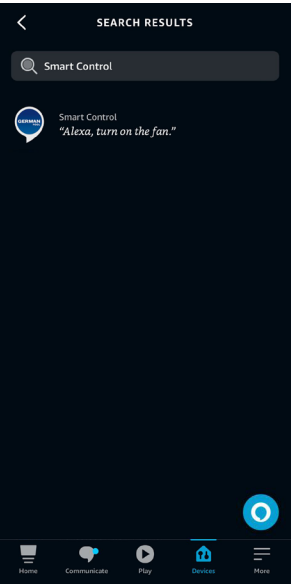 

(圖4)

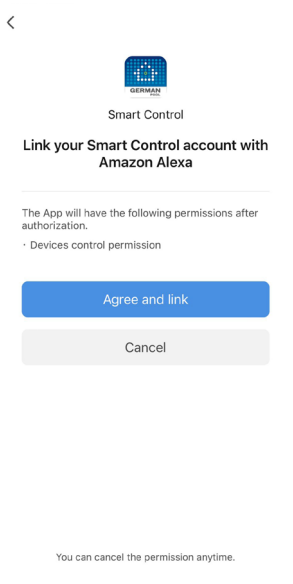 

(圖5)

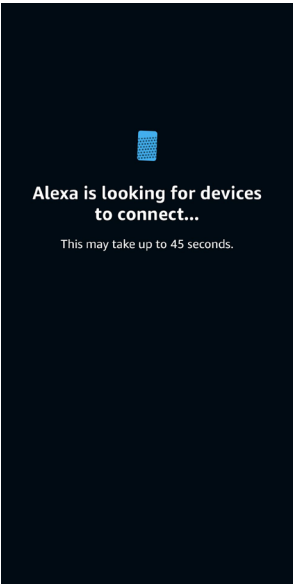 

(圖6)

使用說明

C. 使用Alexa語音操控

1. 由於以Amazon Alexa進行語音操控需讀出產品的英文名稱，建議將產品名稱更改為易於朗讀的名稱，例如將本熱水壺改為「Water Kettle」等。
2. 在「Devices（裝置）」頁面，按上方的「All Devices（所有裝置）」（圖7），可查看所有已安裝的裝置，包括本熱水壺（圖8）。
3. 按本產品一欄進入產品設置，再按「Edit Name（更改名稱）」即可自行更改產品名稱（圖9）。


注意：

- 更改產品名稱時，應以簡短英語、不易混淆其他產品為基礎。
- 更改後的產品名稱只應用於Amazon Alexa，並不會同步至German Pool Smart Control。

4. Amazon Alexa支援以下功能，建議按下表進行語音控制以達至最佳效果：

功能	指令及說明
開機	「Alexa, turn on <您設定的產品名>」 熱水壺開機並煲水到100°C後自動關機。
設置煲水溫度	「Alexa, set <您設定的產品名> to <溫度>」 此指令需配合開機指令使用，開機後設置煲水溫度，例如指令為「Alexa, set Smart Kettle to fifty」，熱水壺煲水到50°C後關機。
查詢當前水溫	「Alexa, what is the temperature of <您設定的產品名>」 Alexa會讀出熱水壺的實時水溫。
關機	「Alexa, turn off <您設定的產品名>」 熱水壺關機（不會斷電）。

 
使用說明

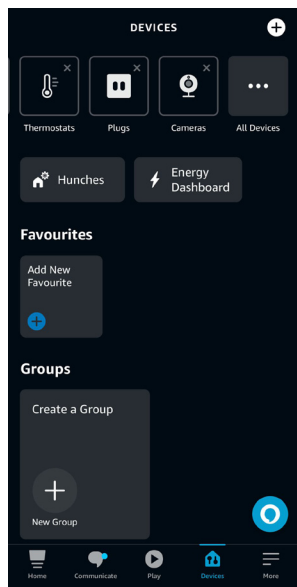

(圖7)



 (圖8)

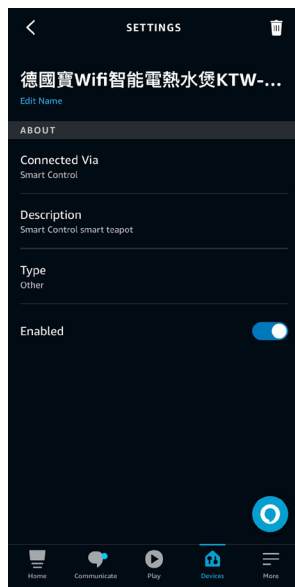

(圖9)

清潔與保養

⚠ 警告！

- 在清潔及維護本產品前，必須先拔除插頭並讓產品完全冷卻。
 - 嚴禁將水壺、底座或電源線浸入水中，或讓水分接觸這些部件。
- 用濕布或清潔劑擦拭機身表面，嚴禁使用有毒清潔劑。
 - 必須定期清潔濾網孔，以防止堵塞積聚水垢。
 - 嚴禁使用化學清潔劑、鋼絲刷、木刷或研磨性清潔劑清潔本產品表面，以免表面失去光澤。
 - 為延長本產品使用壽命，應定期清潔壺內的礦物沉澱物。可使用市面上的除垢劑（必須遵照除垢劑包裝上的說明使用），亦可參照以下說明使用白醋除垢：
 - 在壺內注入3杯白醋，加入足夠清水至完全覆蓋壺底，浸約24小時。
 - 將稀釋白醋倒掉，在壺內注滿清水，煲滾再倒掉。重覆幾次直至白醋的氣味完全沖走。如壺咀內殘留污漬可用濕布擦掉。
 - 如長時間不使用本產品，必須拔除插頭，並將電源線繞在底座底部，並將產品儲存在遠離陽光的通爽位置。

技術規格

型號	KTW-115-SC	KTW-117-SC
電壓	220-240 V~	220-240 V~
頻率	50-60 Hz	50-60 Hz
功率	1850-2200 W	1850-2200 W
產品尺寸	(H) 254 (W) 216 (D) 153 mm	(H) 258.7 (W) 208 (D) 162 mm
淨重	1.1 kg	1.1 kg
容量	1.5 L	1.7 L

- 產品規格及設計如有變更，恕不另行通知。
- 中英文版本如有出入，一概以中文版為準。
- 本產品使用說明書以www.germanpool.com網上版為最新版本。

保用條款

此保用提供德國寶產品之機件在正常使用下壹年保用(自購買日起計算)。

- * 貴戶須在購機十天內，以下列其中一種方式向本公司登記資料，保用手續方正式生效：

- 1) 填妥德國寶VIP手機應用程式保用登記表(掃描右方二維碼)
- 2) 填妥本公司網頁保用登記表
www.germanpool.com/warranty
- 3) 填妥保用卡郵寄至本公司。



Warranty Terms & Conditions

Under normal operations, the product will guarantee a 1-year full warranty provided by German Pool (effective from the date of purchase).

- * This warranty is not valid until customer registration information is received by our Service Centre within 10 days of purchase via one of the following means:

- 1) Visit our VIP App and register online:
(Scan the QR Code on the left)
- 2) Visit our website and register online:
www.germanpool.com/warranty
- 3) Complete the attached Warranty Card and mail it back to our Customer Service Centre.



另請填妥以下表格並與正本發票一併保存，以便維修時核對資料。用戶提供之所有資料必須正確無誤，否則免費保用將會無效。
Please fill out the form below. This information and the original purchase invoice will be required for any repairs. Warranty will be invalidated if information provided is found to be inaccurate.

型號 Model No.: ☐ KTW-115-SC ☐ KTW-117-SC

機身號碼 Serial No.: _____ 發票號碼 Invoice No.: _____

購買商號 Purchased From: _____ 購買日期 Purchase Date: _____

1. 未能出示購買發票正本者，將不獲免費維修服務。
2. 用戶應依照說明書的指示操作。本保用並不包括：
 - 上門安裝、檢驗、維修或更換零件之人工以及一切運輸費用；
 - 因天然與人為意外造成的損壞(包括運輸及其他)；
 - 電源接合不當、不依說明書而錯誤或疏忽使用本機所引致之損壞。
3. 於下列情況下，用戶之保用資格將被取消：
 - 購買發票有任何非認可之刪改；
 - 產品被用作商業或工業用途；
 - 產品經非認可之技術人員改裝或加裝任何配件；
 - 機身編號被擅自塗改、破壞或刪除。
4. 總代理有權選擇維修或更換配件或其損壞部份。
5. 產品一經被轉讓，其保用即被視作無效。
1. Customer who fails to present original purchase invoice will not be eligible for free warranty service.
2. Customer should always follow the operating instructions. This warranty does not apply to:
 - labour costs for on-site installation, check-up, repair, replacement of parts and other transportation costs;
 - damages caused by accidents of any kind (including material transfer and others);
 - operating failures resulting from applying incorrect voltage, improper usage, and unauthorized installations or repairs.
3. This warranty is invalid if:
 - the purchase invoice is modified by an unauthorized party;
 - the product is used for any commercial or industrial purposes;
 - the product is repaired or modified by unauthorized personnel, or unauthorized parts are installed;
 - the serial number is modified, damaged or removed from the product.
4. German Pool will, at its discretion, repair or replace any defective part.
5. This warranty will be void if there is any transfer of ownership from the original purchaser.

客戶服務及維修中心

中國香港

九龍大業街59號

三湘九龍灣貨運中心地下B室

電話: +852 2333 6249

傳真: +852 2356 9798

電郵: repairs@germanpool.com

中國澳門

澳門青洲大馬路(青洲新路)

515號美居廣場第二期1樓A座

電話: +853 2875 2699

傳真: +853 2875 2661

Customer Service & Repair Centre

Hong Kong, China

Unit B, G/F, Sunshine Kowloon Bay

Cargo Centre, 59 Tai Yip Street, Kowloon

Kowloon, Hong Kong

Tel : +852 2333 6249

Fax : +852 2356 9798

Email : repairs@germanpool.com

Macau, China

A, 1 Andar, Mei Kui Kuong Cheong Fase 2,

No.515 Avenida Do Conselheiro Borja

Macau

Tel : +853 2875 2699

Fax : +853 2875 2661

此保用只適用於香港及澳門 | This warranty is valid only in Hong Kong and Macau

German Pool (Hong Kong) Limited

Hong Kong, China

Room 113, Newport Centre Phase II, 116 Ma Tau
Kok Road, Tokwawan, Kowloon, Hong Kong
Tel: +852 2773 2888
Fax: +852 2765 8215

Mainland China

8th, Xinxiang Road, Wusha Industrial Park,
Daliang, Shunde, Foshan, Guangdong
Tel: +86 757 2219 6888
Fax: +86 757 2219 6809

Macau, China

A, 1 Andar, Mei Kui Kuong Cheong Fase 2,
No.515 Avenida Do Conselheiro Borja, Macau
Tel: +853 2875 2699
Fax: +853 2875 2661



香港《S MARK》
安全認證



中國聯誼/家電行業
十大影響力品牌



CEO非凡品牌大賞



香港優質商標



香港工商業獎



2007
最具價值
創建品牌企業獎



香港中小企業
最佳拍攝大獎



香港消費者推祟品牌



香港《Q MARK》
優質服務證書



香港名牌十年成就獎
HONG KONG TOP BRAND TEN YEAR
ACHIEVEMENT AWARD

© All rights reserved. Copying, reproducing or using the contents of this manual is not allowed without prior authorization from German Pool, violators will be prosecuted.