

GERMAN POOL 德國寶

GERMAN POOL 德國寶

燒烤微波爐 | Grill Microwave Oven
WD900ASP30Q-5S



德國寶(香港)有限公司 German Pool (Hong Kong) Limited

香港九龍土瓜灣馬頭角道116號新寶工商中心高層地下2-3號室
Room 2 & 3, Upper Ground Floor, Newport Centre
116 Ma Tau Kok Road, Tokwawan, Kowloon, Hong Kong

電話 (Tel) : +852 2333 6245
傳真 (Fax) : +852 2765 8215
電郵 (E-mail) : info@germanpool.com

+852 2773 2888
+852 2365 6009



© 版權所有。未經德國寶授權，不得翻印、複製或使用本單張作任何商業用途，違者必究。
© All rights reserved. Copying, reproducing or using the contents of this leaflet is not allowed without prior authorization from German Pool, violators will be prosecuted.

www.germanpool.com

在使用之前請詳細閱讀「使用說明書」及「保用條例」，並妥為保存。
Please read these instructions and warranty information carefully before use and keep them handy for future reference.

使用說明書 OPERATING INSTRUCTIONS

Table of Contents

Precautions	2
Specifications	2
Before You Call For Service	3
Installation.....	3
Grounding Instructions.....	4
Radio Interference	4
Important Safety Instructions.....	5
Microwave Cooking Principles.....	6
Utensils Guide	6
Part Names.....	6
Control Panel	7
Operating Instructions	9
Cleaning & Care.....	12
Warranty Terms & Conditions	24

PRECAUTIONS

To avoid possible exposure to excessive microwave energy -

- (a) Do not attempt to operate this oven with the door open since open-door operation can result in harmful exposure to microwave energy. It is important not to defeat or tamper with the safety interlocks.
- (b) Do not place any object between the oven front face and the door or allow soil or cleaner residue to accumulate on sealing surfaces.
- (c) Do not operate the oven if it is damaged. It is particularly important that the oven door close properly and that there is no damage to the :
 - 1) Door (bent)
 - 2) Hinges and latches (broken or loosened)
 - 3) Door seals and sealing surfaces
- (d) The oven should not be adjusted or repaired by anyone except properly qualified service personnel.

SPECIFICATIONS

Power Consumption	230V~50Hz, 1400W (Microwave) / 1000W (Grill)
Rated Microwave Power Output	900 W
Operation Frequency	2450 MHz
Outside Dimensions	(H) 305 mm (W) 525 mm (D) 439 mm
Oven Cavity Dimensions	(H) 219 mm (W) 350 mm (D) 384 mm
Oven Capacity	30 L
Cooking Uniformity	Turntable System
Net Weight	Approx.19 kg

*Note: all above data is subject to change without further notice

BEFORE YOU CALL FOR SERVICE

If the oven fails to operate:

- (a) Check to ensure that the oven is plugged in securely. If it is not, remove the plug from the outlet, wait 10 seconds and plug it in again securely.
- (b) Check for a blown circuit fuse or a tripped main circuit breaker. If these seem to be operating properly, test the outlet with another appliance.
- (c) Check to ensure that the control panel is programmed correctly and the timer is set.
- (d) Check to ensure that the door is securely closed engaging the door safety lock system. Otherwise, the microwave energy will not flow into the oven.

If none of the above rectifies the situation, contact a qualified technician. Do not try to adjust or repair the oven by yourself.

INSTALLATION

1. Make sure that all the packing materials are removed from the inside of the door.
2. **WARNING:** Check the oven for any damage, such as misaligned or bent door, damaged door seals and sealing surface, broken or loose door hinges and latches and dents inside the cavity or on the door. If there is any damage, do not operate the oven and contact qualified service personnel.
3. This microwave oven must be placed on a flat, stable surface to hold its weight and the heaviest food likely to be cooked in the oven.
4. Do not place the oven where heat, moisture or high humidity are generated, or near combustible materials.
5. For correct operation, the oven must have sufficient airflow. Allow 20cm of space above the oven, 10cm at back and 5cm at both sides. Do not cover or block any openings on the appliance. Do not remove feet.
6. Do not operate the oven without glass tray, roller support, and shaft in their proper positions.
7. Make sure that the power supply cord is undamaged and does not run under the oven or over any hot or sharp surface.
8. The socket must be readily accessible so that it can be easily unplugged in an emergency.
9. Do not use the oven outdoors.

GROUNDING INSTRUCTIONS

This appliance must be grounded. This oven is equipped with a separate wire for the electric current. It is recommended that a separate circuit serving only the oven be provided. Using a cord having a grounding wire with a grounding plug. It must be plugged into a wall receptacle that is properly installed and grounded. In the event of an electrical short circuit, grounding reduces risk of electric shock by providing an escape wire for the electric current. high voltage is dangerous and may result in a fire or other accident causing oven damage.

WARNING:

Improper use of the grounding plug can result in a risk of electric shock.

NOTES:

- If you have any questions about the grounding or electrical instructions, consult a qualified electrician or service person.
- Neither the manufacturer nor the dealer can accept any liability for damage to the oven or personal injury resulting from failure to observe the electrical connection procedures.

The wires in this mains cable are colored in accordance with the following code:

Green and Yellow = EARTH
Blue = NEUTRAL
Brown = LIVE

RADIO INTERFERENCE

1. Operation of the microwave oven can cause interference to your radio, TV or similar equipment.
2. When there is interference, it may be reduced or eliminated by taking the following measures:
 - a. Clean door and sealing surface of the oven.
 - b. Reorient the receiving antenna of radio or television.
 - c. Relocate the microwave oven with respect to the receiver.
 - d. Move the microwave oven away from the receiver.
 - e. Plug the microwave oven into a different outlet so that microwave oven and receiver are on different branch circuits.

IMPORTANT SAFETY INSTRUCTIONS

WARNING:

When using electrical appliance, basic safety precautions must be observed.

To reduce the risk of burns, electric shock, fire, injury to persons or exposure to excessive microwave energy:

1. Read all instructions before using the appliance.
2. Use this appliance only for its intended use as described in this manual. Do not use corrosive chemicals or vapors in this appliance. This type of oven is specifically designed to heat, cook or dry food. It is not designed for industrial or laboratory use.
3. Do not operate the oven when it is empty.
4. Do not operate appliance: if its power cord or plug is damaged, it does not function properly or it has been damaged or dropped. If the power cord is damaged, it must be replaced by the manufacturer or a licensed technician in order to avoid a hazard.
5. **WARNING:** Allow children to use the oven without supervision only when adequate instructions have been given so that the child is able to use the oven in a safe way and can understand the hazards of improper use.
6. **WARNING:** When appliance is operated in the combination mode, children should only use the oven under adult supervision due to the temperatures generated.
 - 7. To reduce the risk of fire in the oven cavity:
 - When heating food in plastic or paper container, keep an eye on the oven due to the possibility of ignition.
 - Remove wire twist-ties from paper or plastic bags before placing bag in oven.
 - If smoke is observed, switch off or unplug the appliance and keep the door closed in order to stifle any flames.
 - Do not use the cavity for storage purposes. Do not leave paper products, cooking utensils or food in the cavity when not in use.
8. **WARNING:** Liquid or other food must not be heated in sealed containers since they are liable to explode.
9. Microwave heating of beverage can result in delayed eruptive boiling, therefore care has to be taken when handle the container.
10. Do not fry food in the oven. Hot oil can damage oven parts and utensils and even result in skin burns.
11. Eggs in their shell and whole hard-boiled eggs should not be heated in microwave ovens since they may explode even after microwave heating has ended.
12. Pierce foods with heavy skins such as potatoes, whole squash, apples and chestnuts before cooking.
13. The contents of feeding bottles and baby jars should be stirred or shaken and the temperature should be checked before serving in order to avoid burns.
14. Cooking utensils may become hot because of heat transferred from the heated food. Potholders may be needed to handle the utensil.
15. Utensils should be checked to ensure that they are suitable for use in microwave oven.
16. **WARNING:** It is hazardous for anyone other than a trained person to carry out any service or repair operation which involves the removal of any cover which gives protection against exposure to microwave energy.
17. This product is a Group 2 Class B ISM equipment. The definition of Group 2 which contains all ISM (Industrial, Scientific and Medical) equipment in which radio-frequency energy is intentionally generated and/or used in the form of electromagnetic radiation for the treatment of material, and spark erosion equipment. For Class B equipment is equipment suitable for use in domestic establishments and in establishments directly connected to a low voltage power supply network which supplies buildings used for domestic purpose.

MICROWAVE COOKING PRINCIPLES

1. Arrange food carefully. Place thickest areas towards outside of dish.
2. Watch cooking time. Cook for the shortest amount of time indicated and add more as needed. Food severely overcooked can smoke or ignite.
3. Cover foods while cooking. Covers prevent spattering and help foods to cook evenly.
4. Turn foods over once during microwaving to speed cooking of such foods as chicken and hamburgers. Large items like roasts must be turned over at least once.
5. Rearrange foods such as meatballs halfway through cooking both from top to bottom and from the center of the dish to the outside.


UTENSILS GUIDE

1. The ideal material for a microwave utensil is transparent to microwave
2. Microwave cannot penetrate metal
3. Round or oval dishes rather than square/oblong ones are recommended, as food in corners tends to overcook.
4. Do not use recycled paper products when microwave cooking
5. Narrow strips of aluminum foil may be used to prevent overcooking of exposed areas. But be careful don't use too much and keep a distance of 1 inch (2.54cm) between foil and cavity.


The list below is a general guide to help you select the correct utensils.

Cookware	Microwave Cooking	Grill Cooking	Combination Cooking
Heat-Resistant Glass	Yes	Yes	Yes
Non Heat-Resistant Glass	No	No	No
Heat-Resistant Ceramics	Yes	Yes	Yes
Microwave-Safe Plastic Dish	Yes	No	No
Kitchen Paper	Yes	No	No
Metal Tray	No	Yes	No
Metal Rack	No	Yes	No
Aluminum Foil & Foil Containers	No	Yes	No

PART NAMES

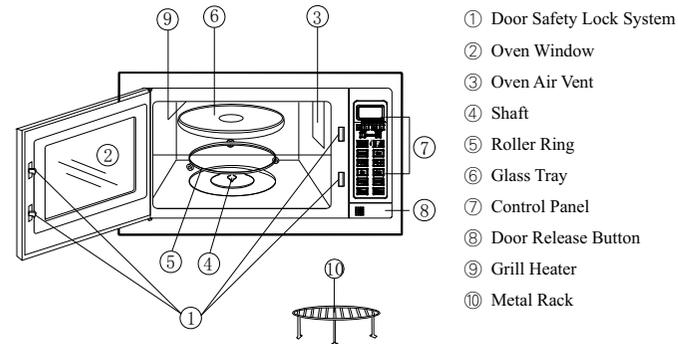

CONTROL PANEL

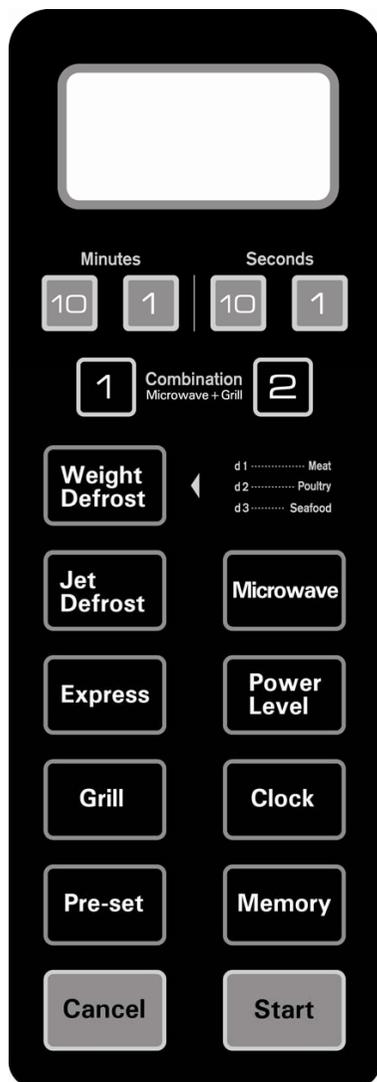

DISPLAY

Cook time, power level, cooking status and clock time are displayed.

NUMBER KEYS



Press to set cook time.

MICROWAVE

Press to enter MICROWAVE mode. Set MICROWAVE cook time up to 99 min. & 99 sec. using the number keys.

POWER LEVEL

Press to set POWER LEVEL. To check POWER LEVEL during microwave cooking, press the same button.

EXPRESS

Choose from 4 default microwave time settings. The oven will operate at HIGH power (100% power level) for EXPRESS cooking.

With each press of the EXPRESS button, you can program the oven for :

- 15 seconds Press 1 time
- 30 seconds..... Press 2 times
- 1 minute Press 3 times
- 2 minutes Press 4 times

GRILL

Press to enter GRILL mode. Set GRILL cook time up to 99 min. & 99 sec. using the number keys.

COMBINATION 1 & 2

Press one of the 2 buttons to set COMBINATION cooking (MICROWAVE + GRILL).

COMBINATION 1

- 30% time for microwave cooking
- 70% time for grill cooking
- For fish, potatoes or au gratin.

COMBINATION 2

- 55% time for microwave cooking
- 45% time for grill cooking
- For pudding omelets, potatoes and poultry.

(See following pages for more details)

(Continued)

MEMORY

To program the oven to cook in different cooking modes by time, make use of the MEMORY key to program time settings for two cooking stages. The respective symbols ("1s" & "2s") will light up to indicate in which stage the oven is operating. Refer to "PROGRAM COOKING" (page 10) for operating instructions.

WEIGHT DEFROST

Select from 3 default food types to DEFROST frozen foods by their weight. The time and power level are automatically set once the food type and the weight are programmed.

- Type 1 (d1) Meat
- Type 2 (d2) Poultry
- Type 3 (d3) Seafood

JET DEFROST

Press to DEFROST foods by time. This cycle starts at medium-high power, then automatically reduces to medium-low power and then to low power as the food thaws. JET DEFROST indicator and COOKING indicator light will both turn on during the defrost cycle.

PRE-SET

Press to set the oven to start at a later time. The PRE-SET indicator will blink when the oven is in the PRE-SET state. Make sure clock is set correctly before programming the PRE-SET function.

CANCEL

Press to CANCEL the selected power level, cook time or defrost time that were previously programmed. Note that time clock cannot be cancelled.


START

Press to START cooking or defrosting. The "Cooking" indicator and the "Oven" light will turn on and the cooling fan will be activated.

CLOCK

Press to set the time of day or recall the time of day. The time of day will be displayed at all times except when cooking or defrosting. In the event of a power failure or if the oven is unplugged, the clock will have to be reset.

To modify or reset clock settings, refer to "SETTING THE CLOCK" (page 9) for instructions.

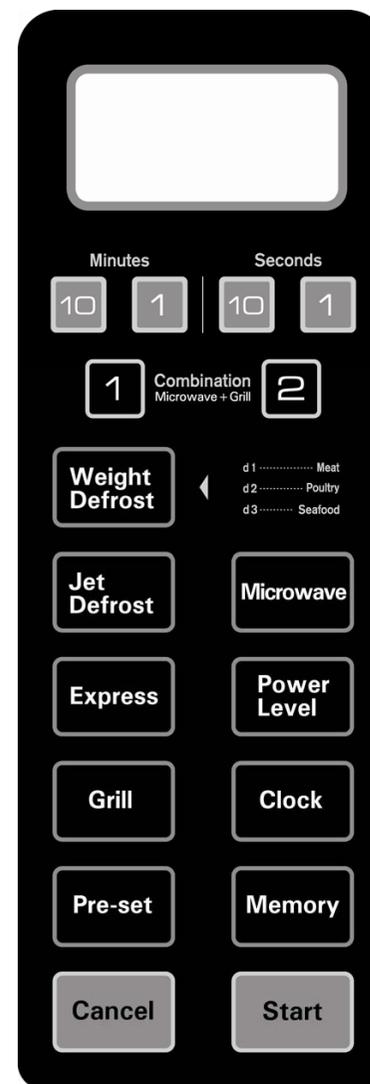

OPERATING INSTRUCTIONS

BEEP DURING OVEN SETTINGS

Each time a button is pressed, a beep will sound to acknowledge the touch.

■ SETTING THE CLOCK

Suppose you want to reset the time of day 6:00 (A.M or P.M).

STEPS:

1. Press CLOCK key.
2. Press CANCEL key.
3. Press number key $\boxed{1}$ $\boxed{\text{MIN}}$ 6 times.
4. Press CLOCK key again to confirm.

NOTE:

This is a 12-hour clock. When the oven was plugged in, "1:01" should have appeared in the display. To reset the time of day, repeat the steps given above. You can check the clock time while cooking is in progress by touching the CLOCK key.

■ COOK TIME & POWER LEVEL

Suppose you want to cook for 5 minute at 60%.

STEPS:

1. Press MICROWAVE key.
2. Press number key $\boxed{1}$ $\boxed{\text{MIN}}$ five times.
3. Press POWER LEVEL key 3 times.
4. Press START key.

NOTE: Step 3 is not necessary for cooking at 100% power level.

■ PRE-SET

Suppose you want to set the oven to start-up at 2 o'clock.

STEPS:

1. Press PRE-SET key.
2. Press number key $\boxed{1}$ $\boxed{\text{MIN}}$ twice.
3. Set the cooking program.
4. Press START key.

NOTE: Be sure the time of day clock is set at the correct time before programming PRE-SET.

■ EXPRESS

Use this feature to program the oven for 4 default microwave time settings. The oven will operate at HIGH power (100% power output) during this cooking program.

Suppose you want to set the oven to cook for 1 minute at 100% by using the feature.

STEPS:

1. Press the EXPRESS key 3 times then "1:00" will appear in the display.
2. Press START key.

■ SETTING "JET DEFROST"

Suppose you want to set the oven to JET DEFROST for 5 minutes and 30 seconds.

STEPS:

1. Press JET DEFROST key.
2. Press number key $\boxed{1}$ $\boxed{\text{MIN}}$ 5 times and $\boxed{10}$ $\boxed{\text{SEC}}$ 3 times.
3. Press START key.

■ GRILL COOKING

Suppose you want to grill for 40 minutes.

STEPS:

1. Press GRILL key.
2. Press number key $\boxed{10}$ $\boxed{\text{MIN}}$ 4 times.
3. Press START key.

■ COMBINATION COOKING

COMBINATION 1

30% time for microwave cooking
70% time for grill cooking

COMBINATION 2

55% time for microwave cooking
45% time for grill cooking

e.g. To set the oven to COMBINATION 2 for 25 min -

STEPS:

1. Press COMBINATION 2 key.
2. Press number key $\boxed{10}$ $\boxed{\text{MIN}}$ 5 times and $\boxed{1}$ $\boxed{\text{MIN}}$ 5 times.
3. Press START key.

■ MINUTE TIMER

■ SETTING "WEIGHT DEFROST"

Maximum weight allowed for each food type is shown below:

DISPLAY SYMBOL	FOOD TYPE	MAX. WEIGHT
d1	Meat	2300g
d2	Poultry	4000g
d3	Seafood	900g

Suppose you want to defrost 600g shrimp.

STEPS:

1. Press WEIGHT DEFROST key 3 times. "d3" will appear in the display.
2. Press number key 6 times.
3. Press START key. $\boxed{1}$ $\boxed{\text{MIN}}$

NOTE: You may need to turn food over at the middle of cooking time to obtain uniform cooking. For foods exceeding these maximum weights, use the JET DEFROST program. If you program weight in excess of the maximum recommended, the oven will not operate properly.

After a cooking or defrosting program has completed, the oven will automatically continue to sound three beeps every two minutes until the door is opened or the CANCEL key is touched.

■ PROGRAM COOKING

The oven has the ability to be programmed to do several consecutive functions.

Suppose you want set the following cooking program:

- I. JET DEFROST;
- II. MICROWAVE cooking (and power level);
- III. GRILL cooking.

STEPS:

1. Press CANCEL key.
2. Input jet defrost program.
3. Input microwave and power level cooking program.
4. Press MEMORY key.
5. Input grill cooking program.
6. Press START key.

NOTE: JET DEFROST and WEIGHT DEFROST can only be selected before the cooking stage in a program. It can not be selected between or after stage1 or stage 2. The respective lights will come on to indicate which stage the oven is operating in. After total time has elapsed, 3 beeps sound.

STEPS:

1. Press MICROWAVE key.
2. Use number keys to input needed time.
3. Press POWER LEVEL key 6 times and the display will show "0".
4. Press START key.

NOTE: Use for timing things done outside the oven. Three beeps will sound at the end of the elapsed time. Oven light and cooling fan will turn on while the time is counting down but there is no microwave present.

■ TO PAUSE/STOP COOKING DURING OPERATION

1. Open the door.
2. Restart oven by closing the door and touching START key

NOTE: Oven does not operate while door is opened

■ SETTING "SAFETY LOCK"

STEPS TO LOCK:

1. Press CANCEL key.
2. Press keys  and  at the same time.
3. A beep sounds and LOCK indicator lights up.

STEPS TO UNLOCK:

1. Press  and  at the same time.
2. A beep will sound and the child lock indicator light will go off.

NOTE: You can't operate the oven while the child lock is set.

CLEANING & CARE

1. Turn off the oven and remove the power plug from the wall socket before cleaning.
2. Keep the inside of the oven clean. When food splatters or spilled liquids adhere to oven walls, wipe with a damp cloth. Mild detergent may be used if the oven gets very dirty. Avoid the use of spray and other harsh cleaners as they may stain, streak or dull the door surface.
3. The outside surfaces should be cleaned with a damp cloth. To prevent damage to the operating parts inside the oven, water should not be allowed to seep into the ventilation openings.
4. Wipe the door and window on both sides, the door seals and adjacent parts frequently with a damp cloth to remove any spills or spatters. Do not use abrasive cleaner.
5. Do not allow the control panel to become wet. Clean with a soft, damp cloth. When cleaning the control panel, leave oven door open to prevent oven from accidentally turning on.
6. If steam accumulates inside or around the outside of the oven door, wipe with a soft cloth. This may occur when the microwave oven is operated under high humidity conditions, this is normal.
7. It is occasionally necessary to remove the glass tray for cleaning. Wash the tray in warm sudsy water or in a dishwasher.
8. The roller ring and oven floor should be cleaned regularly to avoid excessive noise. Simply wipe the bottom surface of the oven with mild detergent. The roller ring may be washed in mild sudsy water or dishwasher. When removing the roller ring from cavity floor for cleaning, be sure to replace in the proper position.
9. Remove odors from your oven by combining a cup of water with the juice and skin of one lemon in a deep microwaveable bowl, microwave for 5 minutes. Wipe thoroughly and dry with a soft cloth.
10. When it becomes necessary to replace the oven light, please consult a dealer to have it replaced.
11. The oven should be cleaned regularly and any food deposits removed. Failure to maintain the oven in a clean condition could lead to deterioration of the surface that could adversely affect the life of the appliance and possibly result in a hazardous situation.
12. Please do not dispose this appliance into the domestic rubbish bin, it should be disposed to the particular disposal center provided by the municipalities.

目錄

規格.....	14
關於安裝.....	14
安全使用要點.....	15
微波爐使用常識.....	17
結構圖示.....	18
控制板說明.....	19
操作方法.....	21
微波爐的清潔與保養.....	23
微波爐維修說明.....	23
保用條款.....	24

規格

額定電壓/頻率/輸入功率	230V~50Hz, 1400W (Microwave) / 1000W (Grill)
微波輸出功率	900 W
額定微波頻率	2450 MHz
外形尺寸	(高) 305 mm (闊) 525 mm (深) 439 mm
內部尺寸	(高) 219 mm (闊) 350 mm (深) 384 mm
內部容積	30 L
微波烹飪系統	旋轉盤
淨重	約.19 kg

關於安裝

1. 把微波爐內的包裝物全部取出，若微波爐的外殼上附有保護膜，請將保護膜撕掉後再使用。
 2. 應仔細查看微波爐有否損壞。如有損壞，請立刻聯絡經銷商或本公司特約維修部。
 3. 應放置於有足夠承托力的水平面上。
 4. 本微波爐應在通風乾燥，無腐蝕性氣體的環境中使用，遠離高溫及蒸氣。
 5. 切勿在爐頂放置任何物件，並保持與頂部壁櫃距離至少 20 釐米。
 6. 微波爐兩旁應與牆壁距離至少 5 釐米，爐背應與牆壁至少距離 10 釐米。
- 警告：為了防止觸電，必須確保此微波爐接地良好。**

安全使用要點

使用

1. 使用前請詳細閱讀“使用手冊”全部內容。
2. 本微波爐專為家庭加熱及烹調食物而設計，故不適用於其它工商用途。
3. **警告：只有在已經提供充分的指導以致於兒童能夠採用安全的方法使用微波爐，並且明白不正確的使用會造成危險時，才能允許兒童在無人監控的情況下使用微波爐。**
4. 用戶使用之前，應檢查所用器皿是否適用於微波爐。
 - i. 微波烹調時切勿使用金屬器皿。帶金、銀邊的器皿也不應使用。微波爐中通常使用陶瓷、耐熱玻璃、耐熱塑膠或紙質器皿。
 - ii. 使用燒烤或燒烤組合功能時，切勿將鋁質或其它金屬器皿放在金屬網架上，且金屬網架不應接觸爐腔內壁，以防止打火。
 - iii. 窄頸瓶不可直接放入微波爐烹煮。
 - iv. 使用保鮮紙遮蓋食物時，請將保鮮紙一角摺上，使之透氣，煮好後將保鮮紙小心拆開，以免蒸汽灼傷。
5. 使用時先放入轉盤支承及玻璃轉盤，再將盛好食物的器皿放在玻璃轉盤上進行烹調。
6. 爐內無食物時，請不要使微波爐工作，以免空載運行損壞機器。
7. 切勿將一般的水銀溫度計放入爐內邊加熱，邊測量，以免引起打火或損壞。
8. 烹調少量食物時，要多加觀察，防止過熱起火。
9. 當食物在塑膠、紙或其它可燃材料製成的易處理容器中加熱或烹調時，應時刻注意，防止起火。
10. 使用燒烤烹調時爐內溫度很高，翻轉食物時應戴上手套。燒烤管變紅或剛完成烹調時，切勿碰觸內部上板。
11. 燒烤烹調不要長期停滯不用，否則由於燒烤管上沉積過多的油漬，再次使用燒烤時將產生大量的油煙。
12. 烹調中發生冒煙或起火現象時，請不要立刻打開爐門，否則遇空氣會加大火勢，應立即切斷電源。
13. 從微波爐內提取食物和器皿時，應當使用鍋夾或戴上隔熱手套，以免高溫燙傷。
14. 為防止轉盤受損壞，請遵守下列事項：
15. 用水清洗轉盤時，應先待轉盤冷卻。
16. 切勿置滾熱食品或熾熱容器於冷卻的轉盤之上。
17. 切勿置冰冷食品或冰冷容器於熾熱的轉盤之上。
18. 注意轉盤的最大負載重量不能超過 5kg。
19. 每次微波爐使用完畢，最好將一盛滿水的玻璃杯置於爐內玻璃轉盤上，避免誤操作損壞機器。
20. 不要用微波爐儲存任何物品。
21. 奶瓶和嬰兒食品罐應經過攪拌或搖動，餵食前應檢查瓶內食物的溫度，避免燙傷。
22. **警告：除有持牌維修員外，切勿自行執行檢修操作，包括拆下防止微波能量洩漏的防護蓋等操作。**
23. **警告：如果微波爐門或閘封已損壞，則不得再使用，直到經有資格的維修人員修好為止。**
24. **警告：不要直接加熱裝在密封容器內的液體或其他食物，因為這樣有可能發生爆炸。**
25. **警告：如果電源軟線損壞，為了避免危險，必須由製造廠、其維修部或類似的專業人員更換。**
26. **警告：微波爐屬於有人看管的產品，請在烹調過程中人不要離開現場。**
27. **警告：用微波爐燒開水時要儘量使用無蓋的寬口容器。如要加入咖啡粉、奶粉、麥片或其它沖劑，必須先對開水進行攪拌或擱置幾分鐘稍涼，以免水沸騰而被燙傷。**
28. 一般電器產品並不是為體質、感覺、或智力有障礙人士（包括小孩）、或缺乏經驗及知識者使用，除非他們曾經接受負責安全人士的監督或指示。
29. 請小心看管小孩，以確保他們不會把此電器當作玩具。

食物

1. 切勿煮帶殼蛋，壓力會使蛋爆裂。另外蛋黃、蛋白也要用牙籤刺穿數次。
警告——已煮好的湯圓或荷包蛋等，馬上取出可能會造成其內部液體沸騰爆破而濺傷人體。注意應打開爐門後，略擱置一會兒，再取出食用。
2. 煮食時間不宜過長，因為煮食不足可繼續，而過度則無法補救。
3. 烹調食譜所提供的是烹調的大約時間，影響烹調時間的因素有：所喜歡的煮熟程度、食物的初溫、形狀大小、份量和使用器皿的形狀、大小以及食物的排列、遮蓋、翻攪等。請適當修正烹調時間。
4. 表面無孔的食物（如蛋、栗子、馬鈴薯、香腸等），請去皮或在外皮上開一裂縫或叉幾個小孔，否則受熱膨脹，可能發生爆裂。
5. 不可用微波爐煎炸食物。
6. 燒烤時，不要遮蓋食物，因為食物需要直接吸收輻射熱能。

微波爐使用常識

下列情況均屬正常：

現象	原因
微波爐燈光昏暗。	烹調時若不以微波高火而用較低的火力烹調，微波爐的燈光會變得微弱並有聲響產生，這是微波爐在控制火力時所產生的正常現象。
蒸汽凝聚在爐門及有蒸汽從排氣口排出。	烹調時，食物會有蒸汽散發，而大部分會從排氣口排出，但蒸汽也會在較涼的地方如爐門上凝聚，這是正常現象。
使用組合功能時，微波爐會有聲響發出。	這些聲響是因為微波爐自動交替轉換微波火力和燒烤火力，實現微波燒烤組合功能而產生，故這屬於正常現象。
當使用燒烤及組合功能時，微波爐有白煙冒出及產生異味。	初次使用燒烤或組合功能時，微波爐有白煙冒出及產生異味，這是由微波爐的隔熱棉發出的，屬正常現象。微波爐必須定期洗擦乾淨，特別在使用燒烤功能後，任何積聚在爐頂及爐壁的油漬，都會引起白煙冒出。
當使用燒烤及組合烹調功能時，外殼頂部會向上略凸起。	這是由於在燒烤管發熱時，其溫度很高，在其上面的外殼部位受熱膨脹，而發生變形，略向上凸起，此現象是暫時的，停機冷卻後會恢復原形。如果長時間使用燒烤功能，該部位會略變黃，這是屬於正常現象。
當使用燒烤及組合烹調功能等時，前門板會略向內凹陷。	這是由於爐腔內溫度很高，腔內氣壓很低，使前門板受向內氣壓壓力而略向內凹陷，此現象是暫時的，停機冷卻後會恢復正常。
電壓波動，會影響微波、燒烤或組合烹調時間及效果。	當電壓波動時，微波爐仍能工作，只是受電壓偏高或偏低的影響，輸出功率會相應升高或降低，故烹調時間及效果會有所變化，這是屬於正常現象。

注意：

- 根據不同烹調方式，選用合適的器皿十分重要。如果選擇不當，不僅會影響烹調效果，而且還會造成損壞器皿或微波爐的不良後果。
- 使用燒烤或燒烤組合功能時，如果選用金屬網架，則具體操作應參考安全使用要點中第4點的有關內容。
- 下表中“○”號為適用，“X”為不適用。

器 皿	燒烤組合	燒 烤	微 波
耐熱玻璃	○	○	○
陶器、瓷器	X	X	○
一般玻璃	X	X	X
耐熱塑膠	X	X	○
一般塑膠	X	X	X
微波保鮮膜	X	X	○
金屬網架	X	○	X
金屬器皿	X	○	X


如果微波爐不工作，應檢查：

- ▲ 電源插頭是否插好
- ▲ 爐門是否關好
- ▲ 兒童保險鎖是否被鎖住
- ▲ 家電保護器是否跳閘或燒斷

如果爐內無食物，而微波爐被偶然啟動：


- ▲ 請立即打開爐門或按【取消】鍵以停止其工作！

結構圖示

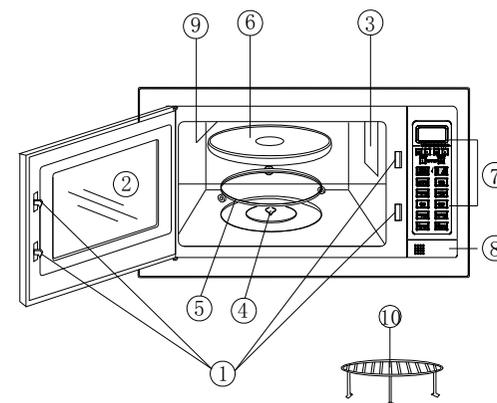

- 門安全聯鎖開關：爐門打開，微波爐不能工作；爐門關上，微波爐才能工作。
- 視窗窗：有金屬遮罩層，可透過網孔，觀察食物烹調情況。
- 微波導口：磁控管發射的微波進入腔體的通。
- 轉軸：帶動玻璃轉盤轉動。
- 轉盤支承：支承玻璃轉盤並按其軌道轉動。
- 玻璃轉盤：裝好食物的容器放在轉盤上，加熱時轉盤轉動，使食物烹調均勻，以達到理想均勻烹調的效果。
- 控制板：詳見控制板說明。
- 爐門按鍵開關。
- 燒烤管：在爐腔頂部。
- 金屬網架：燒烤食物時用的托架。

控制板說明

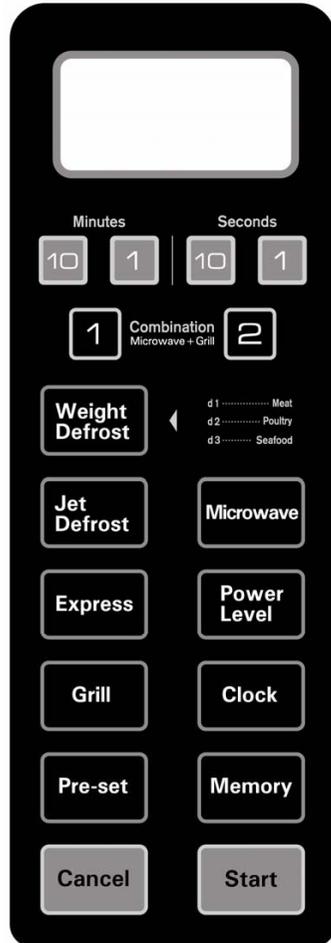

微波 (MICROWAVE)

- 用來輸入微波烹調程式。
- 烹調時間最長可選擇到 99 分 99 秒。

火力 (POWER LEVEL)

- 用來輸入所需微波火力，共有 6 種火力調節，火力強度以 20% 依次遞減。
- 在微波爐烹調時如不另外輸入火力，微波爐將自動以最高火力烹調。
- 微波烹調過程中，按【火力】鍵可查詢當前火力。
- 下麵是各火力相應的顯示符號及輸出功率：

火力	輸出功率
按 1 次	100% 輸出功率
按 2 次	80% 輸出功率
按 3 次	60% 輸出功率
按 4 次	40% 輸出功率
按 5 次	20% 輸出功率
按 6 次	計時功能

時鐘 (CLOCK)

- 用來輸入當日時間或在烹調過程中按【時鐘】鍵可查詢當前時間。
- 當發生故障或切斷電源時，必須重新調校時間。

取消 (CLEAR)

- 按【取消】鍵可以取消前面已輸入的操作。

啟動 (START)

- 按【啟動】鍵可以啟動微波爐工作。當程式開始時用以指令微波爐在預設時間自動啟動。
- 在輸入預設程式前，必須將時鐘校正。
- 當微波爐正處於預設狀態，預設顯示燈將會不停的閃動。
- 快速烹調不能設定預設功能。

(翻往下頁)

(續上頁)

記憶 (MEMORY)

- 如選擇多段烹調功能，可按【記憶】鍵選定在第一階段或第二階段烹調。
- 微波爐的顯示窗顯示出微波爐正進行的烹調階段。

燒烤 (GRILL)

- 烹調時間最長可選擇到 99 分 99 秒。
- 單一燒烤管發熱，適用於燒烤薄塊的肉類，如牛扒、豬扒、串燒、香腸或雞翼等。此功能也適合燒烘三文治等。

組合 1 (COMBINATION 1)

- 烹調時間最長可選擇到 99 分 99 秒。
- 30% 時間微波輸出，70% 時間燒烤管發熱，燒烤效果最佳。適用於燒烤如西餐牛肉排等。

組合 2 (COMBINATION 2)

- 烹調時間最長可選擇到 99 分 99 秒。
- 55% 時間微波輸出，45% 時間燒烤管發熱，微波煮食速度最快。適用於燒烤肉類，特別是燒烤如整雞、鴨、鵝等。

特別功能

兒童保險鎖


- 用來防止兒童在沒有成人指導的情況下使用本爐。
- 當兒童保險鎖啟動後，【童鎖】顯示燈將會亮起，此時微波爐不能操作。

計時

- 用來方便你進行爐外烹飪操作計時時，當計時程式開始，爐內的照明燈、冷卻風扇及轉盤也開始工作，而微波能量卻完全停止輻射，計時程式結束時，系統將會發出提示音。

自動提示

- 當完成解凍或烹調程式後，如果爐門不被打開或任意鍵沒有被按下，微波爐將每隔兩分鐘自動發出一提示音。

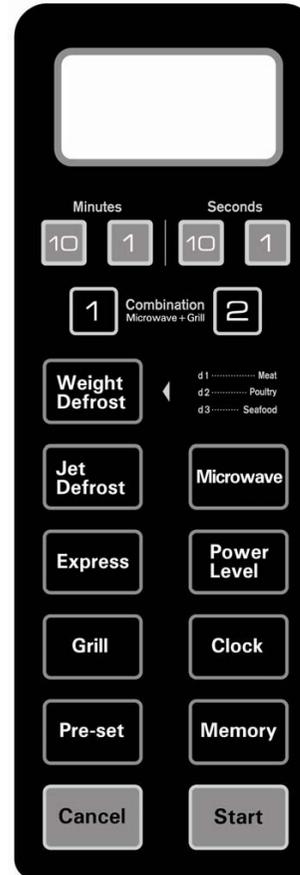

操作方法

在設置時鐘、預設及按重解凍烹調時，按數位鍵 10 分可輸入小時的十位和千克級重量，按 1 分可輸入小時的個位和百克級重量，按 10 秒可輸入分鐘的十位和十克級重量，按 1 秒可輸入分鐘的個位和克級重量。

調校時鐘

例: 6 時 30 分

步驟:

1. 按【時鐘】鍵；
2. 按【取消】鍵；
3. 按數字鍵【1 分】和【10 秒】到顯示 6:30；
4. 再按【時鐘】鍵一次確認。

微波烹調

例：輸入 2 分鐘，40%火力的烹調程式

步驟：

1. 按【微波】鍵一次；
2. 按數位鍵【1 分】到顯示 2:00；
3. 按【火力】鍵到顯示所需火力；
4. 按【啟動】鍵。

燒烤烹調

例：輸入 12 分鐘的燒烤烹調程式

步驟：

1. 按【燒烤】鍵一次；
2. 按數字鍵【10 分】和【1 分】到顯示 12:00；
3. 按【啟動】鍵。

燒烤組合 1 烹調

例：輸入 12 分鐘的燒烤組合 1 烹調程式

步驟：

1. 按【組合 1】鍵一次；
2. 按數字鍵【10 分】和【1 分】到顯示 12:00；
3. 按【啟動】鍵。

燒烤組合 2 烹調

例：輸入 12 分鐘的燒烤組合 2 烹調程式

步驟：

1. 按【組合 2】鍵一次；
2. 按數字鍵【10 分】和【1 分】到顯示 12:00；
3. 按【啟動】鍵。

預設

例：如當前時鐘為 1 點整，輸入 2 時整開始 7 分鐘 40%

火力的微波烹調程式

步驟：

1. 按【預設】鍵；
2. 按數位鍵【1 分】到顯示 2:00；
3. 按【微波】鍵一次；
4. 按數位鍵【1 分】到顯示 7:00；
5. 按【火力】鍵到顯示所需火力；
6. 按【啟動】鍵。

注：微波爐將在 2 時整開始進行微波烹調。

快速烹調

例：輸入 2 分鐘的快速烹調程式

步驟：

1. 按【快速烹調】鍵到顯示 2:00；
2. 按【啟動】鍵。

按重解凍

例：輸入解凍 600 克蝦的程式

步驟：

1. 按【按重解凍】鍵到顯示 d3；
2. 按數位鍵【1 分】到顯示 600；
3. 按【啟動】鍵。

注：解凍過程中翻轉食物可使之解凍均勻。

快速解凍

例：輸入 5 分 30 秒的快速解凍程式

步驟：

1. 按【快速解凍】鍵；
2. 按數字鍵【1 分】和【10 秒】到顯示 5:30；
3. 按【啟動】鍵。

注：快速解凍功能可用在按重解凍範圍以外的食物或超出按重解凍最高重量限制的食物上。

多段烹調

本微波爐具有將多個烹調程式全部或部分程式組合在一起，進行連續工作的特點（最多可設三段烹調程式）。

例：輸入多段烹調程式

快速解凍——微波烹調——燒烤烹調

步驟：

1. 按【快速解凍】鍵；
2. 按數位鍵輸入所需解凍時間；
3. 按【記憶】鍵，此時顯示燈 1S 亮；
4. 按【微波】鍵；
5. 按數位鍵輸入所需烹調時間；
6. 按【火力】鍵輸入所需微波火力；
7. 按【記憶】鍵，此時顯示燈 2S 亮；
8. 按【燒烤】鍵；
9. 按數位鍵輸入所需烹調時間；
10. 按【啟動】鍵。

注：

1. 快速解凍和按重解凍程式只能設在第一段烹調，在輸入第一或第二段烹調程序時必須先按【記憶】鍵。
2. 快速烹調不能設在多段烹調程式中。

計時

步驟：

1. 按【微波】鍵；
2. 用數位鍵輸入所需計時時間；
3. 按【火力】鍵到顯示 0 火力；
4. 按【啟動】鍵。

兒童保險鎖

a.兒童保險鎖設置

步驟：

在待機狀態下，同時按住【10 分】【1 秒】鍵，系統會發出提示音，此時兒童保險鎖顯示燈 LOCK 會亮起，微波爐不能操作。

b.解除兒童保險鎖

步驟：

同時按住【10 分】【1 秒】鍵，系統會發出提示音，此時兒童保險鎖顯示燈 LOCK 會熄滅，微波爐可以操作。

微波爐的清潔與保養

注意：切勿使用強洗滌劑、汽油、研磨粉和金屬刷來清洗爐子的任何部位

1. 清洗爐腔之前，須關閉微波爐，並從插座上拔去電源線插頭。
2. 經常保持爐腔清潔。當食物或湯水濺到爐內壁時，可用濕布擦去。如爐內壁很髒則可使用軟性洗劑，切勿使用粗糙、磨損性的洗劑。
3. 必須經常清潔玻璃盤。可先用溫熱的肥皂水清洗，再用清水洗淨擦乾。
4. 必須經常擦洗轉盤支承和爐腔底面。請用軟性劑洗爐腔底面，而轉盤支承則可用溫熱的肥皂水洗，清洗後抹乾放回原處。
5. 必須經常清潔門的密封面。可先用軟乾布浸肥皂水清洗，再用軟乾布擦淨。
6. 微波爐外表面用軟乾布浸肥皂水清洗後，再用軟乾布擦淨。注意不要讓水滲入爐縫或通風口。
7. 如控制面板被弄濕，則請用軟的乾布抹擦，不能用粗糙、磨損性的洗劑來擦控制面板，擦控制台時，請將爐門打開，以免誤操作。
8. 爐內外如有蒸氣凝成的水滴，可用軟布擦淨。
9. 當使用燒烤或組合燒烤功能時，有些食物的油漬會留在爐的內壁上，不作定期清潔，可能在使用時冒煙。這些油漬必須及時清潔。
10. 爐內如有異味，可用一杯水加幾匙檸檬汁煮 5-7 分鐘，即可消除。
11. 微波爐若長期不用，應拔掉電源插頭，放在通風乾燥，沒有腐蝕性氣體的環境中。
12. 爐子發生故障，必須由本廠培訓的專業維修人員檢修，其它任何人拆修將是危險的。

微波爐維修說明

1. 維修人員在維修微波爐時：

注意微波輻射；

不要暴露在由微波發生器或其它傳導微波能部件所發出的輻射中。

易被拆掉並可能觸及到 250V 以上的部件	可導致過度微波洩漏的元件
1. 磁控管 2. 高壓變壓器 3. 高壓電容器 4. 高壓二極體 5. 高壓保險絲	1. 磁控管安裝在波導管上，如果安裝不當。 2. 門鉤及門體固定在上、下鉸鏈上調整不當。 3. 開關托架安裝不當。 4. 門、門封、外殼發生損壞。 上述原因可導致過度微波洩漏。

2. 如需更換爐燈、電源線等，要採用本公司的專用型號。

請填妥以下空格並與發票一併保存，以便維修時核對資料。用戶提供本公司之所有資料必須正確無誤，否則免費保用將會無效。
Please fill out the form below. This information and the purchase invoice will be required for any repairs. Warranty will be invalid if information provided is found to be inaccurate.

型號 Model No. : WD900ASP30Q-5S

機身號碼 Serial No. : _____ 發票號碼 Invoice No. : _____

購買商號 Purchased From : _____ 購買日期 Purchase Date : _____

保用條例

此保用提供德國寶產品之機件在正常使用下壹年保用(自購買日起計算)，但不包括安裝、維修、保養及更換零件之人工或其他費用。

貴戶須在購機十天內，以下列其中一種方式向本公司登記資料，保用手續方正式生效：

- 1) 填妥本公司網頁內之保用登記表格
www.germanpool.com/warranty
- 2) 填妥保用登記卡，並連同購機發票之副本一併郵寄到維修及客戶服務部
(本公司將不發還發票副本或登記卡)

* 此保用不包括：非家庭性質用途；燈泡及塑膠配件；因意外而造成的損壞(包括運輸及其它)；任何附件及輔助裝置；以及一切因人為、電源接合不當、不依說明書而錯誤或疏忽使用本機、經非本公司認可之安裝及不適當維修等等所引致之損壞。

** 保用只在香港、九龍、新界區有效，東涌、愉景灣及離島，需額外收取交通費用。

客戶服務部

德國寶(香港)有限公司
香港九龍土瓜灣馬頭角道116號
新寶工商中心高層地下2-3號室
電話：+852 2333 6249
傳真：+852 2355 7100
電郵：repairs@germanpool.com

Warranty Terms & Conditions

Our Repairs & Customer Service Centre will provide rectification of any defect of manufacturing materials free of charge given that such defect is reported within 12 months from purchase date.

This warranty is not valid until Customer's registration information is returned to and received by our Service Centre within 10 days of purchase via one of the following methods:

- 1) Visit our website and register online:
www.germanpool.com/warranty
- 2) Complete all fields on the attached Warranty Card and mail it back to our Repairs & Customer Service Centre along with a photocopy of the purchase invoice (Warranty Card and invoice copy will not be returned to Customer)

* Product must be used solely for domestic purposes. Customer should always follow the operating instructions. This warranty does not apply to: replacement of accessories and parts; damages caused by incorrect voltage, improper operations, unauthorized installation or repairs as well as accidents.

** Service area includes Hong Kong Island, Kowloon and New Territories. Repairs in Tung Chung, Discovery Bay or other areas are subject to extra service charge.

Customer Service Centre

German Pool (Hong Kong) Limited
Room 2-3, Upper G/F,
Newport Centre, 116 Ma Tau Kok Road,
Tokwawan, Kowloon, H.K.
Tel : +852 2333 6249
Fax : +852 2355 7100
Email : repairs@germanpool.com