


即熱式電熱水器 | 即热式电热水器 | CRH9 | Instantaneous Water Heater | CRH9

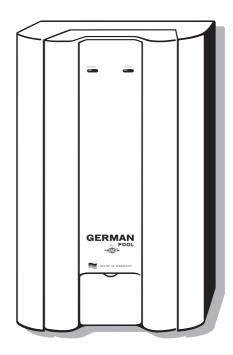

在使用之前請詳細閱讀「使用說明書」及「保用條例」,並妥為保存。在使用之前请详细阅读「使用说明书」及「保用条例」,并妥为保存。Please read these instructions and warranty information carefully before use and keep them handy for future reference.






使用説明書|使用说明书|OPERATING INSTRUCTIONS

Printed in Germany WH-CRH-M-11(3)

1. Overview

Layout of appliance

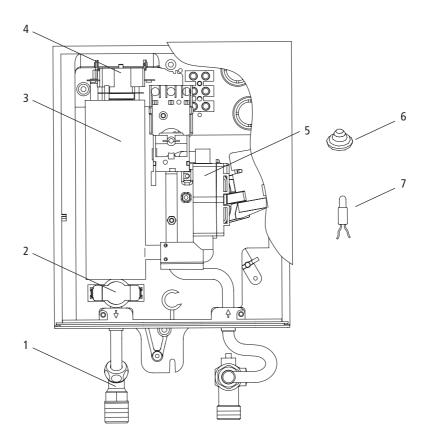

Pos. Description

- Brass connection set with back flow prevention in hot water outlet
- 2 Temperature monitor
- 3 Heating element
- 4 Safety thermal cut out

Pos. Description

- 5 Differential pressure switch
- 6 Cable seal
- 7 Pilot lamp

not shown: set of small spareparts

When ordering spare parts, please always specify the appliance model, nominal rating and serial number!

2. Table of contents

1 Overview	
2 Table of contents	3
3 Technical specifications	3
4 Operating instructions	4–6
5 Customer service	7
6 Installation	8–13
Warranty Terms and Conditions	38
Customer Service Center	39

中文使用說明書從第14頁開始 - Traditional Chinese manual starts on page 14.

中文使用說明書從第25頁開始 – Simplified Chinese manual starts on page 25.



Operating Instructions:

Please read these instructions carefully before using the appliance!

3. Technical specifications

Туре	CRH9	
Capacity	0.2 litre	
Pressure-type, rating pressure	6 bar	
Heating system	Tubular heater	
Nominal rating	8.0 kW ~ 9.6 kW	
Rated voltage (50/60 Hz)	220 – 240 V	
Rated current at 220V	36.4A	
Min. required conductor cross-section	3 × 6.0 mm ²	
Factory preset flow reducer	5.0 l/min	
Increase of temperature Δt at present flow	23 K	
Hot water temperature at 20 °C inlet temp.	43 ℃	
Switch-on flow rate	2 l/min	
Useful for cold water up to	30°C	
Water connection	½" B.S.P. surface-mounted or flush-mounted	
Net weight and dimensions (H \times W \times D)	2.2 kg / 33 × 21 × 9 cm	
Protection class and type of protection to VDE	1 / IP25	
Safety mark	see type plate	

4. Operation instructions



Safety instructions for closed-outlet water heaters:

- Installation, initial operation and maintenance of this appliance must only be conducted by an authorised professional, who will then be responsible for adherence to applicable standards and installation regulations. We assume no liability for any damages caused by failure to observe these instructions.
- Do not use the appliance until it has been correctly installed and unless it is in perfect working order.
- The appliance is only suitable for domestic use and similar applications inside closed, frost-free rooms, and must only
 be used to heat incoming water from mains supply.
- The appliance must never be exposed to frost.
- The appliance must be earthed at all times.
- The maximum water pressure must not exceed the value on the label.
- Before commissioning for the first time and each time the appliance is emptied (e.g. due to work on the plumbing system, if there is a risk of freezing or in case of maintenance), the appliance must be vented correctly in accordance with the instructions in this manual.
- Do not remove the front cover under any circumstances before switching off the mains electrical supply to the unit.
- Never make technical modifications, either to the appliance itself or the electrical leads and water pipes.
- Pay attention to the fact that water temperatures in excess of approx. 43 °C are perceived as hot, especially by children, and may cause a feeling of burning. Please note that the fittings and taps may be very hot when the appliance has been in use for some time.
- Water inlet temperature must not exceed 30 °C.
- In case of malfunction, disconnect the fuses immediately. In case of leaks, cut off the cold water supply instantly. Repairs must only be carried out by the customer service department or an authorised professional.
- This appliance must not be used by any person (including children) with limited physical, sensorial or mental abilities
 or failing experience and/or knowledge unless they are supervised by a person responsible for their safety or received
 instructions about how to use the appliance. Children should be supervised in order to make sure that they do not
 play with the appliance.

4. Operation instructions





Description of appliance

This appliance is a pressure-type, hydraulically controlled instantaneous water heater for decentral water heating at one or two taps situated in close proximity to one another. e.g. kitchen sink or wash basin

Due to the integrated load-shedding circuit, this appliance can be connected to the outlet box of an electric cooker if a separate power supply is not available and provided that the cooker is connected to a 3/N/PE~380/400 V supply.

Use

The instantaneous water heater heats the water as it flows through the appliance. The appliance only consumes power during this period. The heating power is switched on automatically in the event of the minimum flow rate being exceeded. The "Power" light indicates that the heating system is switched on.

If the instantaneous water heater has been connected in combination with an electric cooker, the cooker will switch off while hot water is being withdrawn. Load shedding may only be used in conjunction with electromechanical cookers! Residual heat indicators are off while hot water is withdrawn!

The temperature of the hot water depends on the rate of flow and the temperature of the main water supply. By opening the tap more or less you can adjust the desired water temperature between approx. 40 °C and 60 °C:

less flow = more hot more flow = less hot

If the heater supplies two outlets the water from the unit will be shared between the outlets. Therefore you should use only one outlet at the time to have a sufficient flow and to avoid variation in temperature.



Temperature monitor

If the temperature rises too high, the temperature monitor will reduce the power supply until the water has cooled back to the permissible level. This is indicated by the "Overheat" light. If the water overheats frequently, the cause of the fault must be remedied and may be due, for example, to dirt in the filter, an excessive reduction in the rate of flow or an impermissibly high inflow temperature.

Venting

To prevent damage to the appliance, the instantaneous water heater must be vented before using it for the first time. Each time it is emptied (e.g. after work on the plumbing system, if there is a risk of frost or following repair work), the appliance must be re-vented before it is used again.

- 1 Disconnect appliance from the mains by removing the fuses.
- 2 Next, open and close the hot water tap valve several times until no more air emerges from the pipe and all air has been eliminated from the water heater (approx. 1 minute).
- 3 Only then should you re-connect the power supply to the unit.

How to save energy in order to protect the environment


The heat lost via the water pipes is very low when installed directly alongside the pipes leading to the taps (open-outlet taps are recommended) and the hot water is rapidly supplied without drawing a great deal of cold water first.

Cleaning the filter

In case of malfunctions, the filter within the cold water inlet should be inspected and cleaned if necessary.

4. Operation instructions



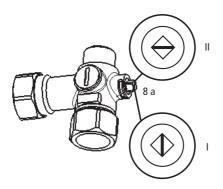




The fine filter is located in the water connection (8) and should be examined by an expert and cleaned if necessary not only when operation of the appliance deteriorates, but also in conjunction with regular servicing.

- Disconnect the instantaneous water heater by means of the house fuses and close the shut-off valve (8 a) in the cold water connection piece (position II) or shut-off the mains supply.
- 2. Unscrew the screw plug (8 b) from the cold water connection piece and take out the strainer (8 c).

Attention: Residual water comes out!

- 3. The strainer can be cleaned or replaced.
- 4. After fixtur of the strainer tighten the screw plug.
- 5. Slowly open the shut-off valve in the cold water connection piece (position l).
- Vent the unit by carefully opening and closing the affiliated warm water tap valve several times until air no longer emerges from the pipe.

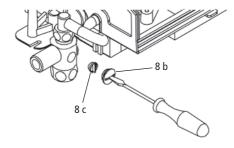


Cleaning the fine filter (surface-mounted)

The fine filter is located in the water connection (8) and should be examined by an expert and cleaned if necessary not only when operation of the appliance deteriorates, but also in conjunction with regular servicing.

- Disconnect the instantaneous water heater by means of the house fuses and shut-off the main water supply.
- 2. Unscrew the cold water inlet connection of the unit and take out the strainer (8d) of the connection piece.

Attention: Residual water comes out!

- 3. The strainer can be cleaned or replaced.
- After fixture of the strainer remount the water connection of the unit.
- 5. Carefully open the main water supply.
- Vent the unit by carefully opening and closing the affiliated warm water tap valve several times until air no longer emerges from the pipe.

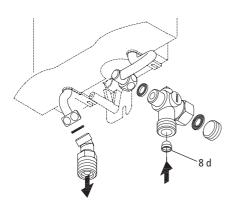

5. Customer service

If you experience a malfunction, please try to rectify the fault yourself first with the help of this table. If a fault in your appliance cannot be rectified with the aid of this table, please contact German Pool who will either assist you directly or put you in touch with a customer service contract partner in your area.

Always specify the appliance model and serial number, please!


Problem	Possible Cause	Solution
LED remains off, water remains cold	Circuit breaker tripped	Have the fault rectified and reset
The pilot lamp "Power" lights,	Heating element or electronics faulty	Reset fuse, water remains cold contact customer service
water remains cold Safety thermal cut-out tripped Reset. In car	Reset. In case of repeated trips contact customer service	
The pilot lamp "Pressure" lights, water remains cold	Flow rate too low	Increase flow pressure Clean tap fitting or shower head
	Depends on the heater	Check technical specifications
Wester flower leaves and a start	Outlet fitting dirty or calcified	Clean tap fitting or shower head
Water flows lower as expected	Filter dirty or calcified	Clean or renew the filter
	Tap not suitable	Use suitable shower head or aerator
	Electronic board	Reset fuse
The hot water is not hot enough	Flow rate is too high (winter?)	Reduce the water flow slightly
	Heating element defect	Contact customer service
Temperature and pressure vary	Cold water is being added	Only hot water can be delivered to within one degree

If you cannot rectify the fault with the aid of this table, please contact your distributer or German Pool Customer Service – China Headquarters.

Repairs may only be carried out by authorized professionals!


We can either give you the name and address of an authorised customer service company or repair the heater ourselves. In the latter case, please send in the heater (at your cost and risk) with details of the problem and a copy of the sales invoice.


If you install the instantaneous water heater CRH 9 instead of a conventional instantaneous water heater, there is generally no need to drill holes for the wall holder. In this case, you only need to screw in the double nipples as described in 2. and to secure the wall bracket.

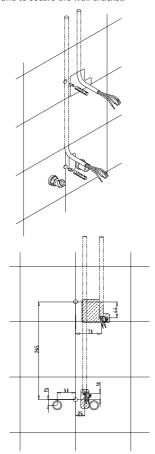


Installing the wall bracket (flush-mounted):

- Thoroughly rinse the water supply pipes before installation to remove soiling from the pipes.
- Using a 12 mm hexagon socket screw key, screw the screw-in nipple into the wall connector. After tightening, the double nipple must protrude by 12 mm.
- 3. Carefully seal the hot water connection pipe with a little P.T.F.E. Tape and screwed it into the wall connection. Mount the cold water connector piece including the 1/2" seal.
- 4. Hold the unit on the wall and align it so that the water connectors of the unit fit over the connections of the wall. Mark the drill holes and drill them using a 6 mm drill.
- Mount the unit to the wall and connect the water supply of the unit, together with the 3/8" seals.
- Open the water supply line to the unit and slowly open the shut-off valve in the cold water connection piece (8 a) (Pos.I). Check all connections for leaks.
- 7. Next, open and close the hot water tapping valve several times until no more air emerges from the line and all air has been eliminated from the instantaneous water heater.

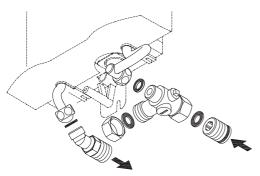


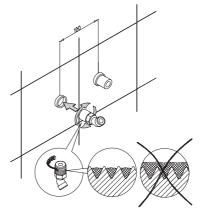


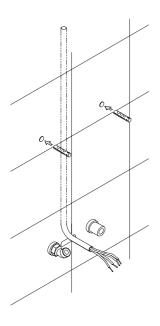

Installing the wall bracket (surface-mounted):

- Thoroughly rinse the water supply pipes before installation to remove soiling from the pipes.
- Screw the 1/2" screw in nipple and the 1/2" seal into the 1/2" union nuts of the hot-water connector.
- 3. The 1/2" cap of the side outlets of the coldwater connectors must be removed and screwed onto the open end of the screw-in nipple.
- 4. Mount the fine filter into the cold water connection piece (8 d).
- 5. The hot-water and cold-water connectors must then be screwed into the 3/8" union nut of the appliance and delivery pipe, together with the 3/8" seals.
- Mark the drill holes and drill them using a 6 mm drill. Mount the unit to the wall and connect the water supply of the unit.
- 7. The holes in the housing of the unit required for the pipes must then be broken out of the housing with the aid of a blunt implement.
- Open the water supply line to the unit and slowly open the shut-off valve in the cold water connection piece (drawing 8a on page 6).
 Check all connections for leaks.
- Next, open and close the hot water tapping valve several times until no more air emerges from the line and all air has been eliminated from the instantaneous water heater.

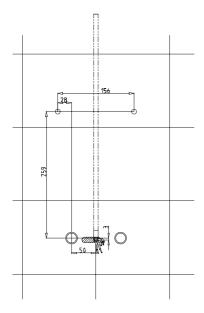

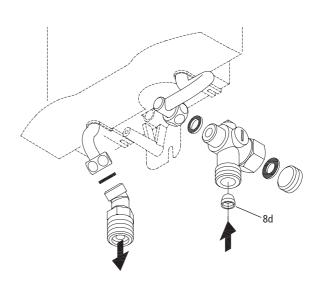





Installation instructions for the authorized technician


- The statutory regulations of the respective country, as well as those of the local electricity and water supply companies.
- The specifications on the rating plate and the technical specifications.


Installation site


- The installation site must be free from frost at all times.
- The appliance complies with protection type IP25 and may be installed in zone 1 acc. IEC
- In order to avoid thermal losses, the distance between the heater and the tapping point should be as small as possible (< 2 m).
- Best performance is guaranteed at a flow pressure of ≥ 3 bar, avoiding pressures exceeding
 6 bar
- Material of water pipes for tubular heater types: cold water: steel or copper, hot water: copper

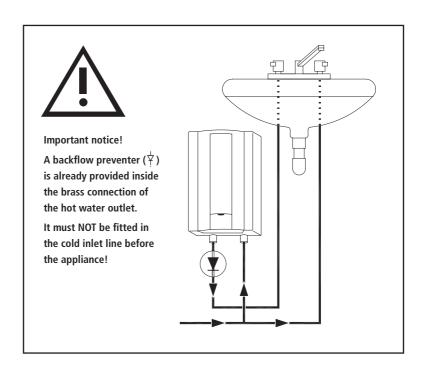

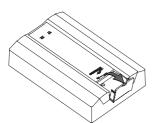

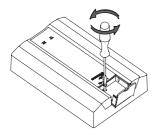


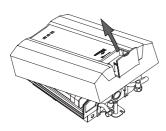


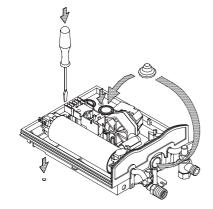


Installing the appliance:


- Rinse water supply pipes thoroughly and turn off for installation.
- Remove the front cover by unscrewing the locking screw behind the small lid.
- Locate and break out the required holes and cable inlets.Mark the drilling holes with the appliance and drill them with a 6 mm bit.
- Fit the rubber grommet supplied and insert the connecting lead. The lead must be secured with the cable clamp when using a flexible power cord.
- Screw the appliance into position using the enclosed raw plugs and screws.
- Install the appliance as shown in the principal examples above. The inlet and outlet are marked with arrows.
- The water connections are designed for surface-mounted or flush-mounted installation. They must be carefully sealed with a <u>little P.T.F.E. Tape</u> when screwed into the wall connections.
- 8. The front cover must be neatly broken at the designated points when installed on the wall.

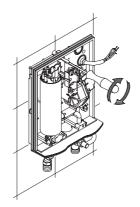


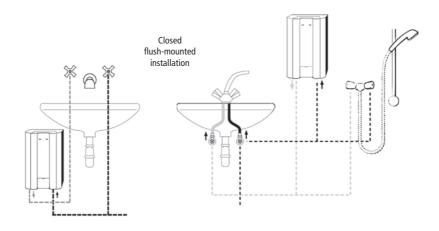

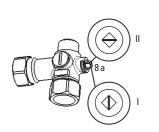



- 9. Turn on the water supply and slowly open the shutoff valve (8 a) in the cold-water connection (position I) if necessary. **Check all connections for leaks.**
- 10. Next, open and close the hot water tap several times until no more air emerges from the line and all air has been eliminated from the heater.

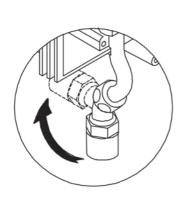

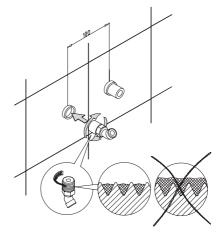



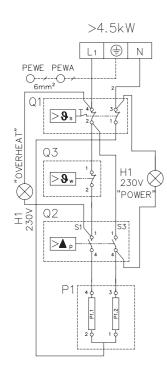

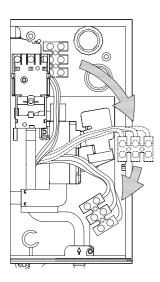


Electrical connection:

The instantaneous water heater is an appliance of protection class I and must be connected to the protective earth conductor!


- Check that the power supply is switched off prior to the electrical connection!
- The appliance must be connected to the supply by means of permanent wiring through suitable fuses having a contact separation of at least 3mm in all poles.
- The cross sectional area of the connection cable must be in accordance with the power rating.
- To protect the appliance, a fuse element must be fitted with a tripping current commensurate with the nominal current of the appliance.
- 2. Slit the grommet to match the cable size. The opening in the grommet should be slightly smaller than the cross-section of the cable in order to ensure optimum protection against water. Fit the grommet into the opening. The protection grommet must be used! The appliance must be earthed!
- The connecting terminal can be transferred to the bottom of the appliance if necessary.
- 3. Fit the front cover properly. Doublecheck whether the temperature keys can be operated easily. If not, make sure that the cover is correctly fitted. Secure the front cover with the fastening screw.
- 4. Before making the electrical connection, fill the mains and the appliance with water by carefully opening and closing the hot water tap in order to vent completely.
- Explain the user how the instantaneous water heater works and hand over the operating instructions.
- Fill in the guarantee registration card and send it to the German Pool Central Customer Service or use the online registration on our website www.germanpool.com.



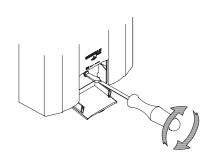

1. 概觀圖

設備佈局

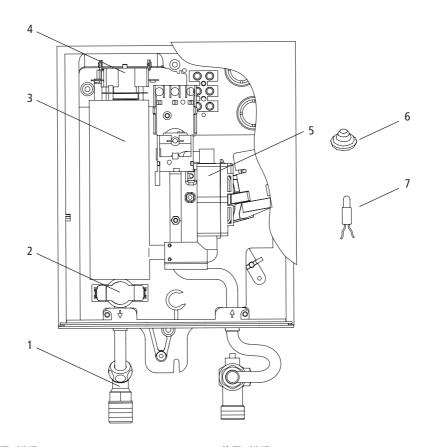

位置 說明

- 1 黃銅接駁裝置 (帶有插入式回流防止器)
- 2 温度監控器
- 3 發熱線
- 4 安全熱切斷器 (STB)
- 5 差壓開關

位置 說明

- 6 電纜密封
- 7 指示燈

沒有顯示:

細小的零配件

訂購產品零部件時,請說明產品型號、規格和序列號。

2. 目錄

1.	概觀圖	14
2.	目錄	15
	技術規格	
	操作說明	
5.	客戶服務	19
6.	安裝	- 25
保月	月條款和條件	38
客月	5服務部	39



操作說明: 使用設備之前,請仔細閱讀以下說明!

3. 技術規格

型號	CRH9	
容量	0.2 升	
壓力類型,額定壓力	6 bar	
加熱系統	器熱侃た曾	
額定功率	8.0 kW ~ 9.6 kW	
額定電壓 (50/60Hz)	220 – 240 V	
220 V 時的額定電流	36.4 A	
所需導體最小橫截面	3 × 6.0 mm ²	
出廠預設流量減速器	5.0 l/min	
當前流量下的溫度增量 Δt	23 K	
進水溫度 20 ℃ 時的熱水溫度	43 ℃	
接通流速	2 I/min	
冷水溫度	30 ℃	
水管接駁	1/2" B.S.P. 明裝或暗裝	
淨重和尺寸 (H × W × D)	2.2 kg / 33 × 21 × 9 cm	
VDE 保護等級和保護類型	1 / IP25	
安全標記	請參閱型號銘牌	

4. 操作說明



封閉式出水管熱水器的安全說明:

- 本設備的安裝、初步操作和維護必須只能由經過授權的專業人士進行,他們將負責遵守適用的標準和安裝規定。我們對由於不遵守這些說明而導致的任何損壞概不負責。
- 除非設備已正確安裝並處於最佳工作狀態,否則請勿使用設備。
- 本設備僅適用於在封閉、無霜的房間內供家庭用途和類似的應用,並且必須僅用於加熱來自幹線供給的進水。
- 本設備永遠不得暴露在霜凍環境中。
- 本設備必須始終接地。
- 最大水壓不得超過標籤上的值。
- 初次試運行之前和每次設備排空後(例如,由於在管道系統上工作後,如果有霜凍風險或如果進行維護時),必須根據本手冊中的說明對設備進行正確放氣。
- 任何情況下,請勿在切斷電源與設備的接駁之前拆下前蓋。
- 切勿進行技術改動(不論對設備本身還是電線和水管)。
- 請注意,水溫超過約43℃將被視為熱水(對小童而言尤甚),並且可能導致灼熱感。另外,設備使用一段時間後,配件和水喉可能會非常熱。
- 進水溫度不得超過30℃。
- 如果發生故障,請立即斷開保險絲。如果發生洩漏,請立即切斷冷水供給。只能由客戶服務部門或經過授權的專業人士進行維修。
- 身體、感知或精神能力有缺陷或無法獲得經驗和/或學習知識的人士(包括小童)必須在負責其安全的人士監督下或瞭解如何使用本設備後方可使用。小童應在監督下使用本設備以免用本設備玩耍。

4. 操作說明





設備說明

本設備為液壓控制、壓力型出水即熱式熱水器,用於加熱一個水喉或彼此相鄰的兩個水喉(例如,廚房水槽或洗臉盆)的分散出水。

由於採用集成式分區切斷負載電路,此設備可在沒有獨立電源的情況下接駁到電爐出線盒(如果電爐接駁的是 3/N/PE~380/400 V 電源)。

用涂

即熱式熱水器可在水流經過時對其加熱。設備僅在該時間段內耗電。當水流超過最低流速時,加熱電源會自動接通。"Power(電源)"燈指示加熱系統已經接通。

如果即熱式熱水器與電爐一起接駁,電爐將在使用熱水時關閉。分區切斷負載只可與電機式電爐一起使 用!餘熱指示燈會在使用熱水時關閉!

熱水溫度取決於幹線供水的流速及溫度。通過水喉的開啟程度,可在 $40 \, ^{\circ}$ 至 $60 \, ^{\circ}$ 之間調節所需水溫:水流小 = 水更熱

水流大 = 水更涼

如果熱水器有兩個出水口,則設備水流將在兩個出水口之間分攤。因此,在這種情況下您應該只使用一個出水口,以保證水流充足,且不會出現溫度變化。



水溫監控器

如果溫度升得太高,水溫監控器將降低電力供應,直至水溫降至允許水準。這種情況將通過 "Overheat (過熱)" 燈表示。如果水溫頻繁過熱,則必須修正故障原因,可能原因包括:沙隔中存在污垢,流速降低過度,或者注入水溫過高。

放氣

為避免設備損壞,初次使用即熱式熱水器之前必須對其進行放氣。每次排空後(例如在管道系統上工作後,如果有霜凍風險或隨後需要進行維修工作時),再次使用之前必須重新對設備進行放氣。

- 1. 拆下保險絲, 斷開設備與電源的接駁。
- 接下來,打開和關閉熱水喉閘掣數次,直到沒有氣體從管道排出且所有氣體均已從熱水器中排出(約 1分鐘)。
- 3. 然後將電源重新接駁至設備。

如何節約能源以保護環境


如果水管直接沿著與水喉(建議使用出口敞開式水喉)接駁的管道進行安裝,則經由水管流失的熱量會非常少,並且無需首先抽取大量冷水便可迅速供應熱水。

清潔沙隔

若出現故障, 應檢查冷水進水口內的沙隔, 並在必要情況下進行清潔。

4. 操作說明



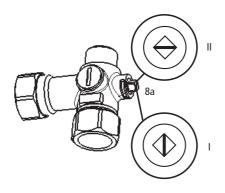


清潔細濾器(暗裝)

細濾器位於水管接駁 (8) 中,應由專家在設備運行退 化和定期維護時進行檢查和清潔。

- 通過斷開家庭保險絲的方式斷開即熱式熱水器的接 駁,關閉冷水接駁件(位置Ⅱ)中的關閉掣(8a)或 關閉幹線供給。
- 2. 旋松冷水接駁件的螺旋塞 (8b) 並取出沙隔 (8c)。

注意: 殘留的水將流出!


- 3. 沙隔可以清潔或更換。
- 4. 固定沙隔後, 旋緊螺旋塞。
- 5. 慢慢打開冷水接駁件(位置1)中的關閉掣。
- 6. 將設備放氣,方法是小心地打開和關閉相連的熱水 喉閘掣數次,直到不再有氣體從管道中排出。

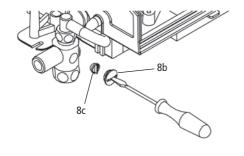

清潔細濾器(明裝)

細濾器位於水管接駁 (8) 中,應由專家在設備運行退 化和定期維護時進行檢查和清潔。

- 通過斷開家庭保險絲的方式斷開即熱式熱水器的接 駁。關閉幹線供水。
- 2. 旋松設備的冷水進水接駁裝置並從接駁件取出沙隔 (8d)。注意: 殘留的水將流出!
- 3. 沙隔可以清潔或更換。
- 4. 固定沙隔後, 請重新組裝設備的水管接駁。
- 5. 小心地打開幹線供水。
- 6. 將設備放氣,方法是小心地打開和關閉相連的熱水 喉閘掣數次,直到不再有氣體從管道中排出。

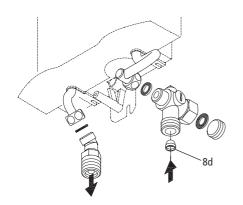

5. 客戶服務

如果您遇到故障,請首先嘗試借助此表格自行修復故障。如果借助此表格無法修復設備的故障,請聯繫 German Pool,我們將直接為您提供幫助,或幫助您與當地的客戶服務簽約合作夥伴進行聯繫。

請務必指定設備型號和序列號!


故障	可能的原因	解決方案
LED 不亮,水不熱	電路斷路器已觸發	修復該故障並重定
"Power" (電源)指示燈亮起,	發熱線或電子設備故障	重定保險絲,如果水仍然不熱,請聯 繫客戶服務
水不熱	安全熱切斷器已觸發	復位。如果反復跳閘,請聯繫客戶 服務
"Pressure" (壓力)指示燈亮起, 水不熱	流速過低	增加流量壓力清潔水喉配件或淋浴頭
水流如預期降低速度	取決於熱水器	查看技術規格
	出水管配件髒汙或鈣化	清潔水喉配件或淋浴頭
	沙隔髒汙或鈣化	清潔或更換沙隔
	水喉不合適	使用合適的淋浴頭或通風裝置
	電路板	復位保險絲
熱水不夠熱	流速過高(冬季?)	稍微減少水流量
	發熱線故障	聯繫客戶服務
溫度和壓力變化	添加了冷水	只提供某一度範圍內的熱水

如果借助此表格無法修復故障,請聯繫您的分銷商或德國寶客戶服務總部。

只能由經過授權的專業人士進行維修!


我們可能會向經過授權的客戶服務公司提供您的姓名和地址,也可能會自己維修熱水器。如果是後一種情況,請遞交熱水器(自行承擔費用和風險)及問題詳情和銷售發票的副本。


如果您安裝的是即熱式熱水器 CRH 9 而不是傳統的即熱式熱水器,則通常牆壁固定支架不需要鑽孔。 在這種情況下,您只需要如 2 中所述旋緊雙向管接頭並固定掛牆背碼即可。

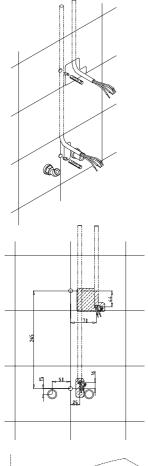


安裝掛牆背碼(暗裝):

- 1. 安裝前, 仔細清洗供水管道, 以除去管道中的髒汙。
- 2. 使用 12 mm 的内六角形螺釘扳手,將旋入杭牙旋入牆壁接頭中。 旋緊後,杭牙必須突出 12 mm。
- 3. 使用少量 P.T.F.E. 仔細密封熱水接駁管。將其用帶子固定並旋入牆壁接駁裝置中。裝配附帶 1/2" 密封件的冷水接駁件。
- 4. 握住牆壁上的設備並將其對齊,以便設備的水管接頭裝在牆壁連接裝置上。標記鑽孔位置並使用 6 mm 鑽嘴來鑽孔。
- 5. 將設備裝到牆上並接駁設備的水源,以及 3/8" 密封件。
- 6. 打開設備的供水管道並慢慢打開冷水接駁件 (8a) (位置 1) 中的關 閉掣。檢查所有接駁有無洩漏。
- 7. 接下來,打開和關閉熱水喉閘掣數次,直到沒有氣體從管道排出 並且所有氣體均已從即熱式熱水器中排出。

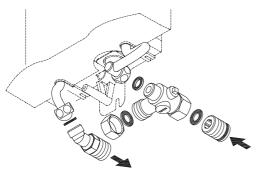


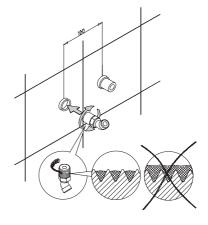


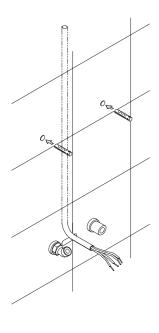

安裝掛牆背碼(明裝):

- 1. 安裝前, 仔細清洗供水管道, 以除去管道中的髒汙。
- 2. 將管接頭中的 1/2" 螺釘和 1/2" 密封件旋到熱水管接頭的 1/2" 管接螺母中。
- 3. 必須卸下冷水管接頭側面出水管的 1/2" 螺帽, 並將其旋到旋入杭 牙的開口端。
- 4. 將細濾器裝到冷水接駁件 (8d) 中。
- 5. 然後,必須將熱水和冷水管接頭旋到設備和輸送管道的 3/8" 管接 螺母以及 3/8" 密封件上。
- 6. 標記鑽孔位置並使用 6 mm 鑽嘴來鑽孔。將設備裝到牆上並接駁設 備的水源。
- 7. 設備外殼上必須有孔, 管路才能在鈍器的協助下穿出外殼。
- 8. 打開設備的供水管道並慢慢打開冷水接駁件 (8a) 中的關閉掣。檢 查所有接駁有無洩漏。
- 接下來,打開和關閉熱水喉閘掣數次,直到沒有氣體從管道排出並且所有氣體均已從即熱式熱水器中排出。

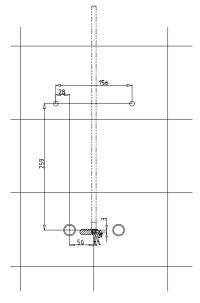

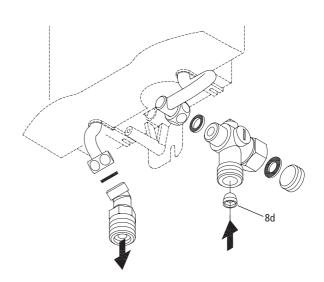





適用于經授權技術人士的安裝說明


- · 各國家/地區的法律規定以及當地的電力和水務署的規定。
- 標稱銘牌上的規格和技術規格。


安裝地點


- 安裝地點必須一律為無霜環境。
- 設備符合保護類型 IP25 並且可根據 IEC 安裝在區域 1。
- 要避免熱量流失,熱水器和分接點的距離應盡可能小 (< 2 m)。
- 流動壓力大於等於 3 bar 時可以保證最佳性能, 請避免壓力超過 6 bar。
- 管式加熱器型號的水管材料:冷水:鋼或銅,熱水:銅。

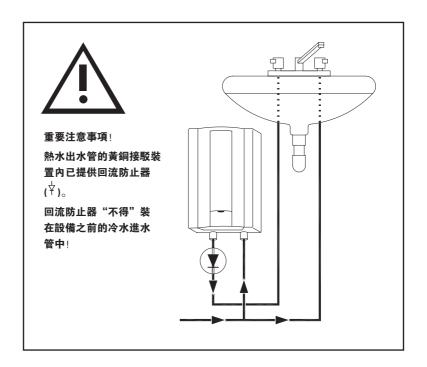

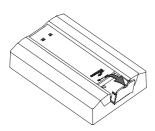

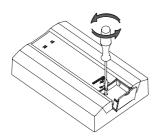


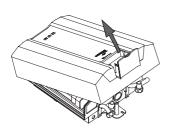


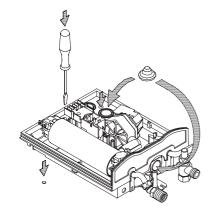


安裝設備:


- 1. 徹底清洗供水管道並關閉以便安裝。
- 2. 通過旋松小蓋子後面的鎖定螺釘, 卸下前蓋。
- 3. 找到並打破所需的孔和電纜入口。使用設備標記鑽 孔位置並以 6 mm 鑽嘴鑽孔。
- 装上提供的橡膠墊圈並插入接駁導線。使用撓性電源線時,必須使用電纜夾固定導線。
- 5. 使用附帶的原裝螺塞和螺釘將設備固定到位。
- 6. 如上面的基本示例所示安裝設備。使用箭頭標記進 水口和出水口。
- 7. 水管接駁設計對於明裝或暗裝均可。必須使用<u>少量</u> P.T.F.E. 仔细地密封。 固定到牆壁接駁後使用帶子固 定。
- 8. 安裝到牆上時, 前蓋必須在指定點打破。

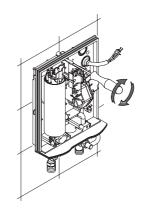


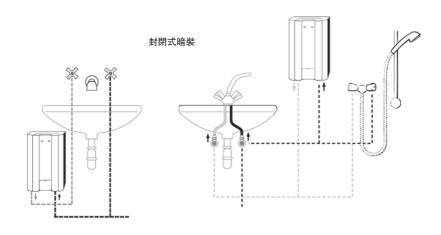

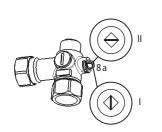


- 9. 打開水源並慢慢打開冷水接駁(位置1)中的關閉掣(8a)如有必要)。檢查所有接駁有無洩漏。
- 10. 接下來,打開和關閉熱水喉數次,直到沒有氣體從管道排出並且所有氣體均已從熱水器中排出。

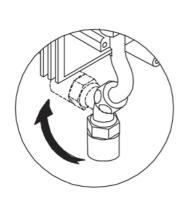

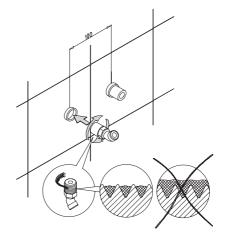




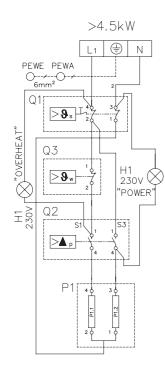


電氣接駁:

即熱式熱水器是一種保護等級為 I 的設備,必須接駁至保護性接地 連體!


- 1. 進行電氣接駁之前請檢查電源是否關閉!
- 設備必須以永久接線的方式通過合適的保險絲(離所有電極至少 3 mm 的觸點間隔)接駁至電源。
- 接駁電纜的橫截面必須符合額定功率要求。
- 為保護設備,必須裝有跳掣電流與設備額定電流相等的保險絲 元件。
- 2. 切開墊圈以匹配電纜大小。墊圈中的開口應稍小於電纜的橫截 面,以便確保最佳防水保護。將墊圈裝入開口中。必須使用保護 墊圈! 設備必須接地!
- 如有必要,接線終端可轉移到設備底部。
- 3. 正確裝上前蓋。再次檢查是否可以輕鬆操作溫度按鍵。如果不 行,請確保正確安裝前蓋。使用緊固螺釘固定前蓋。
- 4. 進行電氣接駁之前,小心地打開和關閉熱水喉將幹線和設備裝滿水,以便完全放氣。
- 5. 向用戶說明即熱式熱水器的工作原理並轉交操作說明。
- 6. 填寫保用註冊卡並將其發給 German Pool 中心客戶服務部或使用 我們網站 www.germanpool.com 上的線上註冊。

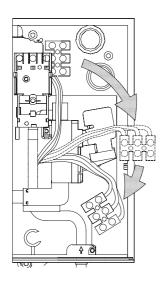

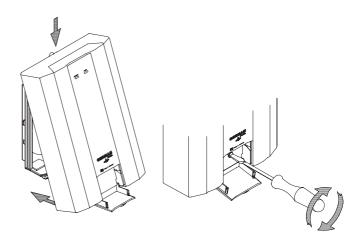

1. 概述

设备布局

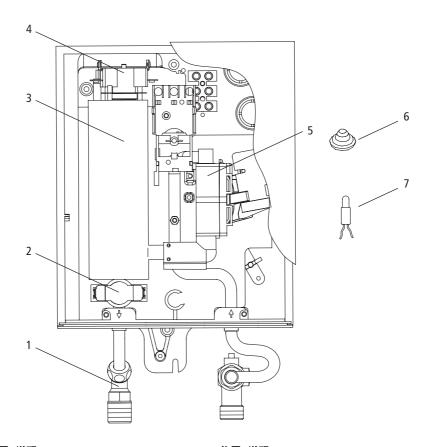

	3M 0D
位置	说明

- 1 黄铜连接装置 (带有插入式回流防止器)
- 2 温度监控器
- 3 加热元件
- 4 安全热熔断路器 (STB)
- 5 差压开关

位置 说明

- 6 电缆密封
- 7 指示灯

沒有顯示:

細小的零配件

订购产品零部件时,请说明产品型号,规格和序列号。

2. 目录

1.	概述	26
2.	目录	27
	技术规格	
	操作说明	
5.	客户服务	3 ⁻
6.	安装	- 37
保値	多条款和条件	38
客戶	中服务部	39



操作说明: 使用设备之前,请仔细阅读以下说明!

3. 技术规格

型号	CRH9	
容量	0.2 升	
压力类型,额定压力	6 bar	
加热系统	管式加热器	
额定功率	8.0 kW ~ 9.6 kW	
额定电压 (50/60 Hz)	220 – 240 V	
220 V 时的额定电流	36.4A	
所需导体最小横截面	3 × 6.0 mm ²	
出厂预设流量减速器	5.0 l/min	
当前流量下的温度增量 Δt	23 K	
进水温度 20℃ 时的热水温度	43 °C	
接通流速	2 l/min	
冷水温度	30°C	
水管连接	" B.S.P. 明装或暗装	
净重和尺寸 (H × W × D)	2.2 kg / 33 × 21 × 9 cm	
VDE 保护等级和保护类型	1 / IP25	
安全标记	请参阅型号铭牌	

4. 操作说明



封闭式出水管热水器的安全说明:

- 本设备的安装、初始操作和维护必须只能由经过授权的专业人员进行,他们将负责遵守适用的标准和安装规定。我们对由于不遵守这些说明而导致的任何损坏概不负责。
- 除非设备已正确安装并处于最佳工作状态,否则请勿使用设备。
- 本设备仅适用于在封闭、无霜的房间内供家庭用途和类似的应用,并且必须仅用于加热来自干线供给的进水。
- 本设备永远不得暴露在霜冻环境中。
- 本设备必须始终接地。
- 最大水压不得超过标签上的值。
- · 初次试运行之前和每次设备排空后(例如,由于在管道系统上工作后,如果有霜冻风险或如果进行维护时),必须根据本手册中的说明对设备进行正确放气。
- · 任何情况下,请勿在切断电源与设备的连接之前拆下前盖。
- · 切勿进行技术改动(不论对设备本身还是电线和水管)。
- 请注意,水温超过约43℃将被视为热水(尤其是对儿童而言),并且可能导致灼热感。另外,设备使用一段时间后,配件和水龙头可能会非常热。
- 进水温度不得超过 30°C。
- · 如果发生故障,请立即断开保险丝。 如果发生泄漏,请立即切断冷水供给。 只能由客户服务部门或 经过授权的专业人员进行维修。
- 身体、感知或精神能力有缺陷或无法获得经验和/或学习知识的人员(包括儿童)必须在负责其安全的人员监督下或了解如何使用本设备后方可使用。儿童应在监督下使用本设备以免其用本设备玩耍。

4. 操作说明





设备说明

本设备为液压控制的、压力型出水即热式热水器,用于加热一个水龙头或彼此相 邻的两个水龙头(例如,厨房水槽或洗脸盆)的分散出水。

由于采用集成式分区切断负载电路,此设备可在没有独立电源的情况下连接到电炉出线盒(如果电炉连接的是 3/N/PE~380/400 V 电源)。

用途

即热式热水器可在水流经过时对其加热。设备仅在该时间段内耗电。当水流超过最低流速时,加热电源会自动接通。"Power(电源)"灯指示加热系统已经接通。

如果即热式热水器与电炉一起连接,电炉将在使用热水时关闭。分区切断负载只可与电机式电炉一起使 用! 余热指示灯会在使用热水时关闭!

热水温度取决于干线供水的流速及温度。通过水龙头的开启程度,可在 $40 \,^\circ$ C 至 $60 \,^\circ$ C 之间调节所需水温:

水流小 = 水更热

水流大 = 水更凉

如果热水器有两个出水口,则设备水流将在两个出水口之间分摊。因此,在这种情况下您应该只使用一个出水口,以保证水流充足,且不会出现温度变化。



水温监控器

如果温度升得太高,水温监控器将降低电力供应,直至水温降至允许水平。这种情况将通过"Overheat(过热)"灯表示。如果水温频繁过热,则必须修正故障原因,可能原因包括:过滤器中存在污垢,流速降低过度,或者注入水温过高。

放气

为避免设备损坏,初次使用即热式热水器之前必须对其进行放气。 每次排空后(例如在管道系统上工作后,如果有霜冻风险或随后需要进行维修工作时),再次使用之前必须重新对设备进行放气。

- 1. 拆下保险丝,断开设备与电源的连接。
- 2. 接下来,打开和关闭热水龙头阀门数次,直到没有气体从管道排出并且所有气体均已从热水器中排出(约1分钟)。
- 3. 然后将电源重新连接至设备。

如何节约能源以保护环境


如果水管直接沿着与水龙头(建议使用出口敞开式水龙头)连接的管道进行安装,则经由水管流失的热量会非常少,并且无需首先抽取大量冷水便可迅速供应热水。

清洁过滤器

若出现故障,应检查冷水进水口内的过滤器,并在必要情况下进行清洁。

4. 操作说明




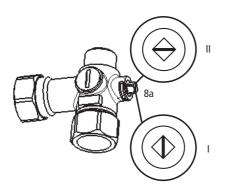

清洁细滤器(暗装)

细滤器位于水管连接(8)中,应由专家在设备运行退 化和定期维护时进行检查和清洁。


- 通过断开家庭保险丝的方式断开即热式热水器的 连接,关闭冷水连接件(位置 □)中的关闭阀(8a) 或关闭干线供给。
- 2. 旋松冷水连接件的螺旋塞(8b)并取出滤网(8c)。 注 意: 残留的水将流出!
- 3. 滤网可以清洁或更换。
- 4. 固定滤网后,拧紧螺旋塞。
- 5. 慢慢打开冷水连接件(位置)中的关闭阀。
- 6. 将设备放气,方法是小心地打开和关闭相连的热水龙头阀门数次,直到不再有气体从管道中排出。

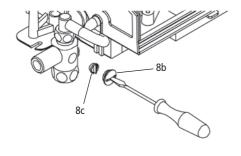

清洁细滤器 (明装)

细滤器位于水管连接 (8) 中,应由专家在设备运行退 化和定期维护时进行检查和清洁。

- 1. 通过断开家庭保险丝的方式断开即热式热水器的 连接,关闭干线供水。
- 2. 旋松设备的冷水进水连接装置并从连接件取出滤 网(8d)。注意: 残留的水将流出!
- 3. 滤网可以清洁或更换。
- 4. 固定滤网后,请重新组装设备的水管连接。
- 5. 小心地打开干线供水。
- 6. 将设备放气,方法是小心地打开和关闭相连的热水龙头阀门数次,直到不再有气体从管道中排出。

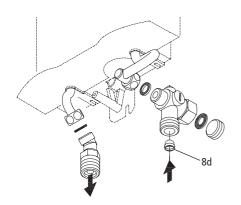

5. 客户服务

如果您遇到故障,请首先尝试借助此表格自行修复故障。 如果借助此表格无法修复设备的故障,请联系 German Pool,我们将直接为您提供帮助,或帮助您与当地的客户服务签约合作伙伴进行联系。

请务必指定设备型号和序列号!


问題	可能的原因	解决方案
LED 不亮,水不热	电路断路器已触发	修复该故障并复位
"Power"(电源)指示灯亮起,	加热元件或电子设备故障	复位保险丝,如果水仍然不热,请联 系客户服务
水不热	安全热熔断路器已触发	复位。 如果反复跳闸,请联系客 户服务
"Pressure" (压力)指示灯亮起, 水不热	流速过低	增加流量压力清洁水龙头配件或淋 浴头
	取决于热水器	查看技术规格
心法加延地防护体	出水管配件脏污或钙化	清洁水龙头配件或淋浴头
水流如预期降低速度	过滤器脏污或钙化	清洁或更换过滤器
	水龙头不合适	使用合适的淋浴头或通风装置
	电路板	复位保险丝
热水不够热	流速过高(冬季?)	稍微减少水流量
	加热元件故障	联系客户服务
温度和压力变化	添加了冷水	只提供某一度范围内的热水

如果借助此表格无法修复故障,请联系您的分销商或德国宝客戶服務總部。

只能由经过授权的专业人员进行维修!


我们可能会向经过授权的客户服务公司提供您的姓名和地址,也可能会自己维修热水器。 如果是后一种情况,请递交热水器(自行承担费用和风险)及问题详情和销售发票的副本。


如果您安装的是即热式热水器 CRH9 而不是传统的即热式热水器,则通常墙壁固定支架不需要钻孔。 在 这种情况下,您只需要如 2 中所述拧紧双向管接头并固定壁托架即可。

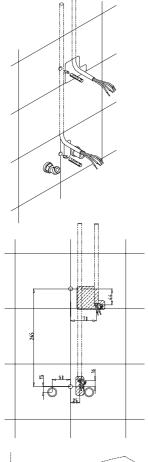


安装壁托架(暗装):

- 1. 安装前, 仔细清洗供水管道, 以除去管道中的脏污。
- 2. 使用 12 mm 的内六角形螺钉扳手,将拧入式管接头拧入墙壁接头中。 拧紧后,双向管接头必须突出 12 mm。
- 3. 使用少量 P.T.F.E. 仔细密封热水连接管。将其用带子固定并拧入墙壁连接装置中。 装配附带 1/2" 密封件的冷水连接件。
- 4. 握住墙壁上的设备并将其对齐,以便设备的水管接头装在墙壁连接装置上。 标记钻孔位置并使用 6 mm 钻来钻孔。
- 5. 将设备装到墙上并连接设备的水源,以及 3/8" 密封件。
- 6. 打开设备的供水管道并慢慢打开冷水连接件 (8a) (位置 I) 中的关闭阀。检查所有连接有无泄漏。
- 7. 接下来,打开和关闭热水龙头阀门数次,直到没有气体从管道排出并且所有气体均已从即热式热水器中排出。

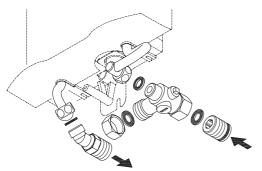


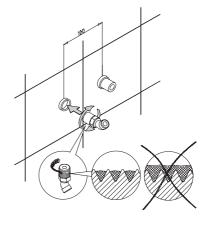


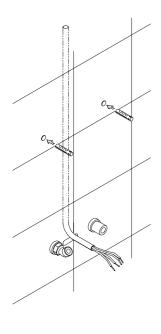

安装壁托架(明装):

- 1. 安装前, 仔细清洗供水管道, 以除去管道中的脏污。
- 2. 将管接头中的 1/2" 螺钉和 1/2" 密封件拧到热水管接头的 1/2" 管接螺母中。
- 3. 必须卸下冷水管接头侧面出水管的 1/2" 螺帽,并将其拧到拧入式管接头的开口端。
- 4. 将细滤器装到冷水连接件 (8d) 中。
- 5. 然后,必须将热水和冷水管接头拧到设备和输送管道的 3/8" 管接 螺母以及 3/8" 密封件上。
- 6. 标记钻孔位置并使用 6 mm 钻来钻孔。 将设备装到墙上并连接设备的水源。
- 7. 设备外壳上必须有孔,管路才能在钝器的协助下穿出外壳。
- 8. 打开设备的供水管道并慢慢打开冷水连接件 (8a) 中的关闭阀。 检查所有连接有无泄漏。
- 9. 接下来,打开和关闭热水龙头阀门数次,直到没有气体从管道排出并且所有气体均已从即热式热水器中排出。

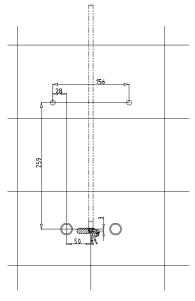

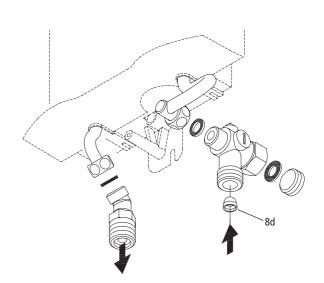





适用于经授权技术人员的安装说明


- 各国家/地区的法律规定以及当地的电力和供水公司的规定。
- 标称铭牌上的规格和技术规格。


安装地点


- 安装地点必须一律为无霜环境。
- 设备符合保护类型 IP25 并且可根据 IEC 安装在区域 1
- 要避免热量流失,热水器和分接点的距离应尽可能小 (< 2 m)。
- 流动压力大于等于 3 bar 时可以保证最佳性能,请避免压力超过 6 bar。
- 管式加热器型号的水管材料: 冷水: 钢或铜, 热水: 铜

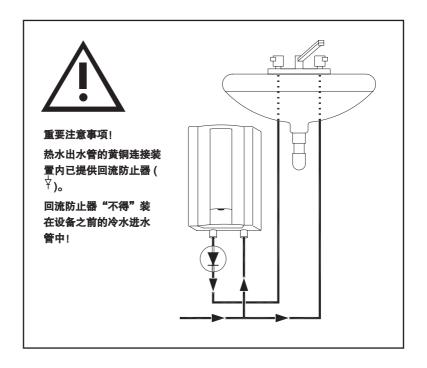

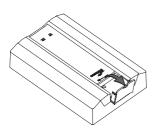

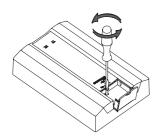


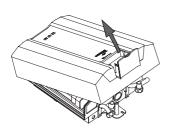


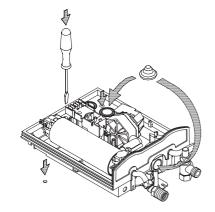


安装设备:


- 1. 彻底清洗供水管道并关闭以便安装。
- 2. 通过旋松小盖子后面的锁定螺钉, 卸下前盖。
- 3. 找到并打破所需的孔和电缆入口。 使用设备标记钻 孔位置并以 6mm 钻头钻孔。
- 4. 装上提供的橡胶垫圈并插入连接导线。 使用挠性电源线时,必须使用电缆夹固定导线。
- 5. 使用附带的原装螺塞和螺钉将设备固定到位。
- 6. 如上面的基本示例所示安装设备。 使用箭头标记进 水口和出水口。
- 7. 水管连接设计对于明装或暗装均可。必须使用<u>少量</u> P<u>.T.F.E. 仔细地密封。</u>固定到墙壁连接后使用带子固 定。
- 8. 安装到墙上时, 前盖必须在指定点打破。

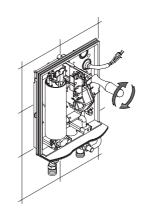


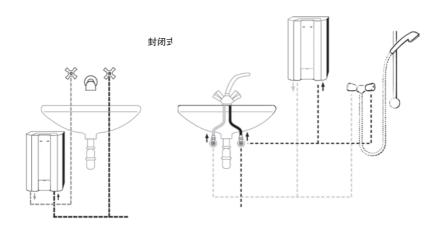

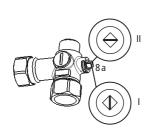


- 9. 打开水源并慢慢打开冷水连接(位置 I)中的关闭阀(8 a)如有必要)。 **检查所有连接有无泄漏。**
- 10. 接下来,打开和关闭热水龙头数次,直到没有气体从管道排出并且所有气体均已从热水器中排出。

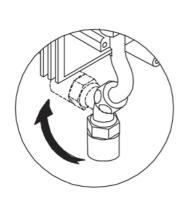

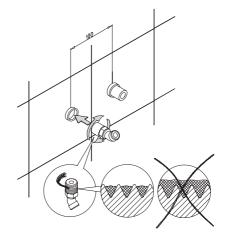




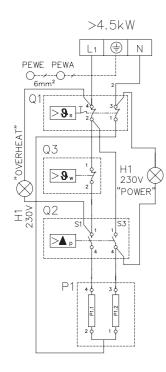


电气连接:

即热式热水器是一种保护等级为 I 的设备,必须连接至保护性接地导体!

- 1. 进行电气连接之前请检查电源是否关闭!
- 设备必须以永久接线的方式通过合适的保险丝(离所有电极至少3mm的触点间隔)连接至电源。
- 连接电缆的横截面必须符合额定功率要求。
- 为保护设备,必须装有跳闸电流与设备额定电流相等的保险丝元件。
- 2. 切开垫圈以匹配电缆大小。 垫圈中的开口应稍小于电缆的横截 面,以便确保最佳防水保护。 将垫圈装入开口中。 必须使用 保护垫圈! 设备必须接地!
- 如有必要,接线终端可转移到设备底部。
- 3. 正确装上前盖。 再次检查是否可以轻松操作温度按键。 如果不行,请确保正确安装前盖。 使用紧固螺钉固定前盖。
- 4. 进行电气连接之前,小心地打开和关闭热水龙头将干线和设备 装满水,以便完全放气。
- 5. 向用户说明即热式热水器的工作原理并转交操作说明。
- 6. 填写保修注册卡并将其发给 German Pool 中心客户服务或使用我们网站 www.germanpool.com 上的在线注册。

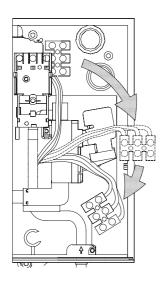

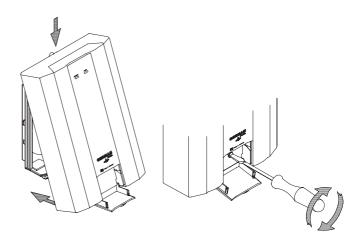

請填妥以下空格並與發票一併保存,以便維修時核對資料。用戶提供本公司之所有資料必須正確無誤,否則免費保用將會無效。 请填妥以下空格并与发票一并保存,以便维修时核对资料。用户提供本公司之所有资料必须正确无误,否则免费保用将会无效。 Please fill out the form below. This information and the purchase invoice will be required for any repairs. Warranty will be invalid if information provided is found to be inaccurate.

型號「型号」Model No.: LI CRH9
機身號碼 机身号码 Serial No.:
購買商號 购买商号 Purchased From:
發票號碼 发票号码 Invoice No.:

保用條例

此保用提供德國寶產品之機件在正常使 用下壹年保用(自購買日起計算)。

購買日期 | 购买日期 | Purchase Date:

貴戶須在購機十天內,以下列其中一種 方式向本公司登記資料,保用手續方正 式生效:

- 1) 填妥本公司網頁內之保用登記表格 www.germanpool.com/warranty
- 2)填妥保用登記卡,並連同購機發票之 副本一併郵寄到客戶服務總部(本公司將不發還發票副本或登記卡)。
- 未能出示購買發票正本者,將不獲免 費維修服務。
- 用戶應依照説明書的指示操作。本保 用並不包括:
 - 任何附件及輔助裝置;
 - 因天然與人為意外造成的損壞 (包括運輸及其它);
 - 電源接合不當、不依説明書而錯誤 或疏忽使用本機所引致之損壞。
- 於下列情況下,用戶之保用資格將被 取消:
 - 購買發票有任何非認可之刪改;
 - 產品被用作商業或工業用途;
 - 產品經非認可之技術人員改裝或 加裝任何配件;
 - 機身編號被擅自塗改、破壞或刪除。
- 如用戶自攜熱水器或部份配件到本公司維修部檢查或維修,本公司將會收取檢查或測試費用。
- 總代理有權選擇維修或更換配件或其 損壞部份。
- 6. 產品一經被轉讓,其保用即被視作無效。
- 7. 香港客戶:

保用只在香港、九龍及新界區有效, 東涌、愉景灣及離島須額外收取交通 費用。

國內客戶:

個別區域或會收取額外交通費用,詳情 請致電全國服務熱線查詢。

保用条例

此保用提供德国宝产品的机件在正常使 用下壹年保用(自购买日起计算)。

用户须在购机十天内,以下列其中一种 方式向本公司登记资料,保用手续方正 式生效:

- 1) 填妥本公司网页内的保用登记表格 www.germanpool.com/warranty
- 2)填妥保用登记卡,并连同购机发票的 副本一并邮寄到客户服务总部(本公司将不发还发票副本或登记卡)。
- 未能出示购买发票正本者,将不获免 费维修服务。
- 用户应依照说明书的指示操作。本保用并不包括:
 - 任何附件及辅助装置;
 - 因天然或人为意外造成的损坏 (包括运输及其它);
 - 电源接合不当、不依说明书而错误 或疏忽使用本机所引致的损坏。
- 3. 于下列情况下,用户之保用资格将被 取消:
 - 购买发票有任何非认可的删改;
 - 产品被用作商业或工业用途;
 - 产品经非认可的技术人员改装或加装任何配件;
 - 机身编号被擅自涂改、破坏或删除。
- 如用户自携热水器或部份配件到本公司维修部检查或维修,本公司将会收取检查或测试费用。
- 5. 总代理有权选择维修或更换配件或其 损坏部份。
- 6. 产品一旦被转让,其保用即被视作无效。
- 7. 香港客户:

保用只在香港、九龙及新界区有效, 东涌、愉景湾及离岛须额外收取交通 费用。

国内客户:

个别区域或会收取额外交通费用,详情请致电全国服务热线查询。

Warranty Terms & Conditions

Under normal operations, the water heater will receive a 1-year full warranty provided by German Pool (effective starting from the date of purchase).

This warranty is not valid until Customer's registration information is returned to and received by our Service Centre within 10 days of purchase via one of the following methods:

- 1) Visit our website and register online: www.germanpool.com/warranty
- 2) Complete all fields on the attached Warranty Card and mail it back to our Customer Service Headquarters along with a photocopy of the purchase invoice (Warranty Card and invoice copy will not be returned to Customer)
- Customer who fails to present original purchase invoice will be disqualified for free warranty.
- Customer should always follow the operating instructions. This warranty does not apply to:
 - any accessories and auxiliary devices;
 damages caused by accidents of any kind (including transport and others);
 - operating failures resulted by incorrect voltage, improper operations and unauthorized installations or repairs.
- 3. This warranty is invalid if:
- purchase invoice is modified by unauthorized party;
- product is used for any commercial or industrial applications;
- product is repaired or modified by unauthorized personnel, or unauthorized parts are installed:
- serial number is modified, damaged or removed from the product.
- Regardless of warranty status, all walk-in requests for water heater repair or replacement service at our Customer Service Centre are subject to testing and handling charges.
- German Pool will, in its discretion, repair or replace any defective part.
- This warranty will be void if there is any transfer of ownership from the original purchaser.
- Hong Kong: Service area includes Hong Kong Island, Kowloon and New Territories. Repairs in Tung Chung, Discovery Bay or other outlying islands are subject to extra service charges.

Mainland China: Repairs in certain regions are subject to extra service charges. Please call our China Customer Service Hotline for enquiries.

客戶服務部 | 客户服务部 | Customer Service Centre

中國香港

德國寶(香港)有限公司

電話:+852 2333 6249 傳真:+852 2356 9798

電郵: repairs@germanpool.com

地址:香港九龍土瓜灣馬頭角道116號

新寶工商中心高層地下2-4號室

中国香港

德国宝(香港)有限公司

电话:+852 2333 6249

传真:+852 2356 9798 电邮: repairs@germanpool.com

地址:香港九龙土瓜湾马头角道116号

新宝工商中心高层地下2-4号室

Hong Kong, China

German Pool (Hong Kong) Limited

Tel: +852 2333 6249 Fax: +852 2356 9798

Email: repairs@germanpool.com Address: Room 2-4, Upper G/F,

Newport Centre, 116 Ma Tau Kok Road, Tokwawan, Kowloon, H.K.

中國內地

全國服務熱線:

+86 400 830 3838

傳真:+86 0757 2336 0284 電郵: info@germanpool.com

中国内地

全国服务热线:

+86 400 830 3838

传真:+86 0757 2336 0284 电邮:info@germanpool.com

Mainland China

China Customer Service Hotline: +86 400 830 3838

Fax: +86 0757 2336 0284 Email: info@germanpool.com

德國寶(香港)有限公司|德国宝(香港)有限公司 German Pool (Hong Kong) Limited

香港九龍土瓜灣馬頭角道116號新寶工商中心高層地下2-4號室 香港九龙土瓜湾马头角道116号新宝工商中心高层地下2-4号室 Room 2-4, Upper Ground Floor, Newport Centre 116 Ma Tau Kok Road, Tokwawan, Kowloon, Hong Kong

電話 | 电话 (Tel):

+852 2333 6245 +852 2773 2888

傳真|传真 (Fax):

(E-mail): +852 2765 8215 +852 2365 6009

info@germanpool.com

電郵 | 电邮



山間樹橋/安雲行業





















©版權所有。未獲德國寶授權,不得翻印、複製或使用本説明書作任何商業用途,違者必究。

©版权所有。未获德国宝授权,不得翻印、复制或使用本说明书作任何商业用途,违者必究。

- 通l rights reserved. Copying, reproducing or using the contents of this manual is not allowed without prior authorization from German Pool, violators will be prosecuted.

www.germanpool.com