


GERMAN

POOL

WASHER DRYER

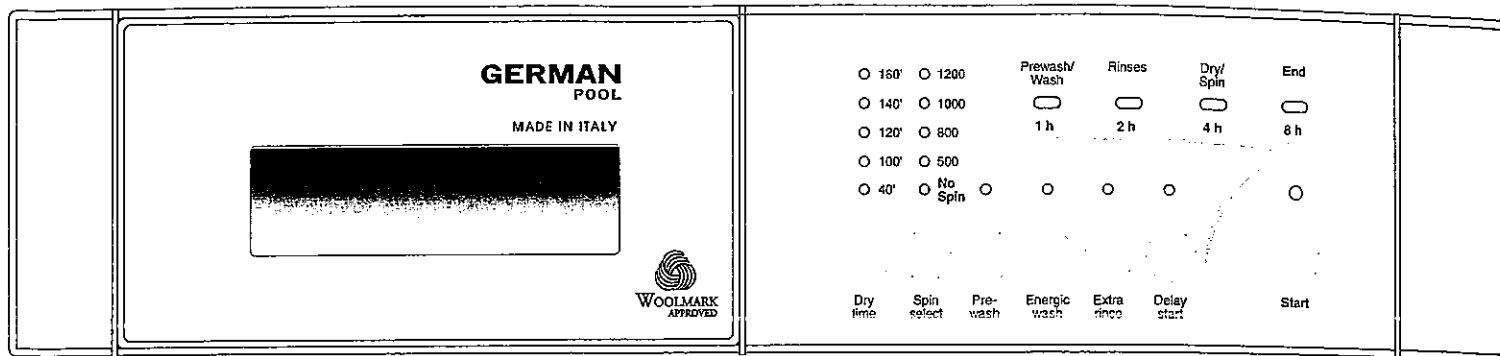

Programme Guide

Information

		Spin Speeds (Rpm)- Max	Maximum Wash Load
		1200 800 500	Load
Cotton			
90°C	Antibacterial wash is perfect to refresh you machine and to cleanse the rubber seal on the porthole. Use once every 3-4 months and run the machine without any fabrics.	●	6,0 kg
75°C	Sheets, shirts, tablecloths, towels that are resistant and heavily soiled.	●	6,0 kg
*60°C	Ideal towel wash and also for Colourfast cottons and linen or viscose without special finishes.	●	6,0 kg
40°C	Lightly soiled fabrics made from cotton/linen- non colourfast	●	6,0 kg
30°C	Lightly soiled mixed fabrics made from cotton, synthetics or blended fabrics.	●	6,0 kg
Cold	Slightly soiled garments in cotton washable only in cold water.	●	6,0 kg
Synthetics			
60°C	Normal soiled fabrics including Jeans made from cotton or line.	●	3,0 kg
40°C	Normal soiled easy care fabrics including Sportswear, made from cotton, synthetics or blended fabrics.	●	3,0 kg
30°C	Daily wash with fabrics lightly soiled made from cotton, synthetics or blended fabrics.	●	3,0 kg
Delicates			
	Slightly soiled garments in synthetics washable only in cold water.		
40°C	Easicare programme ideal for baby and toddler clothes - and cotton and viscose mixtures.	●	3,0 kg
30°C	Can be used for most articles which can be washed on any programme BUT NOT articles labelled 'Hand wash'.	●	3,0 kg
Cold	Silks and delicate fabrics.	●	3,0 kg
Wool			
**40°C	Pure new wool.	●	1,5 kg
30°C	Washable wool and wool mixtures and machine washable jumpers.	●	1,5 kg
Dry Program.	When drying only select this programme.		6,0 kg
35°C Rapid.	Ideal for washing delicate fabrics that are not labelled "handwash".	●	3,0 kg
40°C Daily wash.	Lightly soiled easy care fabrics - cotton and coloureds.	●	3,0 kg
Shower/Rinse.	Any fabrics that can be hand washed but are not labelled "Do not spin".	●	6,0 kg
Spin.	Spin only programme for 'Hand wash' articles that can be spin.	●	6,0 kg

* Benchmark program for energy classification, in accordance with the EN 60456 standard, running at max. spin speed and with Eco Wash button selected.

** The "wool cycle" programme of this washing machine has been approved by Woolmark for washing items labelled "machine washable wool" and bearing the Woolmark symbols. Follow the instructions reported on the label sewn into the clothing item and those supplied by the washing machine manufacturer. (Cert. n° M0402-)

Fabric Guide Wash code symbols These symbols appear on fabric labels, in order to help you choose the best way to treat your laundry

Normal Wash	Max. wash temperature 95°C	Max. wash temperature 60°C	Max. wash temperature 40°C	Max. wash temperature 30°C	Hand wash	Do not wash at all	Bleaching	Bleach in cold water	Do not bleach	Ironing	Hot iron max. 200°C	Woolmark

NOTE: You must always refer to the clothing care labels in all fabrics **before** selecting a wash.

THE CONTROLS


The controls arranged on the front panel consist of (right to left):

- 1 Programme Selector
- 2 Start button
- 3 Delay start
- 4 Option buttons: Extra rinse, Energic wash, Prewash.
- 5 Spin Select
- 6 Dry Time

Note: For safety reasons the appliance will not allow a temperature higher than that defined in the wash programme.

Option buttons

The following option buttons are to be used in conjunction with wash programmes. They cannot be used on their own. Before selecting any wash programme or option you must always refer to the clothing care labels on your items of clothing.

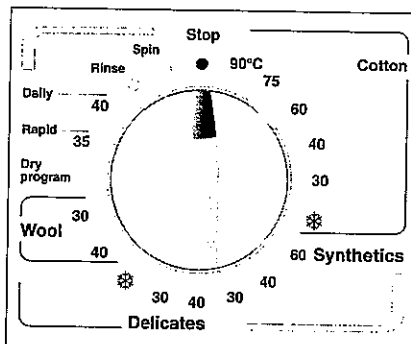

Programme selector dial

To select a programme, turn the selector dial until the required programme number on the front panel is opposite to the indicator mark on the selector dial. To start a programme, first ensure that the taps are fully turned on, the door is closed and the mains supply is switched on. Press the start button and then programme will start. The programme is complete when the END led will light-up. When selecting a wash programme on an electronic machine, once your selection has been made the control knob remains in this position and DOES NOT move as the programme progresses. To re-set the programme, or when the programme has finished its cycle turn the programme dial to the RE-SET position which prepares (and leave for approx 5 seconds) the machine for you to select its next programme.

which prepares (and leave for approx 5 seconds) the machine for you to select its next programme.

Options (Are in addition to the Programme Selector Dial, they cannot be selected on their own).

Start

Once a programme selection has been made and any options (if required) have been selected press this button to commence the wash programme.

Delay start

The machine is fitted with a delayed start function. This allows the washing machine to be programmed to start the wash cycle up to 8 hours later. The delay in hours can be selected as follows: pressing button once will delay the wash for 1 hour, pressing twice will delay the wash for 2 hours, and so on for a maximum of 8 hours.

Extra rinse

The washing machine has been designed to reduce water consumption to a minimum. In very soft water areas, or in the case where detergent residues are noticed at the end of the wash cycle, pressing this button will add one more rinse to the program.

Energic wash

When this button is pressed, the washing machine will run a wash cycle at the set temperature, though with a longer duration. The button is enabled for the "COTTON" and "SYNTHETICS" programs.


Prewash

Press this button to obtain a short wash of maximum temperature 40°C and approximately 10 minutes duration prior to the main wash.

This function can only be used, on the "COTTON" and "SYNTHETICS" programs.

NOTE: when this option is used, detergent must also be added to the pre-wash detergent compartment.

Spin select

The machine offers a wide selection of spin speeds that can be selected beforehand according to the wash program. To change the spin speed, simply press button to select the required speed. The corresponding speed led will light-up each time the button is pressed. To exclude the spin, select the led corresponding to symbol .

Dry Time

This button is pressed to select the duration of the drying time in hours, either in automatic mode (at the end of the wash cycle) or in manual mode (drying hand washing). The set time is indicated by the lit LED. If there are no LEDs lit, the drying cycle is not effected.

Options


Maximum Dry Load Extra Rinse Pre-wash Energic wash Dry Time

4,0 kg	●	●	●	●
4,0 kg	●	●	●	●
4,0 kg	●	●	●	●
4,0 kg	●	●	●	●
4,0 kg	●	●	●	●
4,0 kg	●	●	●	●

2,0 kg	●	●	●	●
2,0 kg	●	●	●	●
2,0 kg	●	●	●	●

2,0 kg	●	●	●	●
2,0 kg	●	●	●	●
1,0 kg	●	●	●	●
1,0 kg	●	●	●	●

olmark Company
3-M0404-M0405).

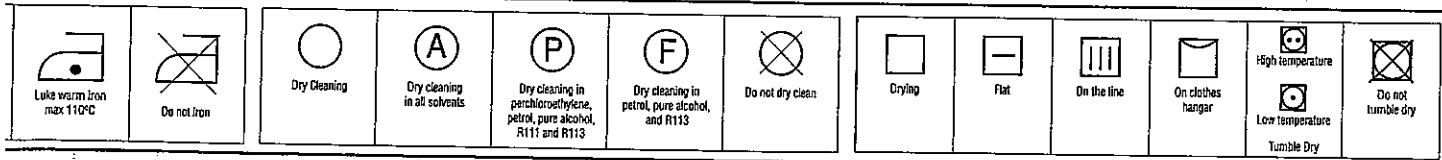

TECHNICAL INFORMATION

Dimensions:	Height 850mm (33.5") Width 595mm (23.4") Depth 537mm (21.1")
Weight:	66.0 kg (145.4 lb) approx
Electricity supply:	220V/240V AC 50Hz
Power cable:	Three core including earth lead
Fuse rating:	13 amp (BS1362) ASTA approved
Heater:	2.1kW
Motor:	130 Watt
Pump:	34 Watt
Water intake:	Hot and cold fill or cold fill only
Drum capacity	47 litres (13.2 gallons)
Maximum load:	6 KG (10.3 lb)
Two spin speed:	500/1200 rpm
Mobility:	4 adjustable feet
Serial number:	Inside filter door

This appliance conforms to EEC Directive 89/336 EEC and BS800-1983 for radio interference. Our policy is one of continuous improvement. We reserve the right to change specifications (which are subject to manufacturer's tolerances) prices or models without notice. All claims result from manufacturer's tests.

07/04/2008

Stampa Tipoxil snc

461307597


洗衣乾衣機 - 操作說明



操控面板

<input type="radio"/> 180	<input type="radio"/> 1200	預洗 / 洗衣	沖洗	乾衣 / 脫水	完成
<input type="radio"/> 140	<input type="radio"/> 1000				
<input type="radio"/> 120	<input type="radio"/> 800	1 小時	2 小時	4 小時	8 小時
<input type="radio"/> 100 <input type="radio"/> 40	<input type="radio"/> 500 無轉速				
乾衣時間設定鍵	脫水轉速控制鍵	預洗功能鍵	頑固污漬洗滌功能鍵	額外沖洗功能鍵	預約開機功能鍵
					開始鍵

停止

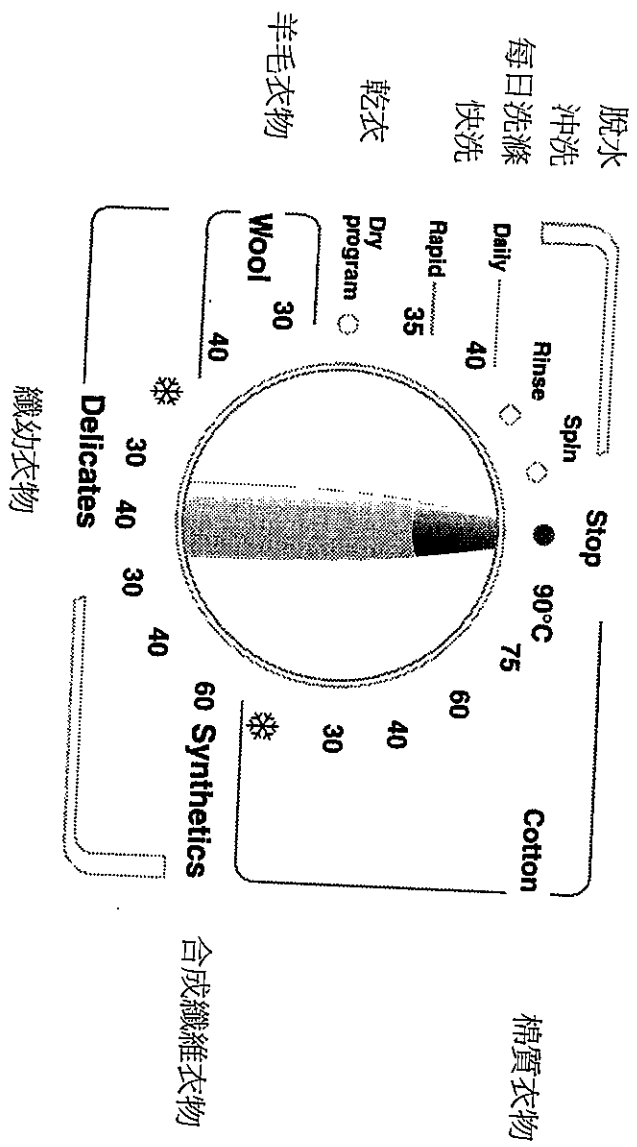

洗衣程式指引

		規格			附加功能					
		最高脫水轉速 (Rpm)			最大 洗衣量	最大 乾衣量	額外 沖洗	預洗	頑固污漬 洗滌	乾衣時間 設定
		120	800	500						
		0								
棉質衣物										
附加功能 90°C	消滅細菌的洗滌程序，每 3 至 4 個月不放進任何衣物而啟動此程式，可清潔洗衣機，包括機身門窗的橡膠封條	●			6 kg	4 kg	●	●	●	●
75°C	一般至非常骯髒的床單、襯衫、桌布及毛巾	●			6 kg	4 kg	●	●	●	●
*60°C	毛巾、不腿色棉質衣物及尼龍或無加工的黏貼膠	●			6 kg	4 kg	●	●	●	●
40°C	輕微至一般骯髒、會腿色的棉麻布料	●			6 kg	4 kg	●	●	●	●
30°C	輕微至一般骯髒的混棉織物、合成纖維或混合布料	●			6 kg	4 kg	●	●	●	●
冷水	很輕微骯髒、只適合用冷水清洗的棉質衣物	●			6 kg	4 kg	●	●	●	●
合成纖維衣物										
60°C	一般骯髒的衣物，包括棉質或尼龍牛仔褲	●			3 kg	2 kg	●	●	●	●
40°C	一般骯髒而易於處理的衣物，包括棉質、合成纖維或混合布料運動服	●			3 kg	2 kg	●	●	●	●

30°C	輕微骯髒、每日清洗的棉質、合成纖維或混合布料衣物	●		3 kg	2 kg	●	●	●	●	●
織幼衣物	只適合用冷水清洗、輕微骯髒的合成纖維衣物									
40°C	適合嬰兒及小童服裝，以及棉質與黏膠混合衣物的簡易處理程序		●	3 kg						
30°C	除了有「手洗」標籤的衣物之外，大部份衣物都適合使用		●	3 kg						
冷水	絲質及質料纖幼的衣物		●	3 kg						
羊毛衣物										
**40°C	純羊毛衣物	●		1.5 kg						
30°C	可洗羊毛及混羊毛衣物，以及可機洗毛線衣	●		1.5 kg						
乾衣程式	選擇此程式作乾衣用途			6 kg						●
35°C 快洗	特別適合沒有「手洗」標籤的纖幼衣物	●		3 kg	2 kg					●
40°C 每日洗滌	輕微骯髒、易於處理的棉質及有色衣物	●		3 kg	2 kg	●	●			●
過水/沖洗	所有可以手洗，而沒有「不可脫水處理」標籤的衣物	●		6 kg	4 kg	●				●
脫水	有「手洗」標籤、可脫水處理的衣物	●		6 kg	4 kg					●

*符合 EN 60456 標準，是能源類別中的標準程序，選取慳水慳電功能，以最高脫水轉速進行。

**此洗衣機的「羊毛衣物」程式經由 Woolmark 認可，適合有「可機洗羊毛」標籤及 The Woolmark Company 標誌的衣物使用。
請依照衣物上的清洗指示及洗衣機生產商所提供之洗衣指引。(Cert. No. M0402-M0403-M0404-M0405)。

操控面板

機身正面的操控面板設有以下的功能鍵及旋鈕 (右至左)：

- 1 程式選擇旋鈕
- 2 開始鍵
- 3 預約開機功能鍵
- 4 功能鍵：額外沖洗、頑固污漬洗滌、預洗
- 5 脫水轉速控制鍵
- 6 乾衣時間設定鍵

注意：為保障安全，不得採用高於洗衣程式設定的溫度。

功能鍵

以下功能鍵必須配合洗衣程式一併使用，不可單獨使用。選擇洗衣程式前，必須留意衣物上的護理標籤。

程式選擇旋鈕

將程式選擇旋鈕轉到所需程式，以選取洗衣程式。啟動前，需確保已經打開水龍頭、關閉機門，並開啓總電源掣。按開啓鍵，所選取的洗衣程式隨即開始。洗衣程式完成時，「End」指示燈會亮起。

選取洗衣程式後，程式選擇旋鈕會維持在所選定的位置，不會在操作途中轉動。當完成洗衣或再次洗衣時，將程式選擇旋鈕轉至重設位置，讓本機預備好(待約 5 秒)，讓你再次選取洗衣程式。

功能鍵 (程式選擇旋鈕才是主要操作按鈕，功能鍵只作輔助用途，不可單獨選按功能鍵)

開始鍵

轉動程式選擇旋鈕以選取洗衣程式，並選按功能鍵(如有需要)，然後按此鍵，以啟動洗衣程式。

預約開機功能鍵

此功能鍵可以延遲洗衣程序的開始時間，可預設至達 8 小時之後才開始。預約開機時間的方法如下：按此鍵一次設為 1 小時後開始，按兩次設為 2 小時後開始，如此每按一次增加一小時，最多可設為 8 小時。

額外沖洗功能鍵

洗衣機採用有效節省用水量的設計。於軟性水質地區，或當洗衣程序將要完成但仍有殘餘洗衣粉時，按此功能鍵便可注入額外的清水，以洗淨衣物。

頑固污漬洗滌功能鍵

以程式選擇旋鈕選擇「棉質衣物」或「合成纖維衣物」時，可選按此鍵作為附加功能。按此功能鍵後，洗衣機會按預設溫度進行洗衣程序，而洗衣時間將會變得較長。

預洗功能鍵

按此鍵令衣物在進行洗衣程序前，以最高 40°C 預洗一段短時間(約 10 分鐘)。此功能只適用於「棉質衣物」或「合成纖維衣物」洗衣程式。

注意：使用此功能鍵時，必須於洗衣粉格內添加足夠的洗衣粉。

脫水轉速控制鍵

可根據所選用的洗衣程式，選擇多種不同的脫水轉速。按此鍵可改變脫水轉速，每按鍵一次，相應的脫水轉速指示燈將亮起。若要取消此功能，可按鍵至無脫水轉速的指示燈亮起。

乾衣時間設定鍵

按此鍵以設定乾衣所需時間(以小時為單位)，可選擇自動模式，乾衣功能會在洗衣程式結束時自動啟動；或選擇手動模式，適用於手洗衣物。指示燈將顯示所選擇的乾衣時間。若指示燈沒有亮著，表示乾衣時間並未有效設定。