

GERMAN
POOL

GLOBAL VOLTAGE MINI TRAVEL HAIR DRYER

HDR-WV800



USER MANUAL

Please read these instructions and warranty information carefully before use and keep them handy for future reference.


Warnings and Safety Precautions

1. This product can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the product in a safe way and understand the hazards involved. Children shall not play with the product. Cleaning and user maintenance shall not be made by children without supervision.
2. When the product is used in a bathroom, unplug it after use since the proximity of water presents a hazard even when the product is switched off.
3. For additional protection, the installation of a residual current device (RCD) having a rated residual operating current not exceeding 30 mA is advisable in the electrical circuit supplying the bathroom. Ask your installer for advice.
4. **WARNING! DO NOT** use this product near bathtubs, showers, basins or other vessels containing water.
5. **Keep away from water! DO NOT** use this product near or over water contained in baths, washbasins, sinks, etc. If for some reason, the product has fallen into water, first unplug

immediately. Then, dispose of the product, it must not be used again.

6. Even when the product is switched off, the electric grid is still on. Always pull out the mains plug when not in use.
7. Never obstruct the air grilles.
8. This product is equipped with an automatic overheating protection device. If the product overheats, it will switch off. Unplug the product. After cooling down for a few minutes, the product can be used again. Before reusing, check the inlet and outlet grilles for possible blockage by fluff, hair, etc. If in doubt, consult German Pool Customer Service and Repair Centre.
9. If the power cord of this product is damaged, it must only be replaced by German Pool Customer Service and Repair Centre, as special tools and/or parts are required.
10. For examination or repairs always return the product to German Pool Customer Service and Repair Centre.
11. Unqualified repair work can lead to extreme hazards for the user.

Product Structure

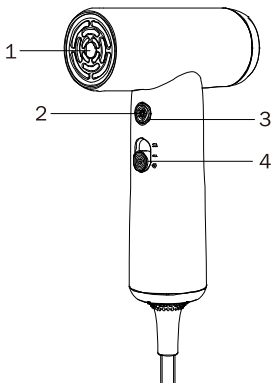

1. Air Outlet Inner Shell
It can be fastened to Styling Nozzle
2. Heat Mode Button
3. Light Indication
 - Blue light on: Cold Air mode
 - Orange light on: Warm Air mode
 - Red light on: Hot Air mode
 - blinks alternately between red and blue:
Cold and Hot Circulating Air mode
4. Slide Switch
Power and wind speed gear key. Push the button up one notch for Low Wind speed; push it up two notches for High Wind speed

Operation Instructions

WARNING!

- **Power Safety:** Use only undamaged plugs and cords. Ensure the mains voltage matches the device's requirement.
- **Avoid Water:** Never use near water or in wet areas to prevent electric shock or damage.
- **Airflow:** Avoid blocking the air inlet or outlet during use to prevent overheating.
- **Child Safety:** Keep out of reach of children; supervise use to avoid accidents or misuse.

Wind Speed Gears

- **Low Wind speed gear:** suitable for hair drying for children and pets. Also good for styling.
- **High Wind speed gear:** suitable for fast drying.

Temperature Gear

1. Press the Heat Mode button to switch the airflow among 3 heat modes: Cold Air, Warm Air, Hot Air.
2. Long-press the Heat Mode button for 2 seconds to enter Cold and Hot Circulating Air mode; in Cold and Hot Circulating Air mode, press the Heat Mode button to return to Cold Air mode.


Mode	Description
Cold Air	Wind blows at room temperature
Warm Air	The heat is kept at ~57 °C at a distance of 10cm away from the air outlet to avoid hair damage
Hot Air	The heat is kept at ~73 °C at a distance of 10cm away from the air outlet for fast drying
Cold and Hot Circulating Air	Alternate automatically between cold and hot modes every 5 seconds to prevent overheating hair

One-Key Dust Removal Function

While the hair dryer is on and at Low Wind speed mode, long-press the Heat Mode Button for 5 seconds to activate the Reverse Dust Removal function. The motor fan gradually stops and starts reverse rotation. Dust removal is complete after 10 seconds of reverse rotation, and the motor fan will automatically stop to prevent damage to the equipment.

Styling Nozzle

1. Align the rear part of the styling nozzle with the air outlet of the hair dryer, and directly snap it onto the inner shell.
2. Hold the anti-scald part of the nozzle to pull out the nozzle.

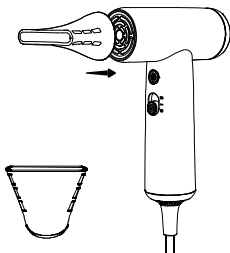

Note:


- When the hair is moist after shampooing, the Hot Air mode is ideal. When the hair is partly dry, it is better to switch to the Cold and Hot Circulating Air mode to avoid hair damage brought by the high temperature from the hot air.
- In Hot Air mode, the temperature of air outlet will be more than 100°C , please keep away from the air outlet.
- According to scientific experiments, the critical temperature for hair scales to start damaging is 60°C . The Warm Air mode keeps a constant temperature at $\sim 57^{\circ}\text{C}$, which aims to pamper your hair to the fullest.

Cleaning and Maintenance

Note:

Clean air vents regularly and store in a dry, ventilated area after use.

1. Rotate clockwise to fasten the back cover
2. Rotate counterclockwise to remove the back cover

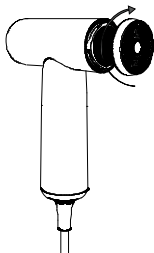

Troubleshooting

Problem	Possible Cause	Solution
The red heat setting indicator flashes slowly (hairdryer does not work)	The temperature of electronic components is too high	Restart after a 30 second interval
All heat setting indicators are not on (hairdryer does not work)	The power supply is off	Check if the power plug is loose
The red heat setting indicator flashes slowly (hairdryer works properly)	Failed to start the motor	Contact German Pool Customer Service and Repair Centre
All heat setting indicators are not on (hairdryer works properly)	The circuit related to the indicator light is damaged	

Problem	Possible Cause	Solution
There is no response when pressing the heat setting button	Button board is damaged	Contact German Pool Customer Service and Repair Centre
The temperature of the power cord or plug is significantly overheated	The plug is loose or the power cord is damaged	
A burnt smell during normal use	The electronic components are damaged	

Technical Specification

Model	HDR-WV800
Voltage	100-240 V~
Frequency	50/60 Hz
Power	800 W
Product Dimensions	(H) 144.5 mm (W) 99.5 mm (D) 40 mm
Net Weight	230 g (not including cord) 410 g (including cord)

- Specification is subject to change without prior notice.
- If there is any inconsistency or ambiguity between the English version and the Chinese version, the English version shall prevail.
- Refer to www.germanpool.com for the most update version of the user manual.

保用條款 Warranty Terms & Conditions

此保用提供德國寶產品之機件在正常使用下壹年保用（自購買日起計算）。貴戶須在購機十天內，以下列其中一種方式登記資料，保用手續方正式生效：

Under normal operations, the product will gurantee a 1-year full warranty provided by German Pool (effective from the date of purchase). This warranty is not valid until customer registration information is received by our Service Centre within 10 days of purchase via one of the following means:

- 1) 填妥德國寶VIP手機應用程式
保用登記表（掃描右方二維碼）
- 2) 填妥本公司網頁保用登記表
www.germanpool.com/warranty
- 1) Visit our VIP App and register online:
(Scan the QR Code on the right)
- 2) Visit our website and register online:
www.germanpool.com/warranty



另請填妥以下表格並與正本發票一併保存，以便維修時核對資料。用戶提供之所有資料必須正確無誤，否則免費保用將會無效。

Please fill out the form below. This information and the original purchase invoice will be required for any repairs. Warranty will be invalidated if information provided is found to be inaccurate.

型號 Model No.: HDR-WV800

發票號碼 Invoice No.: _____

機身號碼 Serial No.: _____

購買商號 Purchased From: _____

購買日期 Purchased Date: _____

此保用只適用於香港及澳門


This warranty is valid only in Hong Kong and Macau

警告及注意事項

1. 本產品可供年滿8歲或以上的兒童以及身體、感官或精神能力較弱，或缺乏使用經驗及知識的人士使用，但必須在負責其安全的人士監督或指導下，並確保其理解使用本產品的潛在危險。兒童不得玩耍本產品。兒童如需清潔或維護，必須在監督下進行。
2. 如在浴室內使用本產品，使用後必須立即拔除插頭，因為即使關掉電源，靠近水源仍有觸電危險。
3. 為加強保護，建議於浴室供電電路上安裝額定剩餘動作電流不超過30 mA 的剩餘電流裝置（RCD），請諮詢安裝人員意見。
4. 警告！嚴禁在浴缸、淋浴間、洗臉盆或其他盛水容器附近使用本產品。
5. 遠離水源！嚴禁在浴缸、洗臉盆、水槽等盛水處附近或上方使用本產品。如產品意外跌入水中，請立即拔除插頭，並停止使用該產品，必須棄置，不得再次使用。
6. 即使關掉本產品電源，產品仍會處於接電狀態。在不使用時必須拔除電源插頭。
7. 嚴禁堵塞進風口或出風口。

8. 本產品設有自動過熱保護裝置。當產品過熱時，會自動停止運作。必須立即拔除電源插頭。待冷卻數分鐘後可再次使用。重新使用前，請檢查進風及出風口是否有毛髮、棉絮等堵塞物。如有疑問，請聯絡德國寶客戶服務及維修中心。
9. 若本產品電源線損壞，必須由德國寶客戶服務及維修中心更換，因為此更換需使用專用工具及零件。
10. 如需檢查或維修，必須將本產品交回德國寶客戶服務及維修中心處理。
11. 由非合資格人員進行維修，可能對使用者構成嚴重危險。

產品結構

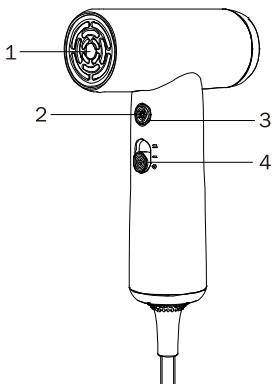

1. 出風口內殼
可安裝造型風嘴
2. 溫度模式鍵
3. 指示燈（不同顏色代表不同風溫）
 - 藍燈：冷風模式
 - 橙燈：暖風模式
 - 紅燈：熱風模式
 - 紅藍交替閃爍：冷熱循環風模式
4. 滑動開關
電源及風速調節鍵。向上推一次為低檔風速，
向上推兩次為高檔風速

使用說明

⚠ 警告！

- 電源安全：只可使用未損壞的插頭及電源線，並確保電壓符合本產品的要求。
- 避免接觸水源：嚴禁在水源附近或潮濕環境中使用，以免造成觸電或損壞。
- 氣流暢通：使用時請避免堵塞進風口或出風口，以防止過熱。
- 兒童安全：必須將產品放置於兒童無法觸及的地方，並在監督下使用，以免發生意外或誤用。

風速檔位

- 低風速檔：適合為兒童或寵物吹乾頭髮，同時亦可用於造型設定。
- 高風速檔：適合快速吹乾頭髮。

溫度檔位

1. 按「溫度模式鍵」，可切換三種出風溫度模式：冷風、暖風、熱風。
2. 長按「溫度模式鍵」2秒，進入冷熱循環風模式；在冷熱循環風模式下，再按「溫度模式鍵」可返回冷風模式。


模式	說明
冷風	吹出室溫自然風
暖風	距離出風口10厘米處，溫度維持在約57°C，有效避免頭髮受熱損傷
熱風	距離出風口10厘米處，溫度維持在約73°C，加快吹乾速度
冷熱循環風	每5秒自動交替切換冷風與熱風，防止熱量積聚

除塵功能

當風筒開啟並處於低檔風速時，長按「溫度模式鍵」5秒可啟動除塵功能。摩打風扇會逐漸停止並開始反向旋轉，約10秒後完成除塵，風扇會自動停止運行，以防止設備受損。

造型風嘴

1. 將造型風嘴的後端對準風筒出風口，直接壓入即可固定於內殼上。
2. 握住風嘴的防燙部位將風嘴直接從內殼中拔出，即可拆卸。

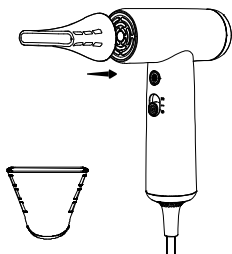

注意：


- 當頭髮洗後仍非常潮濕時，建議使用熱風模式；當頭髮逐漸乾燥，建議切換至冷熱循環風模式，以避免熱風高溫對頭髮造成損傷。
- 使用熱風模式時，出風口溫度將超過 100°C ，嚴禁靠近出風口以免燙傷。
- 據研究顯示，頭髮開始受損的臨界溫度為 60°C 。暖風模式在出風口維持約 57°C 的恆溫，旨在最大程度保護您的頭髮。

清潔及維護

注意：

請定期清潔出風口，並於使用後將本產品存放於乾燥、通風的環境中。

1. 順時針旋轉以固定後蓋
2. 逆時針旋轉以拆卸後蓋

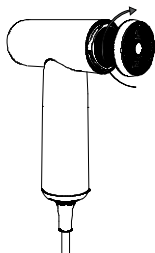

故障檢修

故障情況	可能原因	解決方法
指示燈以紅色緩慢閃爍（風筒開啟後無法運作）	電子元件溫度過高	關機後待30秒後重新啟動
指示燈未亮起（風筒開啟後無法運作）	電源未開啟	檢查電源線及插頭是否鬆動
指示燈以紅色緩慢閃爍（風筒開啟後運作正常）	指示燈相關電路損壞	聯絡德國寶客戶服務及維修中心
指示燈未亮起（風筒開啟後運作正常）	摩打啟動失敗	
按下溫度檔位按鈕時無反應	按鍵板損壞	
按下溫度檔位按鈕時無反應	插頭鬆動或電源線損壞	
正常使用中出現焦味	電子元件損壞	

技術規格

型號	HDR-WV800
電壓	100-240 V~
頻率	50/60 Hz
功率	800 W
產品尺寸	(H) 144.5 mm (W) 99.5 mm (D) 40 mm
淨重	230 g (不連電線) 410 g (連電線)

- 產品規格及設計如有變更，恕不另行通知。
- 中英文版本如有出入，一概以英文版為準。
- 本產品使用說明書以www.germanpool.com網上版為最新版本。

