GERMAN POOL

SmartSense Multi-Pressure Cooker | PRC-410



Online Warranty Registration

Please read these instructions and warranty information carefully before use and keep them handy for future reference.

USER MANUAL

請即進行保用登記！
有關保用條款細則，請看說明書最後一頁。

Please register your warranty information now !
For Warranty Terms & Conditions,
please refer to the last page of this user manual.

Table of Contents

Warnings & Safety Precautions	04
Product Structure	06
Operation Instructions	07
Cleaning & Maintenance	14
Troubleshooting	15
Technical Specification	16
Warranty Terms & Conditions	31

Warnings & Safety Precautions

⚠ WARNING!

Read all instructions carefully before using this product.

- This product is for domestic indoor use only. If this product is used for any commercial, industrial, rental or other purposes, product warranty will be VOIDED.
- This product is not intended for use by children or persons with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of this product by an adult responsible for their safety.
- Mind your children and DO NOT let children play with this product.
- Cleaning and user maintenance shall not be made by children without supervision.
- Check the voltage indicated on the rating label before using this product.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid hazards.
- Unplug this product from the power source before cleaning and maintenance.
- Contact German Pool authorized service technician for repair or maintenance of this product.

⚠ WARNING!


- To avoid injury caused by improper use, please read this instruction manual carefully before using this product. Always use this product strictly in accordance with the instructions and intended purpose described in this manual.
- This Safety Precautions section contains important information to help you use this product safely and correctly, and to prevent personal injury or property damage to yourself or others. Please read it carefully and keep it in a safe place for future reference.


1. Place this product on a stable, flat, and firm surface before use.
2. The rated input voltage of this product is 220-240V~. Please confirm the power supply before use. Ensure the power outlet is properly grounded to prevent electric shock.
3. DO NOT immerse the power cord, plug, or appliance in water or other liquids to avoid electric shock.
4. DO NOT let the power cord hang over the edge of a table, countertop, or touch hot surfaces.
5. DO NOT damage, excessively bend, stretch, twist, clamp, or place heavy objects on the power cord.
6. If the power cord is damaged, it must be replaced with a special cord or assembly provided by German Pool Customer Service & Repair Centre.
7. If repair is required, contact German Pool Customer Service & Repair Centre. DO NOT disassemble this product yourself.
8. Always unplug this product before cleaning. Ensure the power socket is completely dry before reuse.
9. Regularly inspect the steam outlet to ensure it is not blocked.
10. Before opening the lid, ensure that the pressure inside the cooker has been fully released.

Warnings & Safety Precautions


11. DO NOT force the lid open if the float valve has not dropped.
12. During operation, DO NOT open the lid, place hands or face near the steam outlet, or move/shake this product to avoid burns or cooking failure.
13. DO NOT place wet cloths or towels on the lid, as this may cause deformation or discoloration.
14. DO NOT touch the inner pot during or immediately after use to avoid burns.
15. DO NOT wash rice directly inside the inner pot. Wash ingredients in another container to prevent damage to the non-stick coating.
16. After placing the inner pot into the cooker, gently rotate it left and right to ensure proper contact with the heating plate and temperature sensor.
17. DO NOT heat the inner pot over an open flame.
18. DO NOT continue using the inner pot if it becomes deformed. Contact German Pool Customer Service & Repair Centre for replacement.
19. Ensure the bottom of the inner pot and the heating plate are clean and free from food residue before use to prevent overheating or uneven cooking.
20. DO NOT power on this product if the inner pot is not properly placed, is empty, or contains no ingredients or water.
21. When moving or servicing this product, unplug it and allow it to cool completely first.
22. Unplug the power cord promptly after use if this product is not in keep-warm mode. DO NOT pull on the cord directly.
23. Clean the lid, seal ring, float valve, and pressure relief valve regularly to prevent odors.
24. Only use the original inner pot supplied with this product. Using unsuitable cookware may cause malfunction.
25. DO NOT open this lid during operation to prevent undercooked food or scalding.
26. The seal ring is a critical safety component. If damaged, stop using this product immediately, and have it replaced by German Pool Customer Service & Repair Centre.
27. DO NOT exceed the maximum food and water level marked on the inner pot.
28. Use extreme caution when this product is used near children. DO NOT leave it unattended.
29. Keep this product out of reach of children. DO NOT allow persons with reduced physical, sensory, or mental capabilities use this product without supervision.
30. DO NOT remove the pressure relief valve or press the float valve during operation or venting to avoid scalding from hot steam.
31. This product is intended for household use only. DO NOT use it for any purpose other than those described in this user manual.
32. Dispose of all packaging materials immediately after unpacking to prevent choking hazards for children.
33. DO NOT operate this product with an external timer or separate remote-control system.
34. After cooking, DO NOT open the lid until pressure has been fully released and the float valve has dropped. DO NOT force the lid open.
35. This product is only suitable for use at altitudes below 2000 meters above sea level.

Product Structure

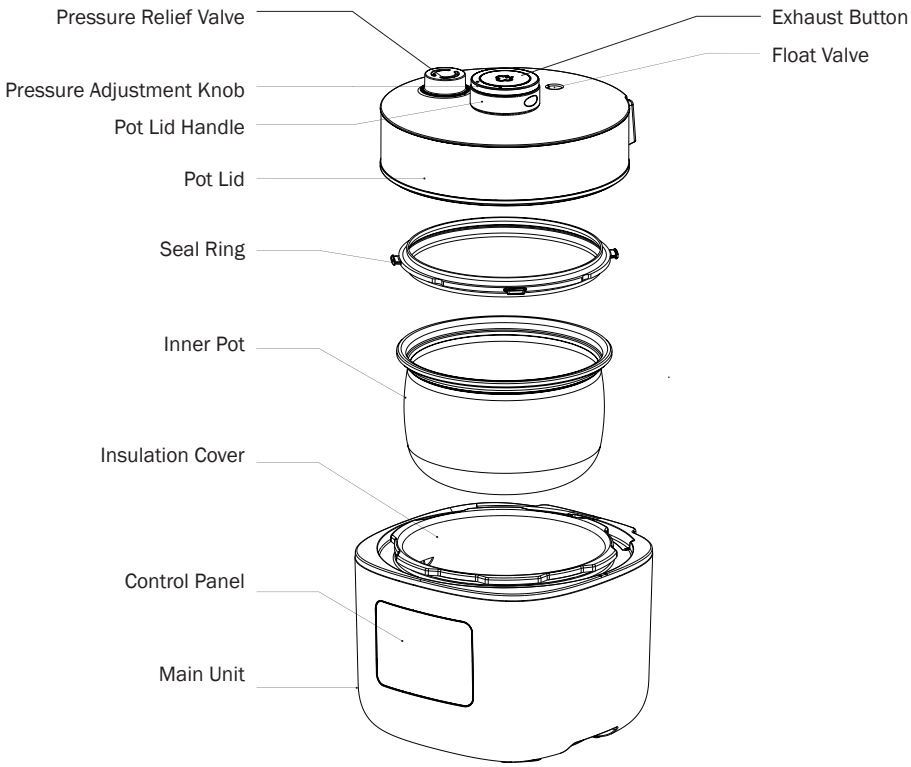

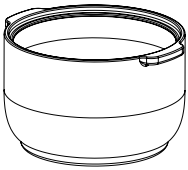

Double-boil Pot



Double-boil Pot Handle



Measuring Cup



Rice Scoop




Power Cord


Operating Instructions

Before Cooking

1. Open the lid: before opening the lid, make sure the float valve has fully dropped, indicating that there is no pressure inside the cooker. Grip the lid handle, and rotate the lid clockwise until the triangle icon on the lid aligns with the unlock icon on the pot body, then lift the lid upwards to open it.

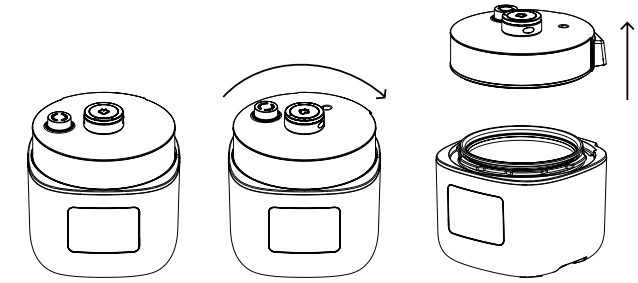

Lid in locked position Rotate lid to unlock Lift lid upwards

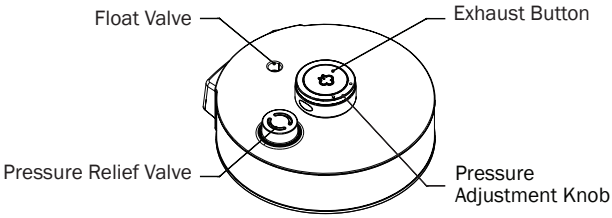


Note:

- When the Float Valve has sunk, it means the pot is not pressurized, and it is safe to open the lid; when the Float Valve has risen up, it means there is pressure inside the pot, the lid will automatically lock and the lid cannot be opened.
- To manually exhaust pressure, press Exhaust Button to release steam.
- Steam will vent out from the Pressure Relief Valve. Keep face and hands away from the vent to avoid scalding.
- If the Float Valve is not cleaned regularly, or if food residue causes it to stick and fail to sink automatically, making it impossible to open the lid, gently push it down through the valve opening using a slender object like a chopstick.
- It is recommended to clean the Float Valve after each use to prevent it from sticking, ensuring

pressure can be released properly and the lid can be safely opened.

2. Take out the inner pot, and place in food ingredients and water according to the scale lines. DO NOT fill to beyond the maximum and minimum scale lines.

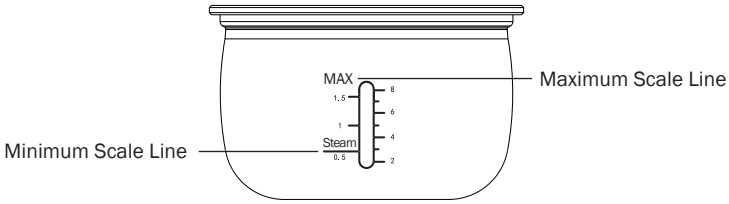

Note:


- DO NOT use the inner pot to wash food ingredients to avoid scratching the nonstick coating.
- If using the double-boil pot with the Double-Boil function, fill water to the 0.5 (Steam) level.
- When cooking congee, make sure water does not exceed the Maximum Scale Line on the inner pot.
- When cooking rice, the recommended rice-to-water ratio is 1:1; when cooking congee, the recommended rice-to-water ratio is 1:7-8. Depending on personal texture preference or the type of rice used, user may increase or decrease the amount of water accordingly.

3. Place the inner pot into the main unit, make sure the bottom of the inner pot and the surface of the heating plate are clean and dry. After placing in the inner pot, gently rotate it to ensure full contact between the pot and the heating plate.


4. Close the lid: grip the lid handle, turn handle anticlockwise to Locked position until you hear a “click” sound indicating the lid has been securely locked. Before closing the lid, check to make sure the seal ring has been properly installed onto the lid.

Note:


The seal ring can be detached for cleaning, but it must be properly reinstalled onto the lid before re-using the product.

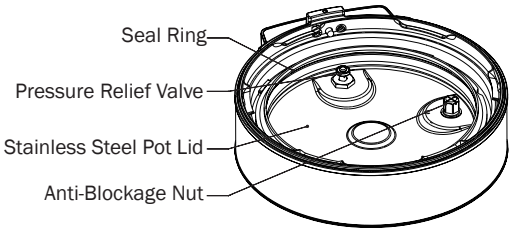

To detach seal ring

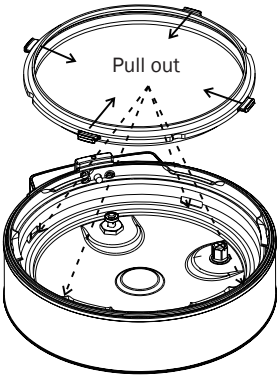

To install seal ring

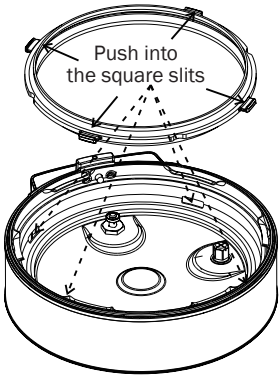

5. Install the Pressure Relief Valve, and check that the Exhaust Button is in the sprung-up position; if is it not, press the button until it springs up completely. Make sure the Float Valve has sunk (before heating, the Float Valve should sink). If the Float Valve is clogged, it must be cleaned thoroughly before use. Always keep the valve opening clear.




Float Valve
in sunk down position

6. Connect power: insert the power cord connecting end into the port located on the bottom of the pressure cooker, and plug the socket end into a power socket. When powered on, the product will emit one beep, and display will show “0000”, indicating that the product is in standby state.

Operating Instructions

Control Panel

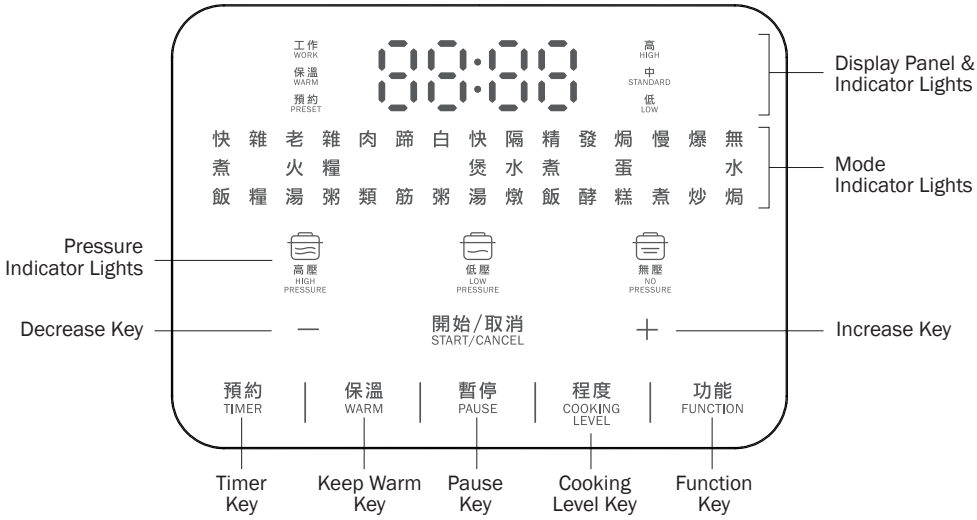

1. Connect power, product enters standby state, Display Panel shows “0000”.

Note:
In standby state, if product does not receive any command in 30 seconds, it will automatically enter Sleep Mode, and Display Panel will show “----“. Press any key to return to standby state.


2. Rotate the Pressure Adjustment Knob to select High Pressure/ Low Pressure Mode or No Pressure Mode.
3. Tap Function Key to select function, the corresponding indicator light will blink. In High Pressure/ Low Pressure Mode, Display Panel will show default pressurized time; in No Pressure Mode, Display Panel will show default cooking time.


Note:
Different pressure modes support different functions:
High Pressure/Low Pressure Mode can be used for Rice, Grains, Soup, Porridge, Meat, Tendon, Congee, Quick Soup, Double-Boil.
No Pressure Mode can be used for Nutri Rice, Ferment, Cake, Slow Cook, Stir Fry, Bake functions.

Operating Instructions


⚠ WARNING!

- No Pressure Mode cooks in a continuous exhaust state. When selecting functions that require cooking in High Pressure/Low Pressure Mode, DO NOT turn the Pressure Adjustment Knob to No Pressure Mode, otherwise hot food and liquid may overflow during cooking and cause scalding.
- If there is still pressure inside the pot, and overflow occurs due to the Pressure Adjustment Knob being accidentally turned to No Pressure Mode, immediately rotate the Pressure Adjustment Knob back to High Pressure/Low Pressure Mode, to stop the continuous exhaust and overflow.

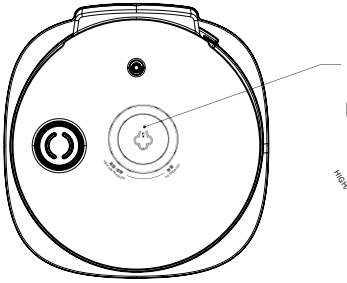

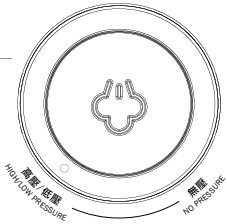

High Pressure/
Low Pressure Mode

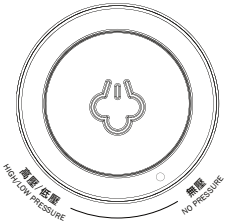

No Pressure Mode

Function	Rice 快煮飯	Grains 雜糧	Soup 老火湯	Porridge 雜糧粥	Meat 肉類
Default Time	10 min	45 min	30 min	40 min	45 min
Adjustable Time	8-12 min	30 min - 1 hr	20-50 min	35-50 min	30-55 min
Low	8 min	30 min	20 min	35 min	30 min
Standard	10 min	45 min	30 min	40 min	45 min
High	12 min	1 hr	50 min	50 min	55 min
Function	**Tendon** 蹄筋	**Congee** 白粥	**Quick Soup** 快煲湯	**Double-Boil** 隔水燉	**Nutri Rice** 精煮飯
Default Time	45 min	23 min	25 min	1 hr 30 min	12 min
Adjustable Time	30-55 min	18-28 min	15-40 min	1-2 hr	10-16 min
Low	30 min	18 min	15 min	1 hr	10 min
Standard	45 min	23 min	25 min	1 hr 30 min	12 min
High	55 min	28 min	40 min	2 hr	16 min
Function	**Ferment** 發酵	**Cake** 焗蛋糕	**Slow Cook** 慢煮	**Stir Fry** 爆炒	**Bake** 無水焗
Default Time	6 hr	50 min	1 hr	1 hr	1 hr
Adjustable Time	4-8 hr	40 min -1 hr	30 min -5 hr	Not Adjustable	50 min - 1 hr 20 min
Low	35°C	40 min	50°C	H1	50 min
Standard	40°C	50 min	60°C	H2	1 hr
High	45°C	1 hr	70°C	H3	1 hr 20 min

*Low/Standard/High do not refer to the pressure level. They are cooking levels that result in different textures to suit individual palates.

4. Default Cooking Level is set to Standard (except for Ferment, Slow Cook and Stir Fry functions). To adjust Cooking Level, tap Cooking Level Key repeatedly to cycle among Low/Standard/High, the corresponding indicator light will blink. After selection is complete, tap Start/Cancel Key to start cooking.

Note:

- If using the double-boil pot with the Double-Boil function, fill water to the 0.5 (Steam) level.
- When using Ferment function, tap Cooking Level Key and Display Panel will show “45c” meaning 45°C. User can tap Cooking Level Key repeatedly to cycle among 35c (35°C) / 40c (40°C) / 45c (45°C). User can also tap Cooking Level Key anytime during fermenting to adjust the temperature.
- When using Slow Cook function, tap Cooking Level Key and Display Panel will show “70c” meaning 70°C. User can tap Cooking Level Key repeatedly to cycle among 50c (50°C) / 60c (60°C) / 70c (70°C). User can also tap Cooking Level Key anytime during cooking to adjust the temperature.
- When using Stir Fry function, tap Cooking Level Key and Display Panel will show “H3” meaning high power. User can tap Cooking Level Key repeatedly to cycle among H1 (low power) / H2 (medium power) / H3 (high power). User can also tap Cooking Level Key anytime during cooking to adjust the power.
- During cooking, tap Start/Cancel Key to cancel cooking and return to standby state.
- During cooking, tap Pause Key to pause cooking, tap again to resume cooking.
- Pressurized time refers to the duration in which the pressure inside the pot is maintained at the selected function’s cooking pressure. When user first starts cooking, Display Panel shows [_ _] until pressure inside the pot builds up to the set pressure, then pressurized time will start to countdown, and Display Panel will show countdown time; total working time is pressure build-up time + pressurized time.

5. Tap Increase/Decrease keys to adjust cooking time, each tap increases/decreases cooking time by 1 minute (except for Ferment and Slow Cook functions where each tap increases/decreases cooking time by 30 minutes; Stir Fry function’s time is not adjustable). Tap and hold Increase Key or Decrease Key to speed up time adjustment.
6. When cooking is complete, the product will automatically enter Keep Warm state, and Keep Warm Indicator Light will light up constant.
7. To retrieve food from the cooker, tap and hold Start/Cancel Key to exit Keep Warm state, then press Exhaust Button on the lid handle to open the Pressure Relief Valve until the Float Valve sinks down.

Operating Instructions

WARNING!

When cooking liquid foods (such as congee or thick sauces), DO NOT immediately press the Exhaust Button to depressurize. User must wait until the Float Valve naturally sinks down before opening the lid, otherwise the food will spray out from the Pressure Relief Valve.

Timer Function

1. Connect power, product enters standby state, Display Panel shows “0000”.
2. Tap Function Key to select function, adjust parameters and time, then tap Timer Key to enter timer settings. Timer Indicator Light will blink, and default on-timer is set at 2 hours.
3. Tap Increase/Decrease keys to adjust timer duration. Each tap increases/decreases timer by 30 minutes. Adjustable time range is 2 hrs -24 hrs.
4. When setting is complete, tap Start/Cancel Key, Timer Indicator Light lights up constant, product starts to countdown. When countdown hits zero, the product will automatically start cooking.

Note:

- During timer countdown, if user wishes to cancel the timer, tap Start/Cancel Key and the product will return to standby state.
- Timer is not available for Cake and Stir Fry functions.

Keep Warm Function

1. Connect power, product enters standby state, Display Panel shows “0000”.
2. Tap Keep Warm Key to activate Keep Warm function. Keep Warm Indicator Light lights up constant.
3. Display Panel shows accumulated kept warm time (shown in increments of 1 minute; if accumulated time is less than 1 minute, display will show 00:00). Maximum keep warm time is 12 hours.
4. During Keep Warm time, if user wishes to cancel, tap Start/Cancel Key and product will return to standby state.

Cooking Precautions

- When cooking a large pot of rice, after cooking is complete, DO NOT immediately press Exhaust Button. It is recommended to let cooker automatically Keep Warm for a while before opening the lid.
- When cooking congee, soup or other foods with a lot of liquid, after cooking is complete, DO NOT immediately press Exhaust Button to manually depressurize. Hot liquid may spray out from the Pressure Relief Valve and cause scalding or other bodily harm.
- During auto keep warm state, if user does not need to further keep warm, it is recommended to unplug the power plug.
- During cooking, the lid may slightly rise up due to the pressure inside the pot. A tiny gap between the lid and the cooker body is a normal phenomenon and will not affect use.


Operating Instructions

- During cooking, intermittent or continuous steam discharge is a normal phenomenon.
- During cooking, pressure inside the cooker may cause sounds. This is a normal phenomenon.

Cleaning & Maintenance

⚠ WARNING!
Unplug the product from the power source, allow the product to depressurize and cool down completely before cleaning.

Cleaning the Float Valve
Remove the floater seal ring and the floater, wash thoroughly and allow to air dry completely, then reinstall properly. DO NOT disassemble the Float Valve unless for cleaning.

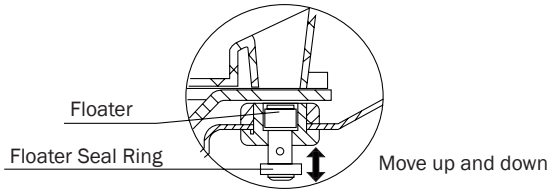

Cleaning the Pressure Relief Valve
Pull out the protective cover of the Pressure Relief Valve and the Pressure Relief Valve, rinse both thoroughly with water and allow to air dry completely, then reinstall properly back onto the lid.

Cleaning the Inner Pot
Take out the inner pot and wash with a soft sponge, then wipe dry with dry soft cloth. DO NOT wash the inner pot with steel scourer or abrasive tools to avoid damaging the nonstick coating.

Cleaning the Heating Plate
If rice or other debris is stuck on the heating plate, gently pick them off and wipe heating plate with a soft dry cloth.

Cleaning the Exterior & Lid
Wipe gently with a wrung-out moist cloth. DO NOT use gasoline, chemical solvents or abrasive cleaners. DO NOT immerse the main unit or directly rinse with water or other liquids to avoid damaging the product.

Note:
After each cleaning, it is essential to check that the float valve, seal ring, anti-blockage nut, pressure relief valve and other components are properly re-installed, to avoid affecting use or causing a safety hazard.

Troubleshooting

⚠ WARNING!

- DO NOT repair or disassemble this product by yourself. Before maintenance work, turn off the product and unplug product from the power source.
- If user encounters problems not mentioned below or if problem persists, please contact German Pool Customer Service & Repair Centre for assistance. This product must be repaired by German Pool Customer Service & Repair Centre only. If user entrusts personnel not designated by German Pool, or if user performs repair work on their own, there may be a risk of personal injury or property loss.

Problem	Possible Cause	Solution
Lid cannot close	Seal ring not installed properly	Reinstall seal ring properly
	Float valve is stuck	Use a chopstick to push down the float valve
Lid cannot open	Float valve has not sunk after pressure is released	Use a chopstick to push down the float valve
	There is pressure inside the pot	Depressurize according to Operation Instructions
Lid is leaking air	Seal ring has not been installed or is installed incorrectly	Reinstall seal ring properly
	There is food debris on the seal ring	Clean seal ring
	Seal ring damaged	Contact German Pool Customer Service & Repair Centre to replace seal ring
	Lid is not closed properly	Close the lid properly
Float valve is leaking air	There is food debris on the floater seal ring	Clean floater seal ring
	Floater seal ring damaged	Contact German Pool Customer Service & Repair Centre to replace floater seal ring
Excessive steam release from pressure relief valve	Pressure relief valve is not installed properly	Reinstall pressure relief valve properly
	Pressure control system malfunction	Contact German Pool Customer Service & Repair Centre
Display panel shows error code “E1”	Temperature sensor disconnected	
Display panel shows error code “E2”	Temperature sensor short circuit	
Display panel shows error code “E3”	Internal temperature is too high	Power off and allow product to cool down; if problem persists, contact German Pool Customer Service & Repair Centre
Display panel shows error code “E4”	Pressure switch malfunction	Contact German Pool Customer Service & Repair Centre
Display panel shows error code “E5”	Pressure adjustment knob does not match the current operating mode	Rotate the pressure adjustment knob to the correct position
Display panel shows error code “E6”	Product operating pressure does not match pressure adjustment knob	

Technical Specification

Model	PRC-410
Voltage / Frequency	220-240V~ 50-60Hz
Power	1000W
Capacity	4L
Working Pressure	0-70kPa
Product Dimensions	(H) 285 (W) 270 (D) 280 mm
Net Weight	5.8kg

- Specification is subject to change without prior notice.
- If there is any inconsistency or ambiguity between the English version and the Chinese version, the Chinese version shall prevail.
- Refer to www.germanpool.com for the most update version of the user manual.

目錄

警告及注意事項 18

產品結構 20

使用説明 21

清潔及保養 28

故障檢修 29

技術規格 30

保用條款 31

警告及注意事項

⚠ 警告！

使用本產品前，請仔細閱讀所有說明。

- 本產品只限家居室內日常使用，如產品作任何商業、工業、出租或其他用途，保用證即告失效。
- 請勿讓兒童或身體有殘障、精神不健全及對本產品缺乏經驗或知識的人士單獨使用本產品；如需使用，必須要在負責任的成年人監管下方可使用。
- 應照顧好兒童，確保他們不會玩耍本產品。
- 無成年人監管下，勿讓兒童清潔及維護本產品。
- 使用前，請先檢查所有電壓是否與本產品標籤上的電壓相符。
- 如果電源線損壞，為免發生意外，電源線必須由廠方、廠方指定的維修中心或同等合格的技術人員進行更換。
- 清潔或檢查本產品前，必須先關機及拔掉插頭。
- 請聯繫德國寶授權的技術人員進行維修或保養本產品。

⚠ 警告！


- 為避免因不當使用而導致受傷，使用本產品前必須仔細閱讀本說明書。必須按照本說明書中的指示及產品用途正確使用本產品。
- 「安全注意事項」章節包含重要資訊，可幫助您安全及正確地使用本產品，並防止對您或他人造成傷害或財物損失。


1. 使用前，必須將本產品放置於穩固、平坦及堅硬的表面上。
2. 本產品額定輸入電壓為220-240V~，使用前必須確認電源符合要求，並確保插座已妥善接地，以防觸電。
3. 嚴禁將電源線、插頭或本產品浸入水或其他液體中，以免觸電。
4. 嚴禁讓電源線懸掛於桌邊、檯面邊緣，或接觸高溫表面。
5. 嚴禁損壞、過度彎曲、拉扯、扭曲、夾壓電源線，或在其上放置重物。
6. 若電源線損壞，必須使用德國寶客戶服務及維修中心提供的專用電源線或組件進行更換。
7. 如需維修，請聯絡德國寶客戶服務及維修中心，嚴禁自行拆卸本產品。
8. 清潔前必須拔除電源插頭，並確保電源插座完全乾燥後方可再次使用。
9. 必須定期檢查蒸氣出口，確保沒有堵塞。
10. 打開鍋蓋前，必須確保鍋內壓力已完全釋放。
11. 若浮子閥尚未下降，嚴禁強行打開鍋蓋。
12. 產品運作期間，嚴禁打開鍋蓋、將手或面部靠近蒸氣出口，亦嚴禁移動或搖晃本產品，以免燙傷或影響烹調效果。
13. 嚴禁在鍋蓋上覆蓋濕布或毛巾，以免造成變形或變色。
14. 使用期間及使用後，嚴禁觸碰內鍋，以免燙傷。
15. 嚴禁直接在內鍋內洗米，應於其他容器清洗食材，以免損壞不黏塗層。
16. 將內鍋放入機身後，請輕輕左右旋轉，確保內鍋與發熱盤及溫度感應器充分接觸。
17. 嚴禁將內鍋直接置於明火上加熱。
18. 若內鍋出現變形，嚴禁繼續使用，請聯絡德國寶客戶服務及維修中心更換。

警告及注意事項


19. 使用前必須確保內鍋底部及發熱盤清潔，且無食物殘渣，以免造成過熱或加熱不均。
20. 若內鍋未正確放置、空鍋或未放入食材及水，嚴禁啟動本產品。
21. 移動或維修本產品前，必須先拔除電源插頭，並待產品完全冷卻。
22. 使用後，如產品未處於保溫模式，必須及時拔除電源插頭。嚴禁直接拉扯電源線。
23. 必須定期清潔鍋蓋、密封圈、浮子閥及排氣閥，以防產生異味。
24. 僅可使用本產品原裝內鍋，使用不合適的鍋具可能導致故障。
25. 產品運作期間，嚴禁打開鍋蓋，以免食物未熟或造成燙傷。
26. 密封圈為重要安全部件，如有損壞，必須立即停止使用，請聯絡德國寶客戶服務及維修中心更換原廠配件。
27. 嚴禁超過內鍋所標示的最高食材及水位線。
28. 在兒童附近使用本產品時，必須特別小心，嚴禁在無人看管情況下運作。
29. 必須將本產品放置於兒童接觸不到的位置。身體、感官或精神能力較弱人士，必須在監督下方可使用本產品。
30. 在產品運作或排氣期間，嚴禁拆除排氣閥或按壓浮子閥，以免被高溫蒸氣燙傷。
31. 本產品僅供家庭使用，嚴禁用於本説明書所述用途以外之用途。
32. 開箱後必須立即妥善棄置所有包裝材料，以免兒童誤吞造成窒息危險。
33. 本產品嚴禁配合外置定時器或獨立遙控系統使用。
34. 烹調完成後，必須待壓力完全釋放及浮子閥下降後方可打開鍋蓋，嚴禁強行開蓋。
35. 本產品僅適用於海拔2000米以下地區使用。

產品結構

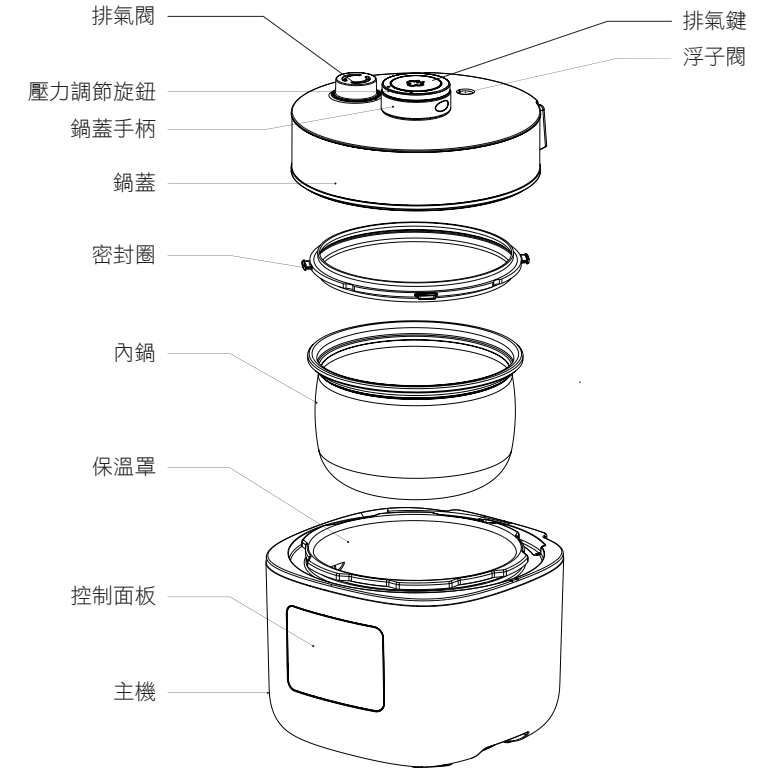

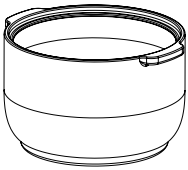

燉盅



燉盅手柄



量杯



飯勺





電源線

使用説明

烹調前準備工作

1. 打開鍋蓋：打開鍋蓋前，必須確認浮子閥已完全落下，表示鍋內無壓力。緊握鍋蓋手柄，順時針旋轉鍋蓋至鍋蓋的三角圖案對準鍋身的開鎖圖案，然後向上提起鍋蓋即可打開。

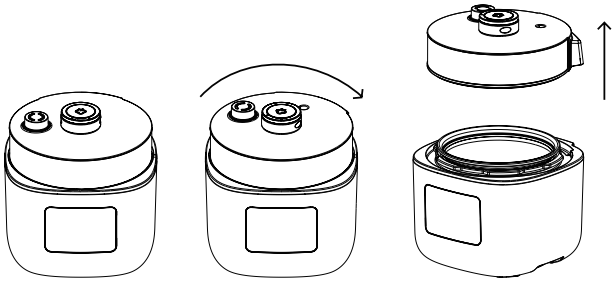


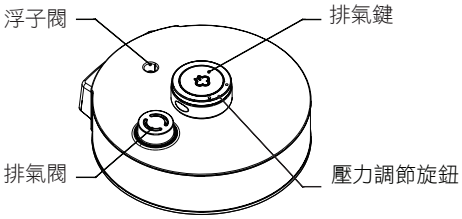

注意：

- 當浮子閥落下時，表示鍋內無壓力，可以打開鍋蓋；當浮子閥升起，表示鍋內有壓力，鍋蓋會自動上鎖，此時不能打開鍋蓋。
- 如需手動排氣，請按下「排氣鍵」釋放蒸氣。
- 蒸氣會從排氣閥排出，必須保持手部及面部遠離蒸氣出口，以免燙傷。
- 若浮子閥未有定期清潔，或烹調黏稠食物後有殘留物堵塞，可能導致浮子閥卡住而無法自動下降，令鍋蓋無法打開；此情況下，可使用筷子等細長物件，輕輕按壓浮子閥開口位置，直至浮子閥下降。
- 建議每次使用本產品後清潔浮子閥，以防堵塞，確保壓力正常釋放及鍋蓋可安全打開。

2. 取出內鍋，參照內鍋上的刻度放入食材及注水。注意食物和水均嚴禁超過最高刻度或低於最低刻度。

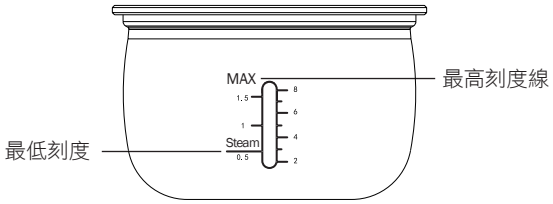

注意：


- 嚴禁用內鍋直接清洗食材，以免刮傷內鍋的不黏塗層。
- 烹調粥品時，必須確保水位不可超過內鍋標示的最高刻度線。
- 如使用燉盅及隔水燉模式，請加水至0.5(Steam)刻度。
- 煮飯時米和水的比例建議為1：1；煮粥時米和水的比例建議為1：7-8，烹調時可根據個人口感喜好或不同米質，增加或減少水量。


3. 將內鍋放入主機，放入前先把內鍋底部及發熱盤表面抹乾淨。放入後，左右輕輕旋轉內鍋，保持內鍋與發熱盤接觸良好。
4. 關上鍋蓋：握緊鍋蓋手柄，逆時針方向旋轉鍋蓋至鎖緊位置，並聽到「咔嚓」扣合聲；關上鍋蓋前必須檢查密封圈是否已正確安裝在鍋蓋內。

注意：

密封圈可拆卸清洗，但使用前必須重新正確安裝。

5. 裝上排氣閥，檢查排氣鍵是否處於彈起狀態，否則將排氣鍵按起來至最高位置，並檢查浮子是否落下（未加熱工作前浮子處於落下狀態），如浮子閥有堵塞必須清潔乾淨再使用，並時刻保持閥孔暢通。

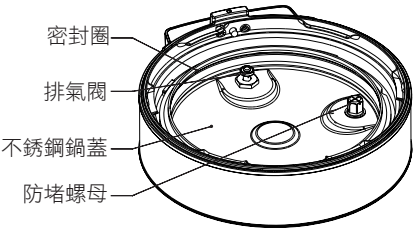

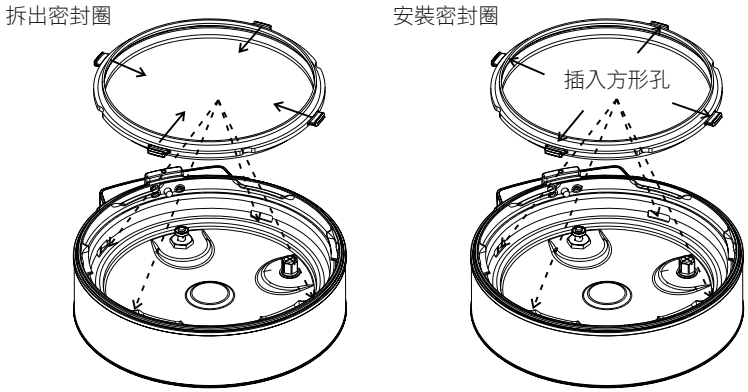


6. 接通電源：將電源線一端插入壓力鍋底部的插座上，另一端插到電源插座上，通電後產品發出蜂鳴器提示聲一聲，顯示屏顯示「0000」進入待機狀態。



浮子落下狀態

使用説明

控制面板

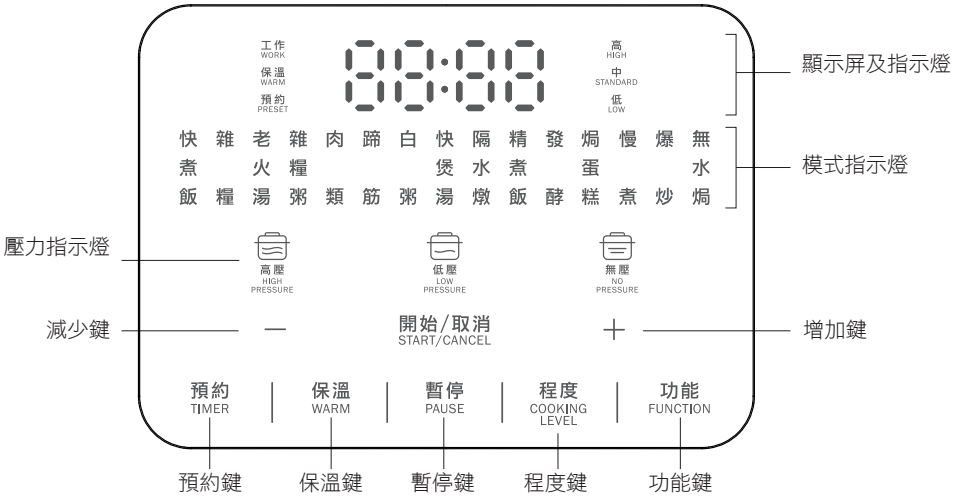

1. 接通電源進入待機狀態後，顯示屏顯示「0000」。

注意：
在待機狀態下，如30秒內無任何操作，產品自動進入睡眠模式，顯示屏顯示「----」，按任意鍵可返回待機狀態。

2. 擰動壓力調節旋鈕可選擇高壓/低壓模式或無壓模式。
3. 按「功能鍵」選擇所需功能，相應指示燈閃爍，在高壓/低壓模式下，顯示屏顯示預設保壓時間；在無壓模式下，顯示屏顯示預設烹調時間。


注意：
因應高壓/低壓模式或無壓模式，可選擇的功能不同：
高壓/低壓模式可選擇快煮飯、雜糧、老火湯、雜糧粥、肉類、蹄筋、白粥、快煲湯、隔水燉。
無壓模式可選擇精煮飯、發酵、焗蛋糕、慢煮、爆炒、無水焗。

使用説明

⚠ 警告！

・無壓模式為持續排氣狀態，使用高壓/低壓模式的功能時，嚴禁擰動壓力調校旋鈕至無壓模式，以防食物溢出及燙傷危險。

・若鍋內仍有壓力，因錯誤操作將壓力調校旋鈕擰動至無壓模式至導致食物溢出，必須立即將壓力調校旋鈕擰動至高壓/低壓模式，以停止持續排氣並防止食物繼續溢出。

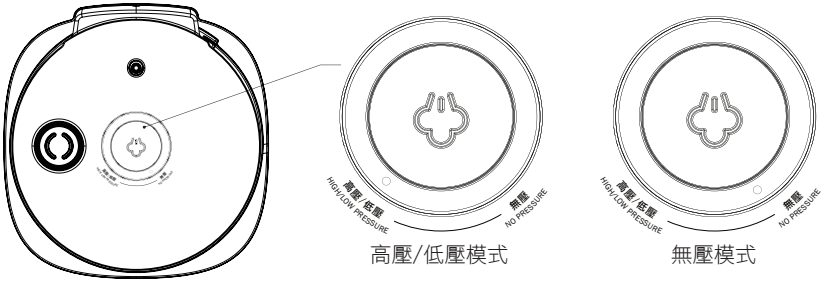

高壓/低壓模式　　無壓模式

功能	快煮飯	雜糧	老火湯	雜糧粥	肉類
預設時間	10分鐘	45分鐘	30分鐘	40分鐘	45分鐘
可調時間	8-12分鐘	30分鐘-1小時	20-50分鐘	35-50分鐘	30-55分鐘
低	8分鐘	30分鐘	20分鐘	35分鐘	30分鐘
中	10分鐘	45分鐘	30分鐘	40分鐘	45分鐘
高	12分鐘	1小時	50分鐘	50分鐘	55分鐘
功能	蹄筋	白粥	快煲湯	隔水燉	精煮飯
預設時間	45分鐘	23分鐘	25分鐘	1小時30分鐘	12分鐘
可調時間	30-55分鐘	18-28分鐘	15-40分鐘	1-2小時	10-16分鐘
低	30分鐘	18分鐘	15分鐘	1小時	10分鐘
中	45分鐘	23分鐘	25分鐘	1小時30分鐘	12分鐘
高	55分鐘	28分鐘	40分鐘	2小時	16分鐘
功能	發酵	焗蛋糕	慢煮	爆炒	無水焗
預設時間	6小時	50分鐘	1小時	1小時	1小時
可調時間	4-8小時	40分鐘-1小時	30分鐘-5小時	不可調	50分鐘-1小時20分鐘
低	35°C	40分鐘	50°C	H1	50分鐘
中	40°C	50分鐘	60°C	H2	1小時
高	45°C	1小時	70°C	H3	1小時20分鐘

*低、中、高並非壓力程度，而是因應個人口感喜好的烹調程度

4. 預設烹調程度為「中」（發酵、慢煮、爆炒功能除外），如需調整，重複按「烹調程度鍵」可循環選擇低 / 中 / 高，相應指示燈閃爍，完成後按「開始/取消鍵」開始烹調。

注意：

- 如使用燉盅及隔水燉模式，請加水至0.5(Steam)刻度。
- 選擇發酵功能時，如按「程度鍵」，顯示屏顯示「45c」，代表45℃。按「程度鍵」可循環選擇35c（35℃） / 40c（40℃） / 45c（45℃），在發酵期間可隨時按「程度鍵」調整溫度。
- 選擇慢煮功能時，如按「程度鍵」，顯示屏顯示「70c」，代表70℃。按「程度鍵」可循環選擇50c（50℃） / 60c（60℃） / 70c（70℃），在烹調期間可隨時按「程度鍵」調整溫度。
- 選擇爆炒功能時，如按「程度鍵」，顯示屏顯示H3，代表高火力。按「程度鍵」可循環選擇H1（低火力） / H2（中火力） / H3（高火力），在烹調期間可隨時按「程度鍵」調整火力。
- 在烹調期間按「開始/取消鍵」可取消烹調並返回待機狀態。
- 在烹調期間按「暫停鍵」可暫停烹調，再按一次繼續烹調。
- 保壓時間表示鍋內壓力維持時間，當烹調開始後，顯示屏顯示 [_ _]，直至鍋內加熱至壓力達到預設水平，保壓時間開始計時，顯示屏顯示倒數時間；總工作時間為：加壓時間+保壓時間。

5. 按「增加鍵」或「減少鍵」可調整烹調時間，每按一次以1分鐘遞增或遞減（除發酵及慢煮功能以30分鐘遞增或遞減，爆炒功能時間不可調），長按「增加鍵」或「減少鍵」可快速調整烹調時間。
6. 烹調完成後，產品自動進入保溫狀態，保溫指示燈常亮。
7. 如需取用食物，長按「開始/取消鍵」退出保溫狀態，按下鍋蓋手柄上的排氣鍵讓排氣閥排氣，直至浮子落下。

⚠ 警告！

如烹調流質食物（如粥類、黏性液體等），烹調完成後嚴禁馬上排氣，須等待冷卻讓浮子自然落下，否則食物會在排氣閥噴出。

預約烹調

1. 接通電源進入待機狀態後，顯示屏顯示「0000」。
2. 按「功能鍵」選擇所需功能，設置程度及時間後，按「預約鍵」進入預約設置，預約指示燈閃爍，預設為2小時。
3. 按「增加鍵」或「減少鍵」調整預約時間，每按1次以30分鐘遞增或遞減，可調時間為2小時至24小時。
4. 設置完成後，按「開始/取消鍵」，預約指示燈常亮，產品進入倒數狀態，並在倒數完畢後自動烹調。

注意：

· 在預約倒數期間如需取消，按「開始/取消鍵」返回待機狀態。
· 選擇焗蛋糕及爆炒功能時，無法預約。

使用説明

保溫功能

1. 接通電源進入待機狀態後，顯示屏顯示「0000」。
2. 按「保溫鍵」啟動保溫功能，保溫指示燈常亮。
3. 顯示屏顯示累計保溫時間（以分鐘計算，未滿1分鐘顯示00:00），最長保溫時間為12小時。
4. 保溫期間如需取消，按「開始/取消鍵」返回待機狀態。


其他烹調注意事項

- 大量煮飯時，烹調結束後請勿立即按下「排氣鍵」，建議先進入自動保溫狀態一段時間，再打開上蓋。
- 烹調粥類、湯類或其他高液體含量食物時，嚴禁在烹調結束後立即手動排氣。高溫液體可能會從排氣閥噴出，造成燙傷或其他人身傷害。
- 進入自動保溫狀態後，如不需持續加熱，建議拔除電源插頭。
- 烹調過程中，鍋蓋可能會因內部壓力微微抬起，鍋蓋與鍋體之間出現小縫隙屬於正常現象，不影響使用。
- 烹調過程中出現間歇或持續蒸氣排出屬於正常現象。
- 烹調時若聽到聲響屬於正常現象，可能因為鍋內壓力所致。

清潔及保養

⚠ 警告！
清洗本產品前必須先拔除電源插頭，完全排壓並待機身冷卻後再清洗。

清潔浮子閥
拆下浮子閥上的小膠圈，將浮子閥和小膠圈清洗乾淨及晾乾後，按照原來的安裝方式安裝到位；如非清潔，嚴禁拆開浮子閥。

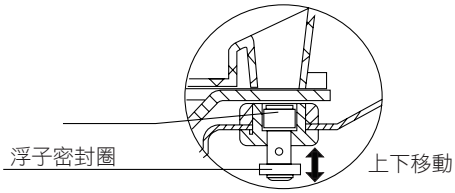

清潔排氣閥
把排氣閥外的保護蓋及排氣閥向上拔出，用水清洗乾淨及晾乾後，正確安裝回鍋蓋上。

清潔內膽
取出內膽並用柔軟的海綿清洗，完成後用乾軟布將水擦乾；嚴禁使用鋼絲球或其他磨蝕性工具清潔，以避免損傷不黏塗層。

清潔電熱盤
如有飯粒或其他雜物附在電熱盤上，必須先將雜物去除，並用乾軟布擦乾。

清潔外殼及上蓋
用擰乾水的濕布輕輕擦拭即可，嚴禁使用汽油、化學溶劑或研磨性清潔劑，嚴禁將本產品放入水沖洗、浸入水或其它液體中，以免產品損壞。

注意：
每次清潔完畢後，必須檢查浮子閥、密封圈、防堵螺母、排氣閥等部件是否安裝到位，避免影響使用或發生危險。

故障檢修

⚠ 警告！

- 嚴禁自行維修或拆卸本產品。維修前必須將產品關機並拔除電源插頭。
- 如下表未提及問題，請聯絡德國寶客戶服務及維修中心。本產品須由德國寶客戶服務及維修中心進行維修，若委託非德國寶指定人員或用戶自行進行維修，可能存在人身傷害或財產損失風險。

故障情況	可能原因	解決方法
鍋蓋難以合上	密封圈未放置好	重新安裝密封圈
	浮子卡住推桿	用筷子壓下浮子
鍋蓋難以打開	排氣後浮子未落下	用筷子壓下浮子
	鍋內有壓力	按照操作步驟排空壓力
鍋蓋漏氣	未放置密封圈或安裝不正確	重新安裝密封圈
	密封圈沾有食物殘渣	清潔密封圈
	密封圈破損	聯絡德國寶客戶服務及維修中心更換密封圈
	未合好鍋蓋	正確合上鍋蓋
浮子閥漏氣	浮子閥密封圈沾有食物殘渣	清潔浮子閥密封圈
	浮子閥密封圈破損	聯絡德國寶客戶服務及維修中心更換浮子閥密封圈
排氣閥排氣強烈	排氣閥放置不正確	正確安裝好排氣閥
	產品壓力控制失靈	聯絡德國寶客戶服務及維修中心
顯示屏顯示錯誤代碼「E1」	溫度傳感器失靈	
顯示屏顯示錯誤代碼「E2」	溫度傳感器短路	
顯示屏顯示錯誤代碼「E3」	鍋內溫度過高	待產品降溫再使用；如問題持續，聯絡德國寶客戶服務及維修中心
顯示屏顯示錯誤代碼「E4」	壓力控制失靈	聯絡德國寶客戶服務及維修中心
顯示屏顯示錯誤代碼「E5」	壓力調節旋鈕與產品運行壓力不相符	調整壓力調節旋鈕至正確位置
顯示屏顯示錯誤代碼「E6」	產品運行壓力與壓力調節旋鈕不相符	

技術規格

型號	PRC-410
電壓 / 頻率	220-240V~ 50-60Hz
功率	1000W
容量	4L
工作壓力	0-70kPa
產品尺寸	(H) 285 (W) 270 (D) 280 mm
淨重	5.8kg

- 產品規格及設計如有變更，恕不另行通知。
- 中英文版本如有出入，一概以中文版為準。
- 本產品使用説明書以www.germanpool.com網上版為最新版本。

保用条款

此保用提供德國寶產品之機件在正常使用下壹年保用(自購買日起計算)。

*貴戶須在購機十天內，以下列其中一種方式向本公司登記資料，保用手續方正式生效:

1)填妥德國寶VIP手機應用程式保用登記表(掃描右方二維碼)

2)填妥本公司網頁保用登記表
www.germanpool.com/warranty

3)填妥保用卡郵寄至本公司

Warranty Terms & Conditions

Under normal operations, the product will gurantee a 1-year full warranty provided by German Pool (effective from the date of purchase).

* This warranty is not valid until customer registration information is received by our Service Centre within 10 days of purchase via one of the following means:

1) Visit our VIP App and register online: (Scan the QR Code on the right)

2) Visit our website and register online: www.germanpool.com/warranty

3) Complete the attached Warranty Card and mail it back to our Customer Service Centre.

另請填妥以下表格並與正本發票一併保存，以便維修時核對資料。用戶提供之所有資料必須正確無誤，否則免費保用將會無效。
Please fill out the form below. This information and the original purchase invoice will be required for any repairs. Warranty will be invalidated if information provided is found to be inaccurate.

型號 Model No. : PRC-410

機身號碼 Serial No. : _____

發票號碼 Invoice No. : _____

購買商號 Purchased From : _____

購買日期 Purchase Date : _____

1. 未能出示購買發票正本者，將不獲免費維修服務。
2. 用戶應依照説明書的指示操作。本保用並不包括:
   - 上門安裝、檢驗、維修或更換零件之人工以及一切運輸費用;
   - 因天然與人為意外造成的損壞(包括運輸及其他);
   - 電源接合不當、不依説明書而錯誤或疏忽使用本機所引致之損壞。
3. 於下列情況下，用戶之保用資格將被取消:
   - 購買發票有任何非認可之刪改;
   - 產品被用作商業或工業用途;
   - 產品經非認可之技術人員改裝或加裝任何配件;
   - 機身編號被擅自塗改、破壞或刪除。
4. 總代理有權選擇維修或更換配件或其損壞部份。
5. 產品一經被轉讓，其保用即被視作無效。

1. Customer who fails to present original purchase invoice will not be eligible for free warranty service.
2. Customer should always follow the operating instructions. This warranty does not apply to:
   - labour costs for on-site installation, check-up, repair, replacement of parts and other transportation costs;
   - damages caused by accidents of any kind (including material transfer and others);
   - operating failures resulting from applying incorrect voltage,- improper usage, and unauthorized installations or repairs.
3. This warranty is invalid if:
   - the purchase invoice is modified by an unauthorized party;
   - the product is used for any commercial or industrial purposes;
   - the product is repaired or modified by unauthorized personnel, or unauthorized parts are installed;
   - the serial number is modified, damaged or removed from the product.
4. German Pool will, at its discretion, repair or replace any defective part.
5. This warranty will be void if there is any transfer of ownership from the original purchaser.

客戶服務及維修中心

香港

九龍大業街59號
三湘九龍灣貨運中心地下B室
電話：+852 2773 2888
傳真：+852 2356 9798
電郵：repairs@germanpool.com

澳門

澳門青洲大馬路(青洲新路)
515號美居廣場第二期1樓A座
電話：+853 2875 2699
傳真：+853 2875 2661

Customer Service & Repair Centre

Hong Kong

Unit B, G/F, Sunshine Kowloon Bay Cargo Centre, 59 Tai Yip Street, Kowloon, Hong Kong
Tel : +852 2773 2888
Fax : +852 2356 9798
Email : repairs@germanpool.com

Macau

A, 1 Andar, Mei Kui Kuong Cheong Fase 2, No.515 Avenida Do Conselheiro Borja Macau
Tel : +853 2875 2699
Fax : +853 2875 2661

此保用只適用於香港及澳門 | This warranty is valid only in Hong Kong and Macau

GERMAN
POOL

German Pool (Hong Kong) Limited

香港《S MARK》安全認證 | 中國廚櫃/家電行業十大影響力品牌 | CEO非凡品牌大賞 | 香港優質商號 | 香港工商業獎 | 2007 最具潛質創建品牌企業獎 | 香港中小企業最佳拍檔大獎 | 香港消費者推崇品牌 | 香港《Q嘩》優質服務證書 | 香港名牌十年成就獎 HONG KONG TOP BRAND TEN YEAR ACHIEVEMENTAWARD

© All rights reserved. Copying, reproducing or using the contents of this manual is not allowed without prior authorization from German Pool, violators will be prosecuted.